SafeStow4® - Shipping Guide



Rhino's SafeStow4® is available in two sizes with a variety of options:

TOP LEVEL CODES

RAS16-SK21 - 2.2m SafeStow4 (One Ladder) RAS18-SK21 - 3.1m SafeStow4 (One Ladder)


RAS16-SK22 - 2.2m SafeStow4 (Two Ladders) RAS18-SK22 - 3.1m SafeStow4 (Two Ladders)

RAS16-SK23 - 2.2m SafeStow4 (Extra Wide Ladder) RAS18-SK23 - 3.1m SafeStow4 (Extra Wide Ladder)

RAS16-SK25 - 2.2m SafeStow4 (Double Cat Ladder) RAS18-SK25 - 3.1m Safestow4 (Double Cat Ladder)

FLATPACK BOXES

All **SafeStow4**® orders consist of four boxes*; three of which are sub-assemblies for the main rail, chassis and main roller, as well as a specific fitting kit for each SafeStow4 option (one ladder, two ladder, extra wide ladder or double CAT ladder).

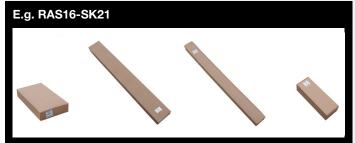



BOX WEIGHTS AND DIMENSIONS

RAS16 - 2.2m SafeStow4 Sub-Assemblies







RAS18 - 3.1m SafeStow4 Sub-Assemblies








Shipping Guide - $SafeStow4^{R}$




FITTING KITS

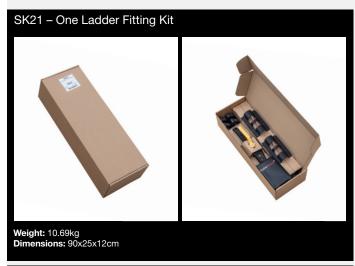





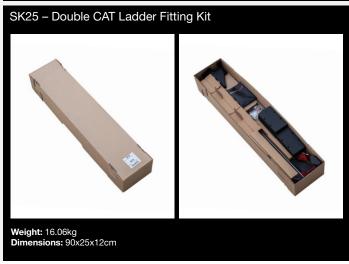

ASSEMBLY, FITTING AND USER INSTRUCTIONS

Sub-Assembly Instructions

Instructions for combining all three sub-assemblies are supplied inside RAS16S1 and RAS18S1.



Fitting Kit Instructions

Instructions for fitting the completed SafeStow4 to your van are found in each fitting kit.



User Manual

Every SafeStow4 fitting kit also comes with a user manual in a protective wallet which clearly details:

- How to adjust the gas ram settings of the SafeStow4 to suit the weight of the ladders in use and your vehicle
- The beltstow system
- Locking options
- Correct maintenance procedures
- Safe usage instructions
- Do's and don't's

