






ID2PR/FL KammBar

Instructions


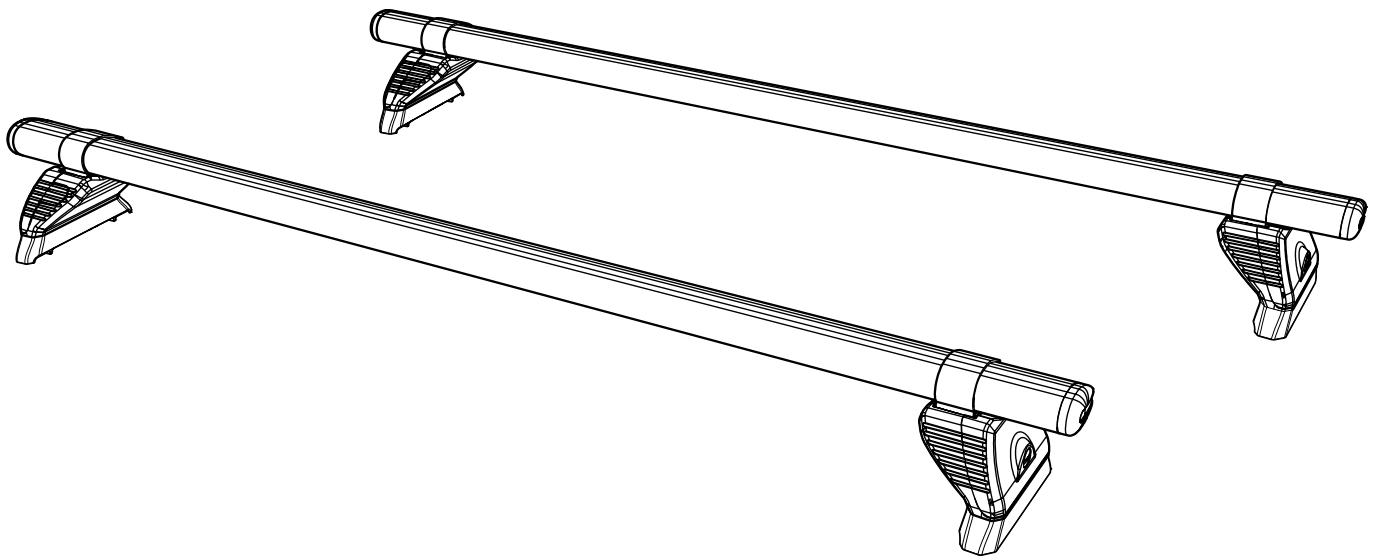


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

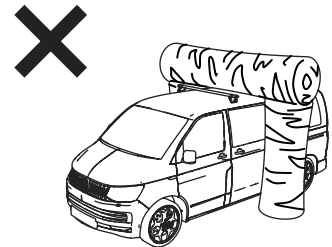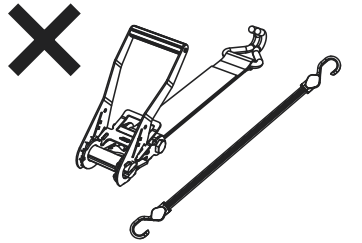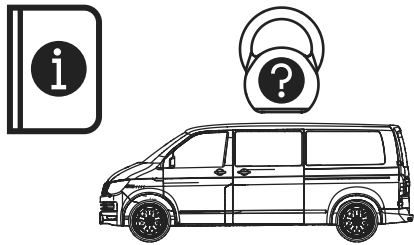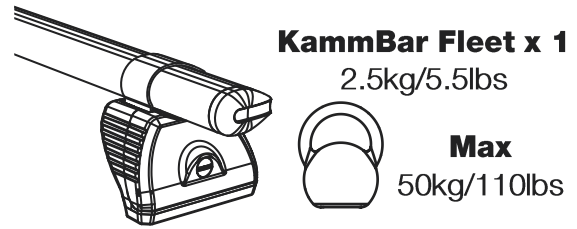




KammBar Pro

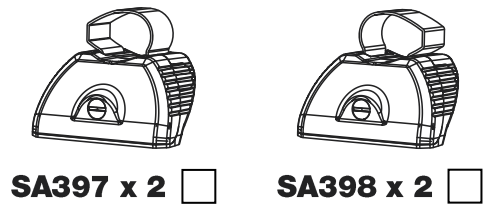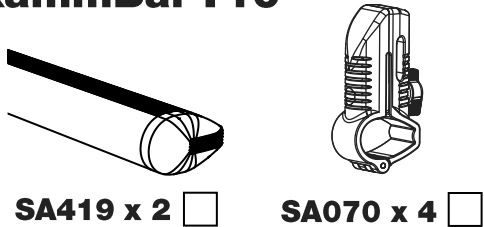


KammBar Fleet

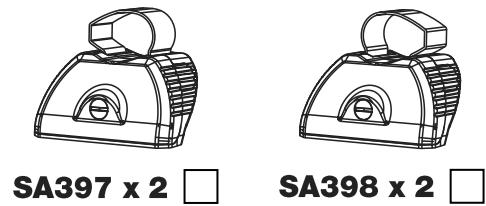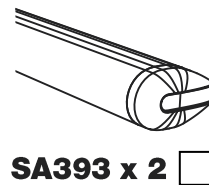


Fitting Kit

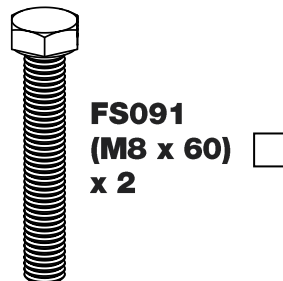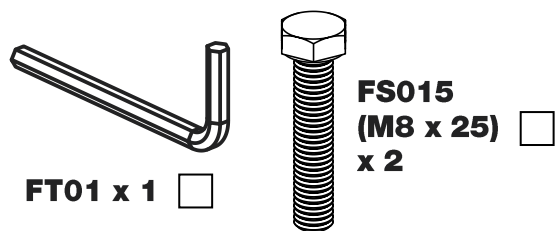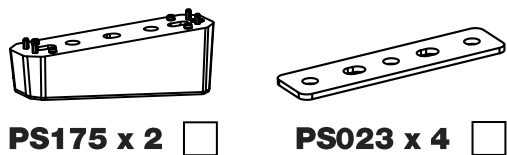


1.

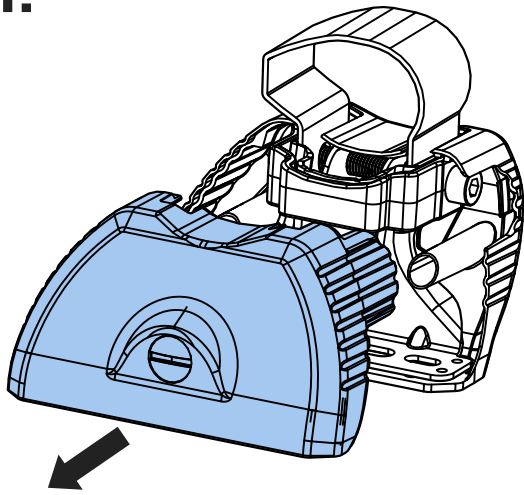


2.

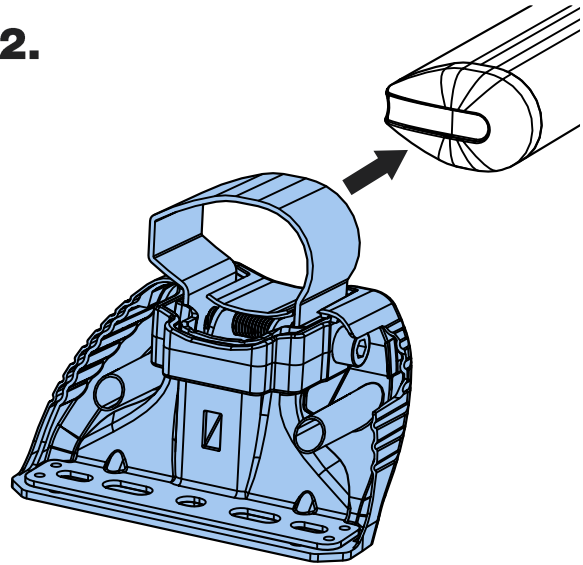



3.



SA397
PS175

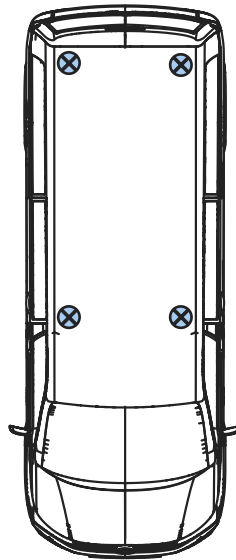


SA398
PS175




SA397


SA398




4.

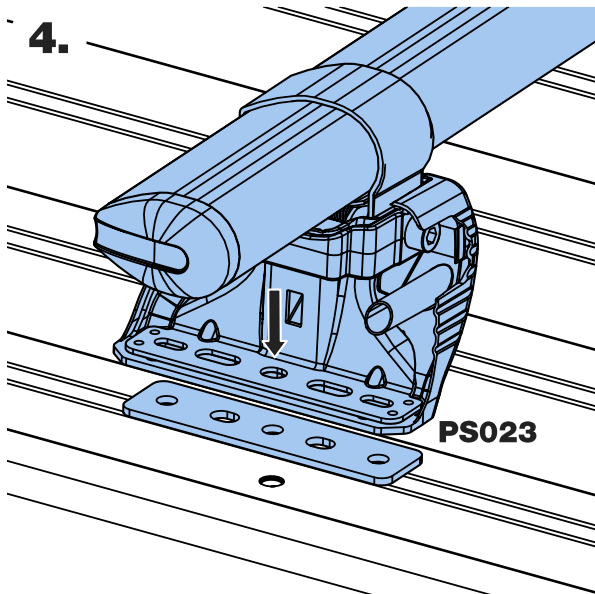


5.

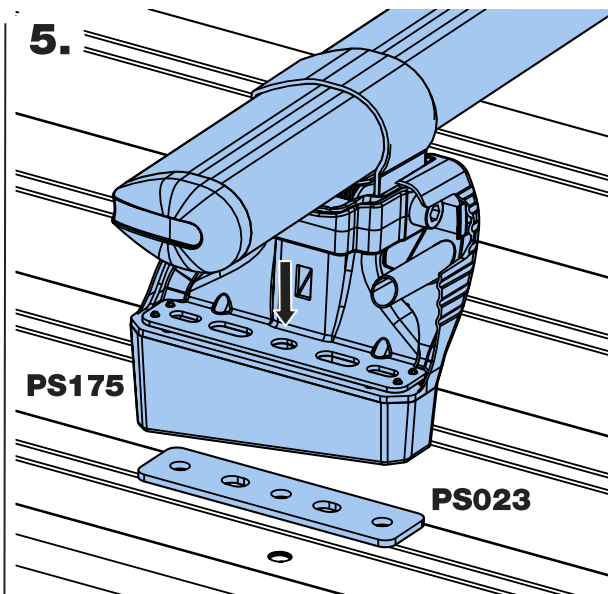


6.

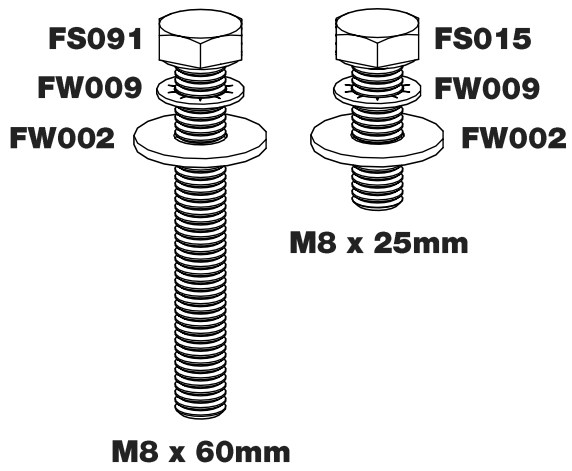


7.

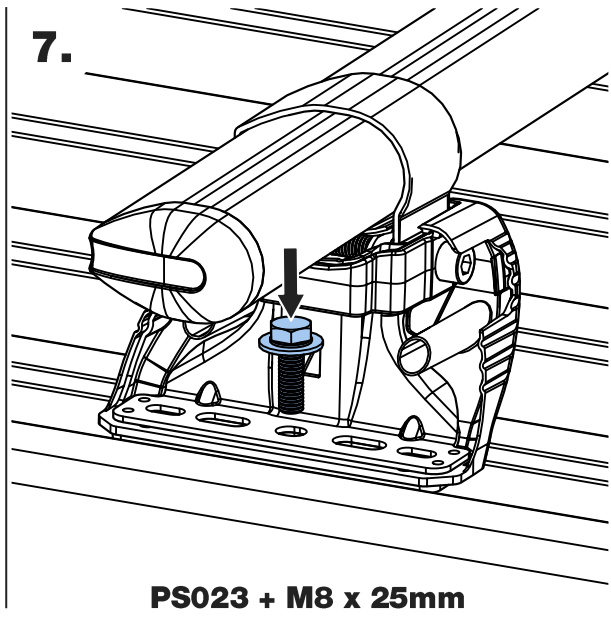


8.

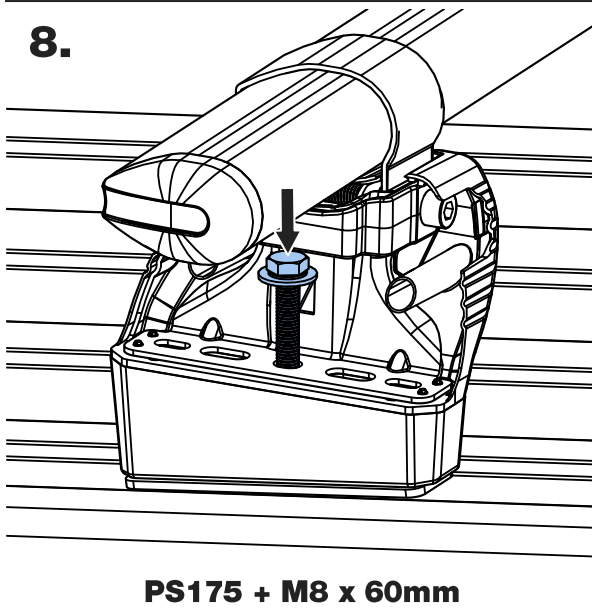


9.

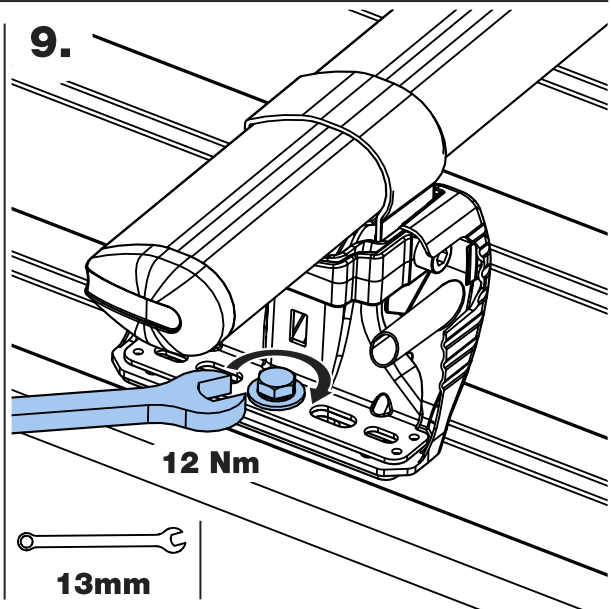


10.

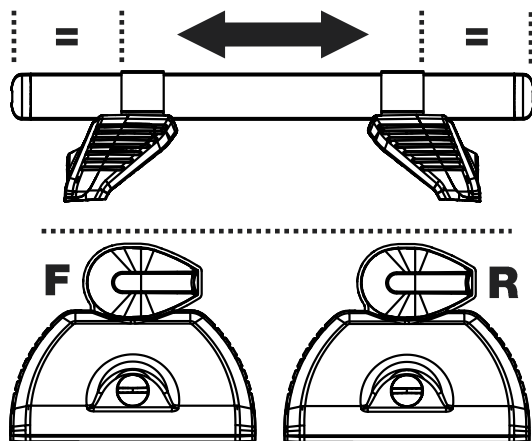

11.

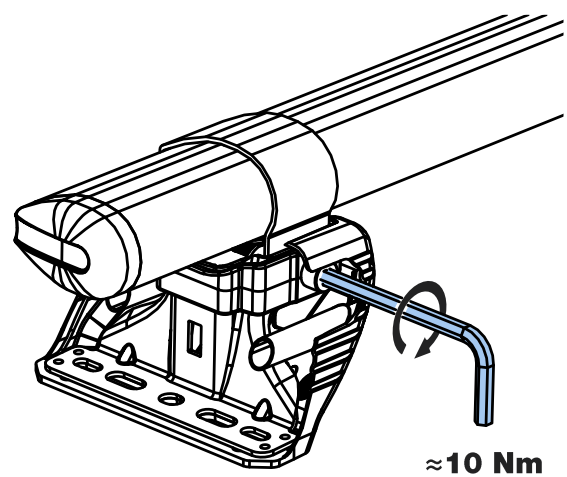

12.

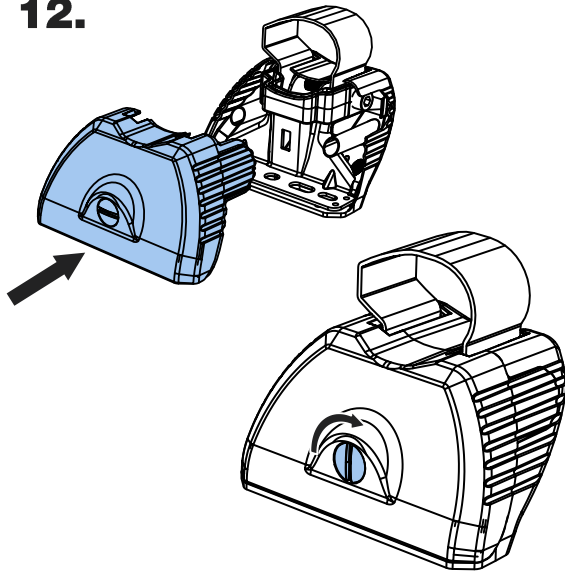

13.

