

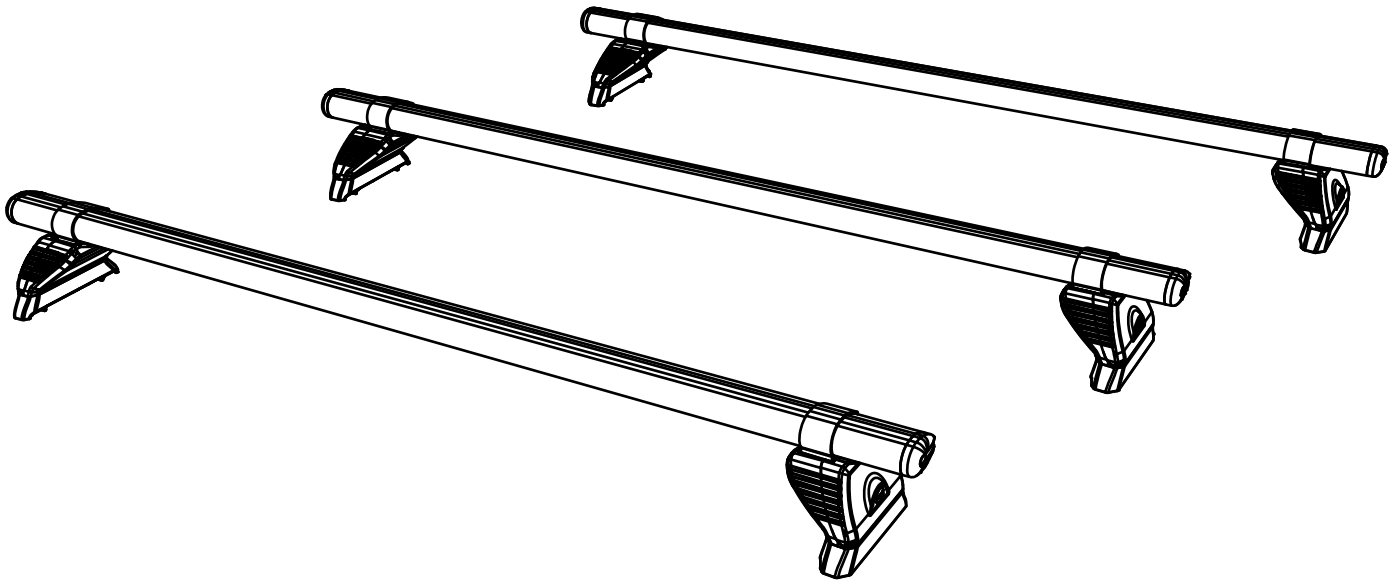
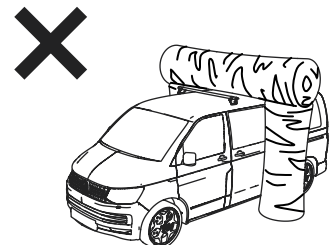


# TB3PR/FL KammBar Instructions

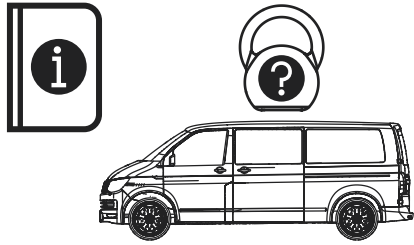


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

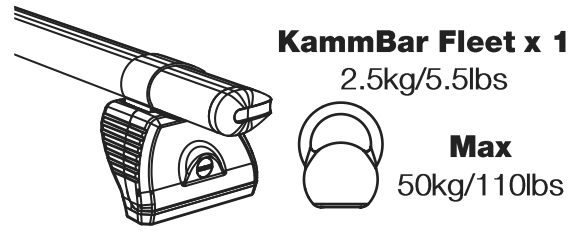


### KammBar Pro

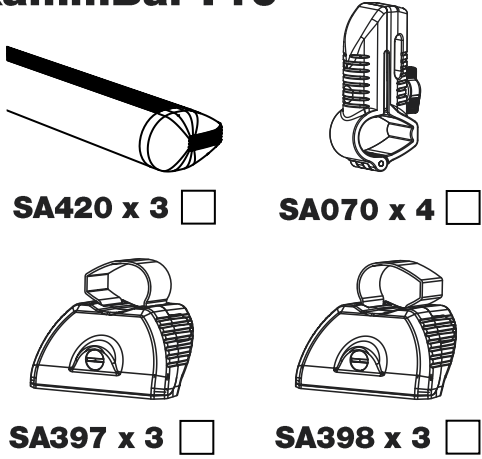

### KammBar Fleet

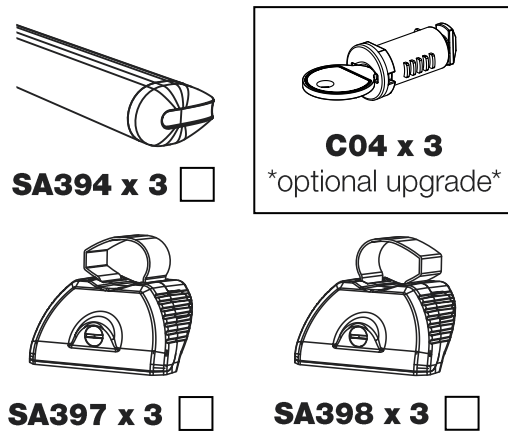

### Fitting Kit

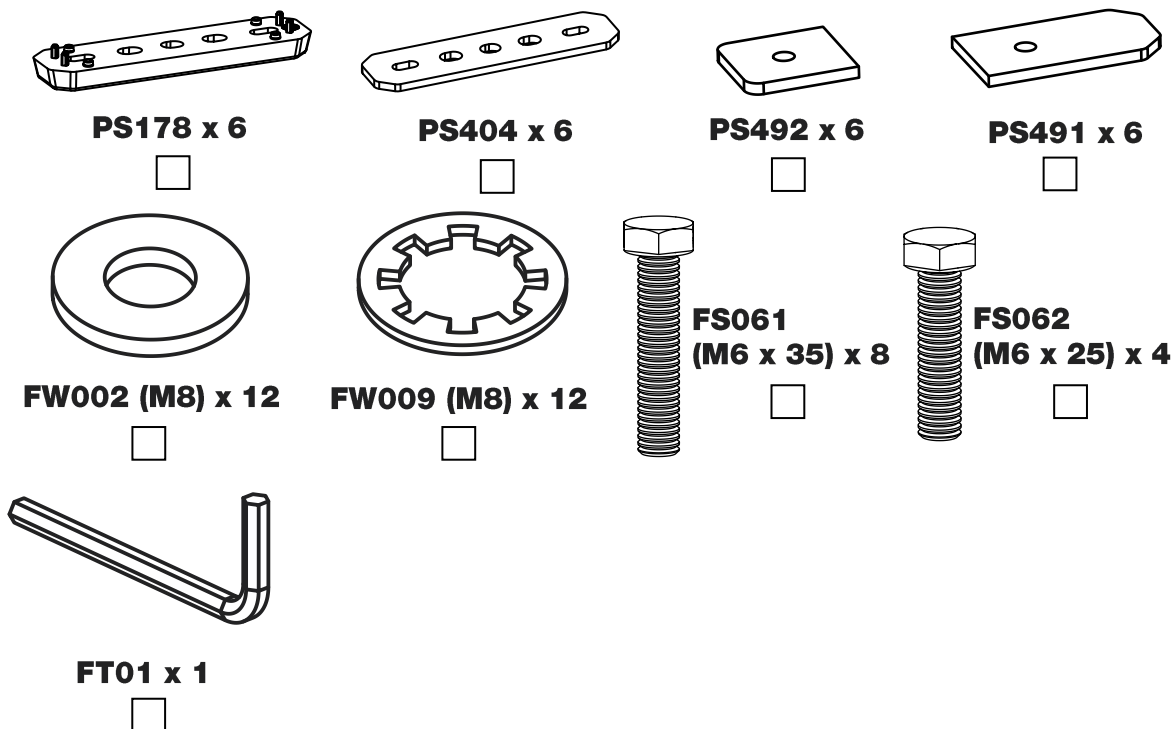


1.




2.




3.

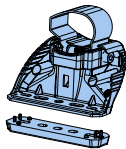


SA397  
PS178

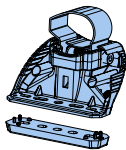


SA397  
PS178

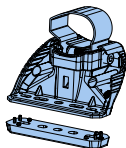


SA397  
PS178

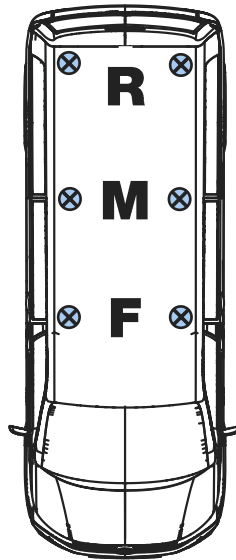


SA398  
PS178

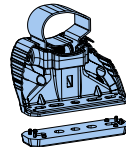


SA398  
PS178

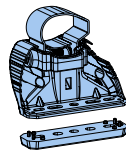


SA398  
PS178

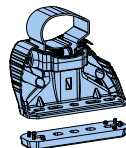


4.

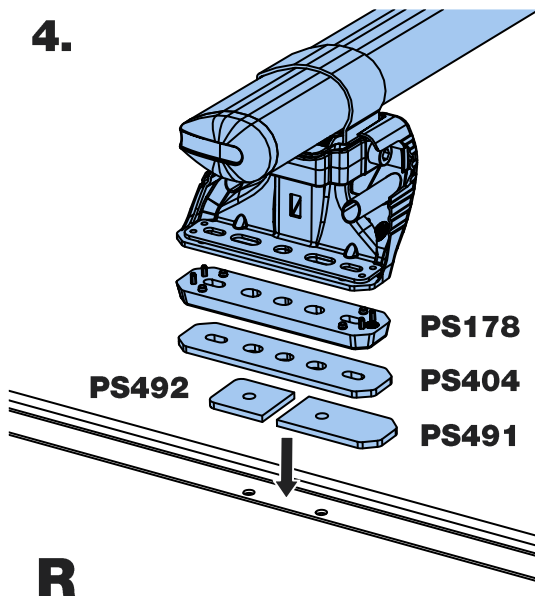


5.

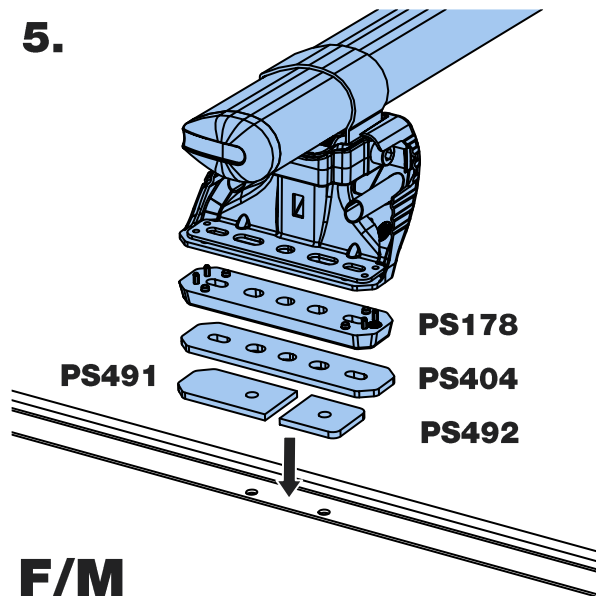


6.

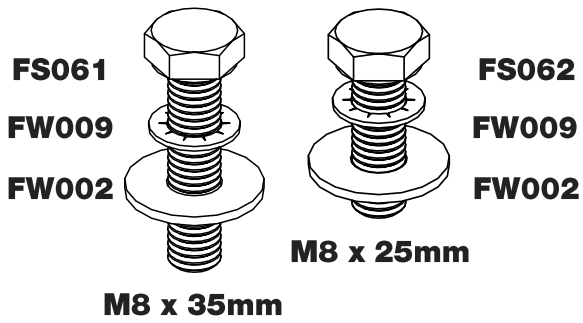


7.

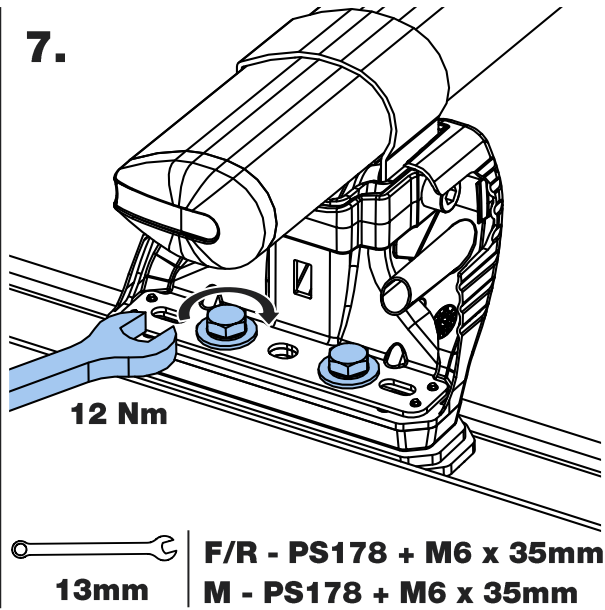


8.

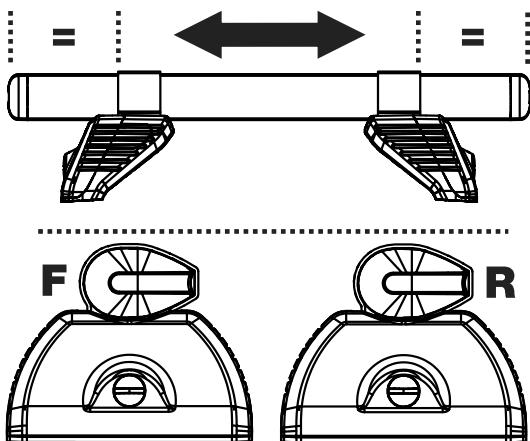

9.

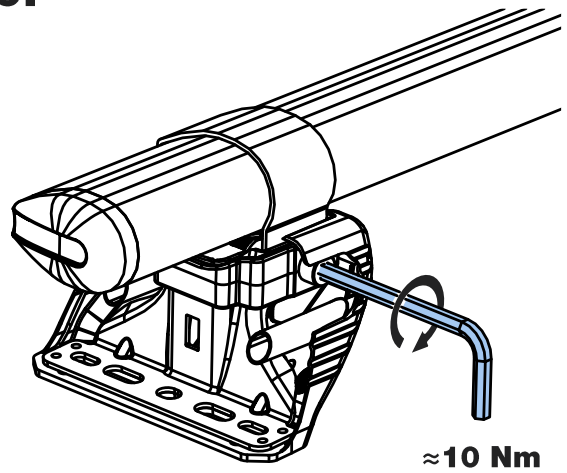

10.

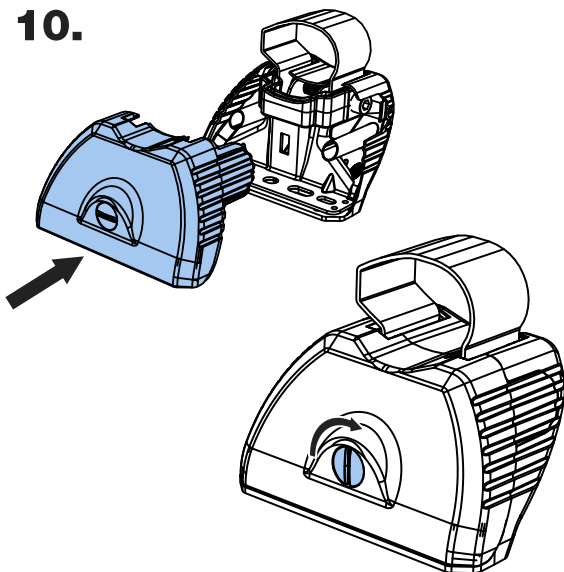

11.

