


WD2PR/FL




KammBar

Instructions

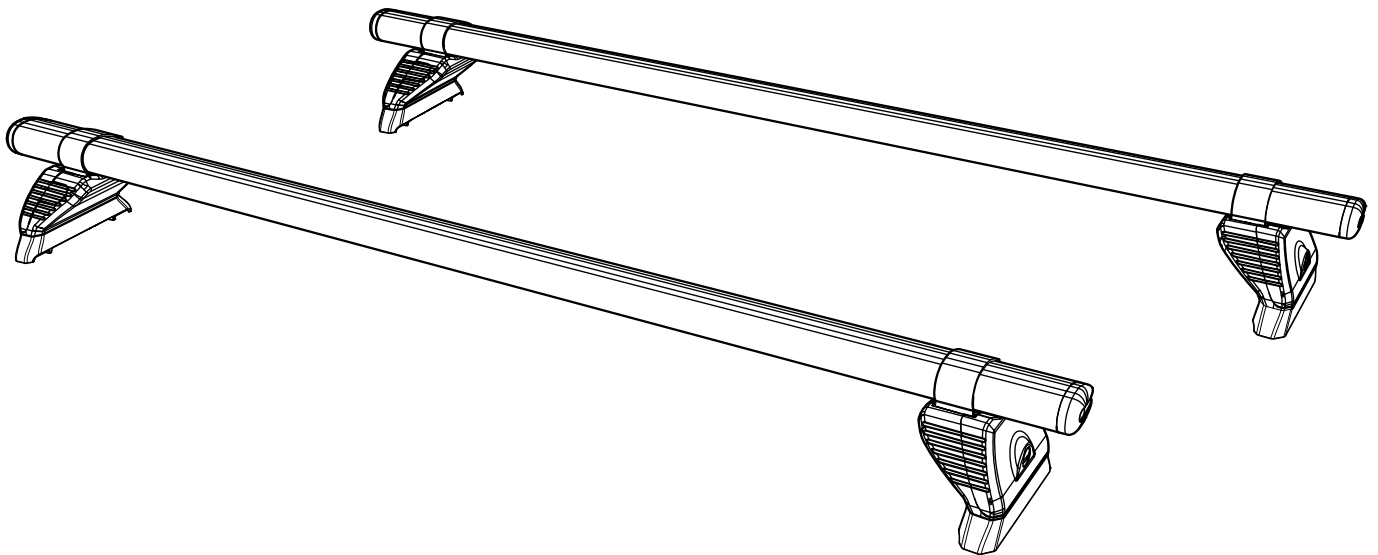


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

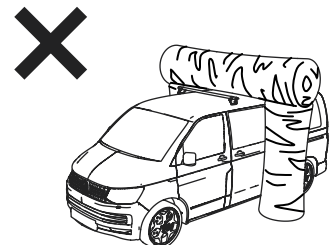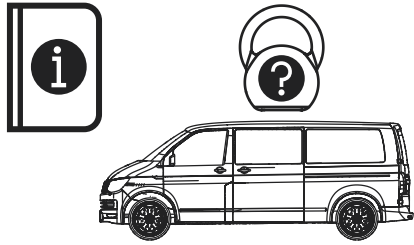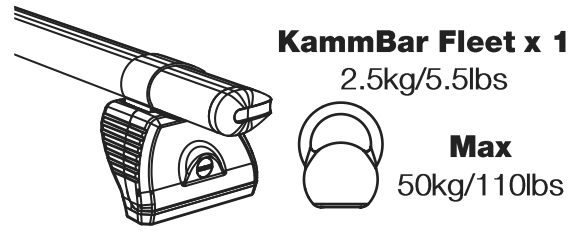


KammBar Pro

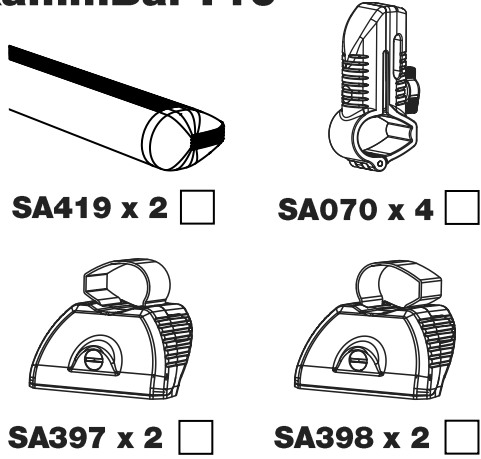

KammBar Fleet

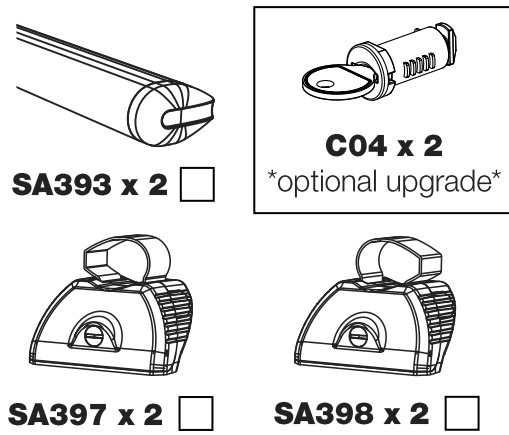

Fitting Kit

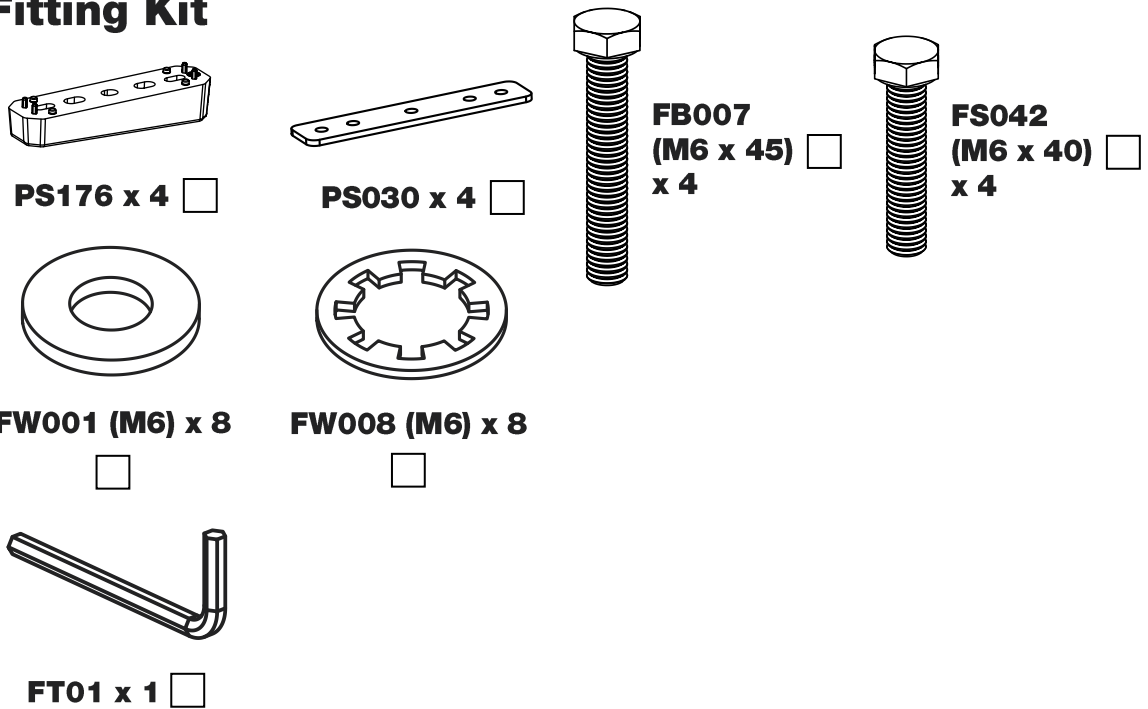


1.




2.





3.



SA397
PS176

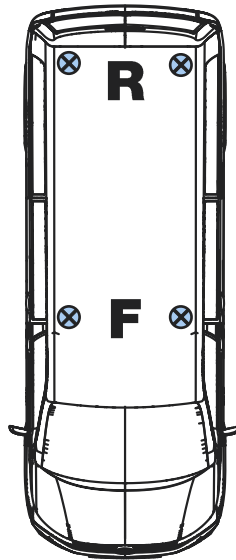

SA398
PS176




SA397
PS176

SA398
PS176




4.

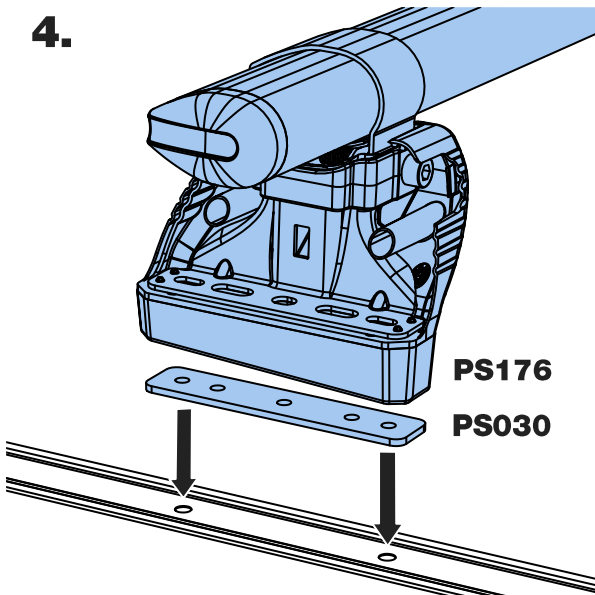

5.


FB007

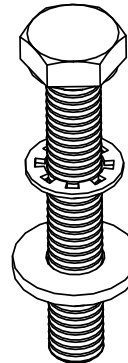

M6 x 45mm

FW008

FW001









M6 x 40mm


FS042

FW008

FW001

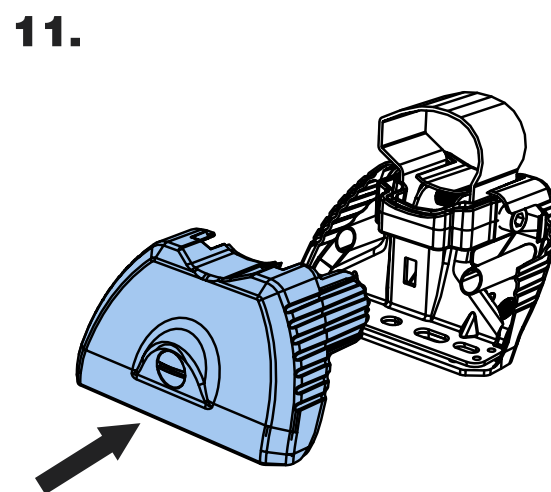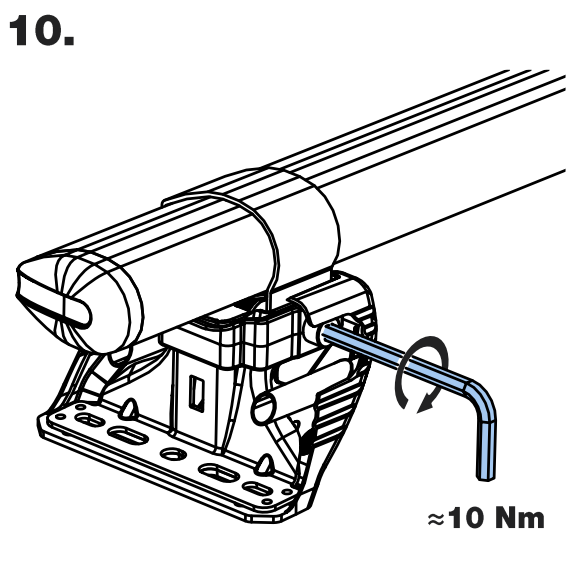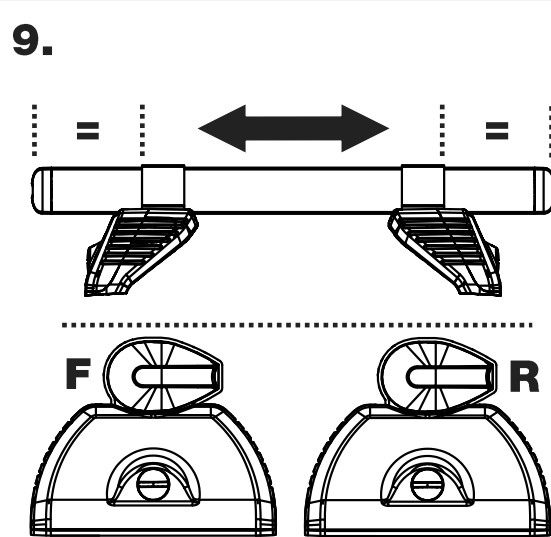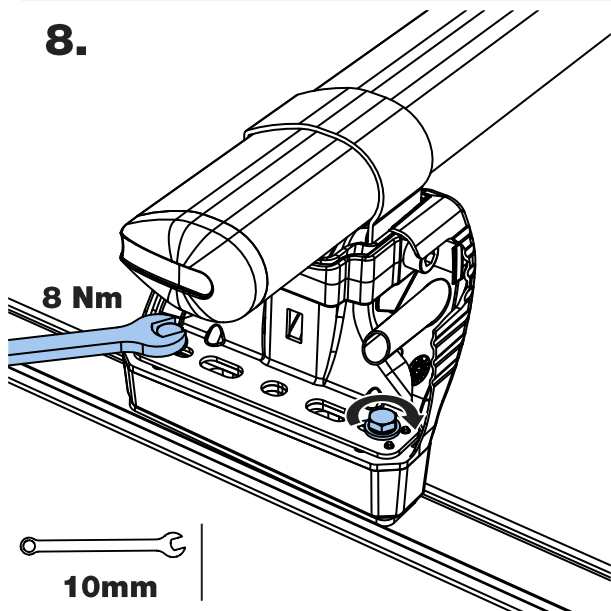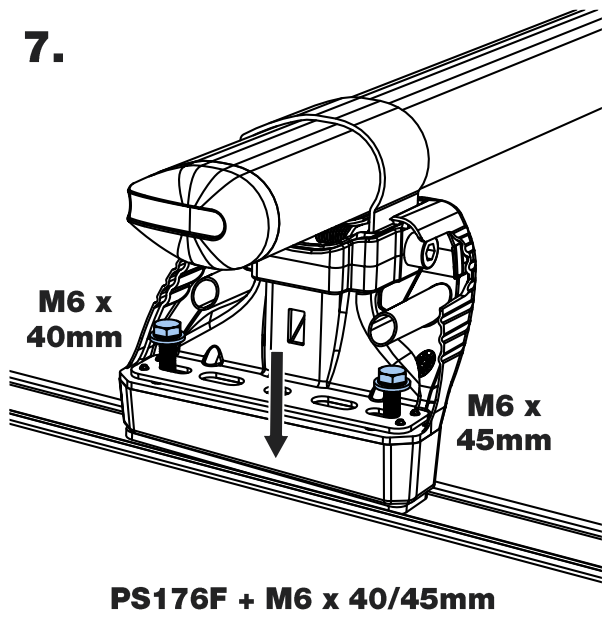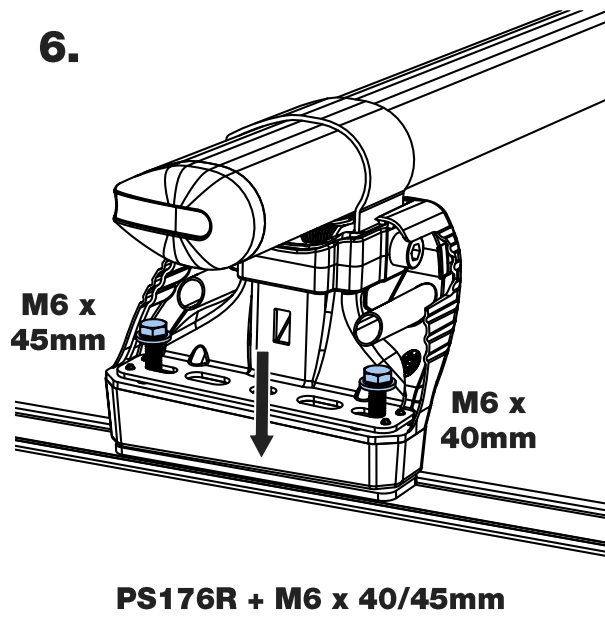

12.

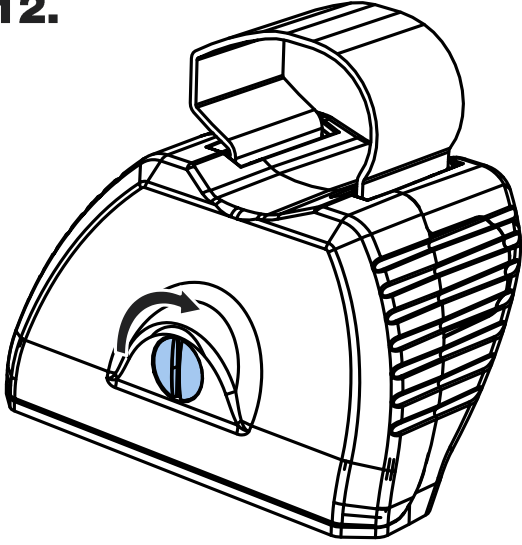

13.

