





Thule Rapid System Kit 1207

> Instructions


CHEVROLET Rezzo, 5-dr Estate, 00-04, 05-08

DAEWOO Tacuma, 5-dr Estate, 00-04, 05-08

DAEWOO Rezzo, 5-dr Estate, 00-04, 05-08

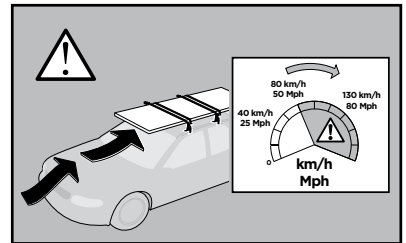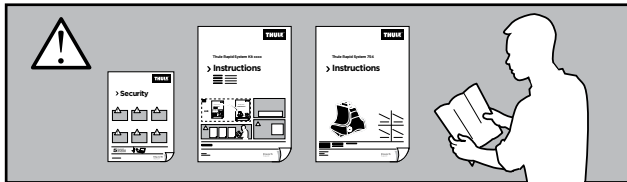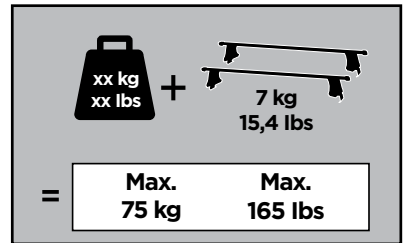
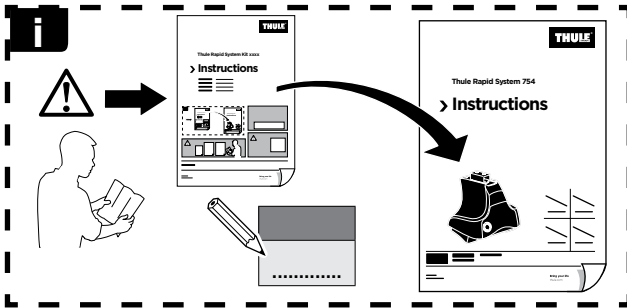


ISO 11154-E

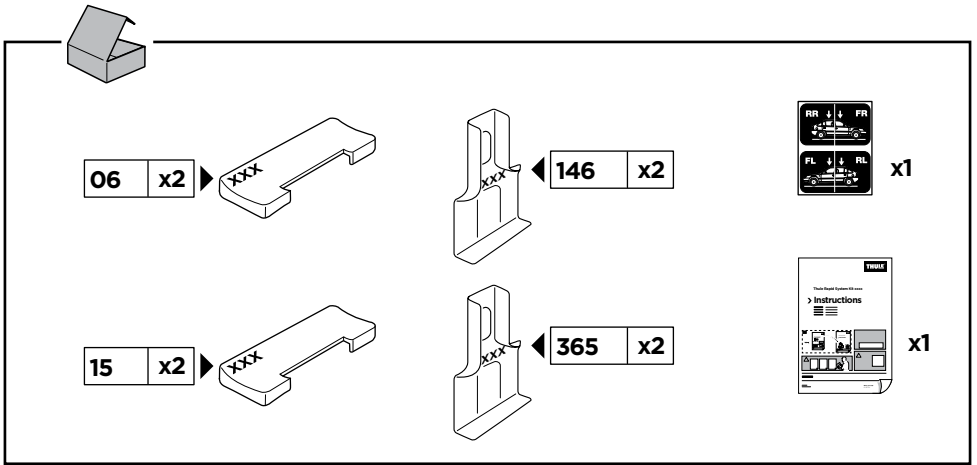

1

	X (scale)	X (mm)	X (inch)
CHEVROLET Rezzo , 5-dr Estate, 00-04, 05-08	40,5	1056	41 ⁵/₈
DAEWOO Tacuma , 5-dr Estate, 00-04, 05-08	40,5	1056	41 ⁵/₈
DAEWOO Rezzo , 5-dr Estate, 00-04, 05-08	40,5	1056	41 ⁵/₈

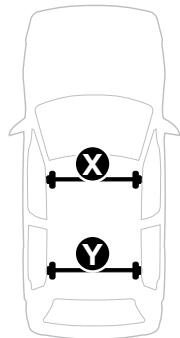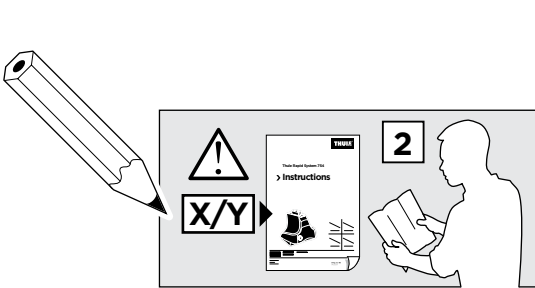



	Y (scale)	Y (mm)	Y (inch)
CHEVROLET Rezzo , 5-dr Estate, 00-04, 05-08	36	1011	39 ³/₄
DAEWOO Tacuma , 5-dr Estate, 00-04, 05-08	36	1011	39 ³/₄
DAEWOO Rezzo , 5-dr Estate, 00-04, 05-08	36	1011	39 ³/₄


2

CHEVROLET Rezzo, 5-dr Estate, 00-04, 05-08

DAEWOO Tacuma, 5-dr Estate, 00-04, 05-08

DAEWOO Rezzo, 5-dr Estate, 00-04, 05-08

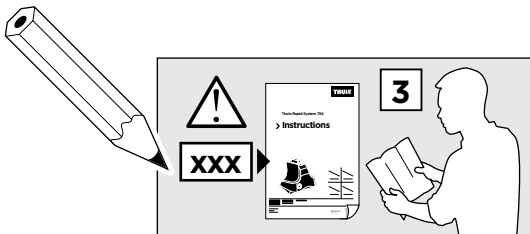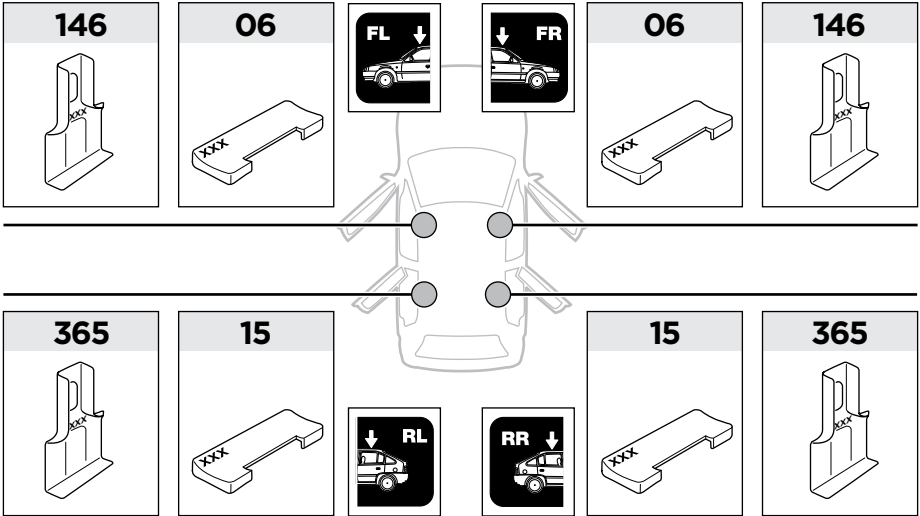

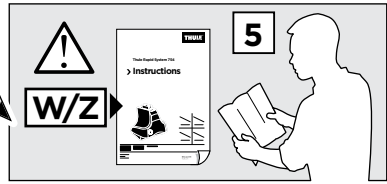3

	W (mm)	Z (mm)	W (inch)	Z (inch)
CHEVROLET Rezzo , 5-dr Estate, 00-04, 05-08	350	700	13 3/4	27 1/2
DAEWOO Tacuma , 5-dr Estate, 00-04, 05-08	350	700	13 3/4	27 1/2
DAEWOO Rezzo , 5-dr Estate, 00-04, 05-08	350	700	13 3/4	27 1/2

