


# GA3PR/FL




# KammBar

## Instructions


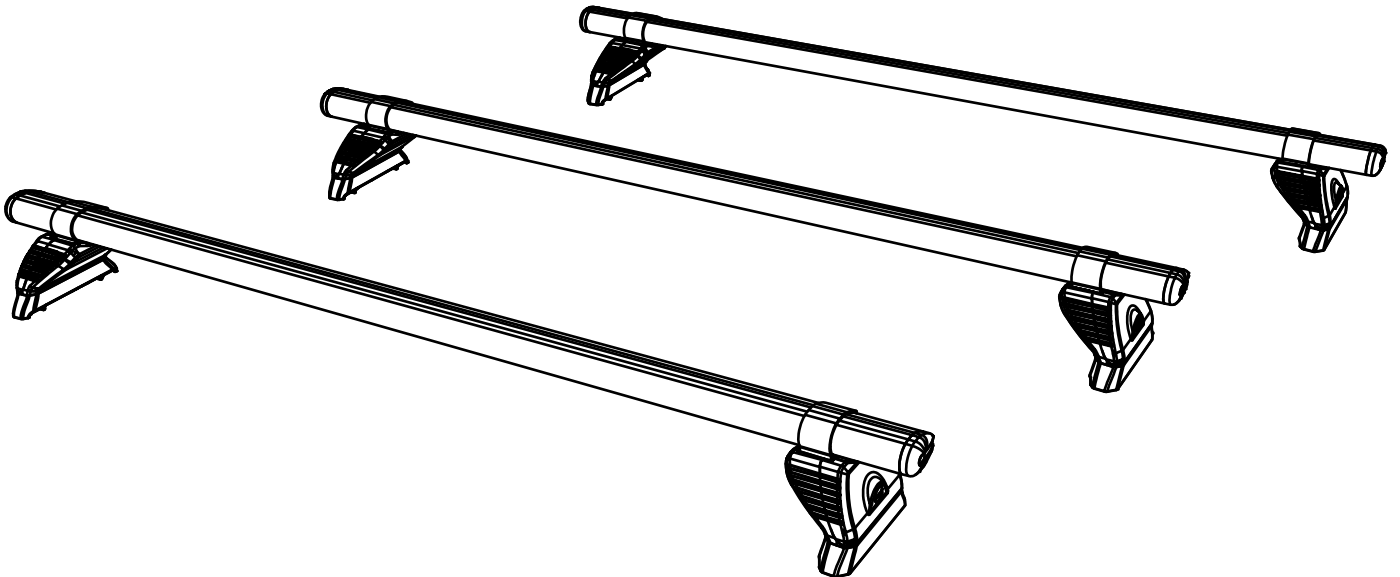


**CITY CRASH** (✓)



According to ISO/ PAS 11154:2006

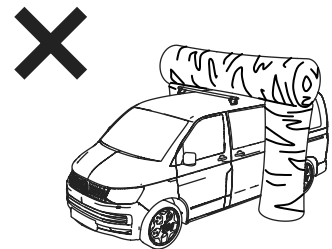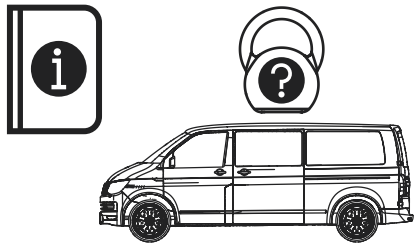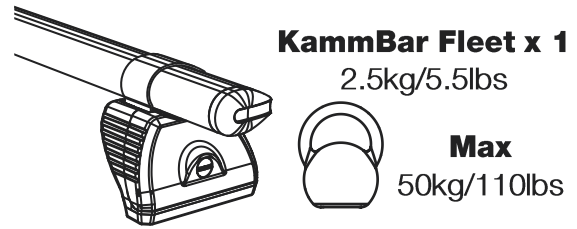





### KammBar Pro

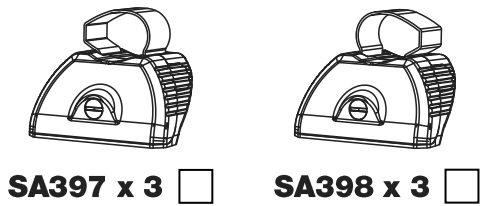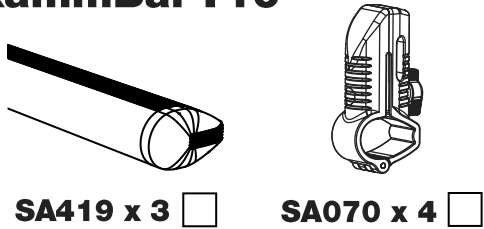

### KammBar Fleet

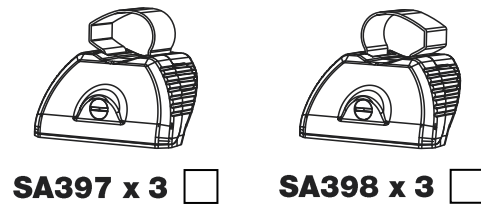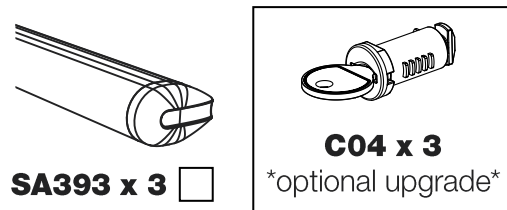

### Fitting Kit

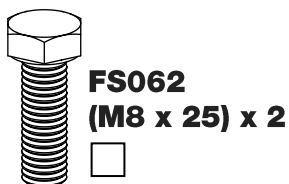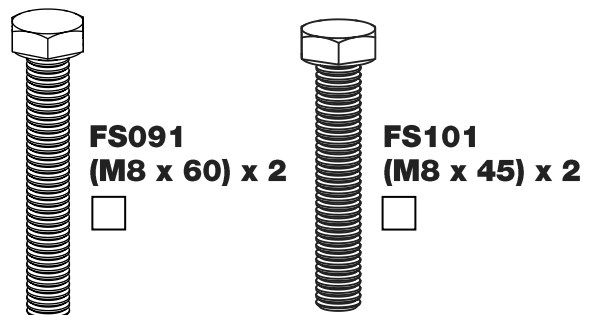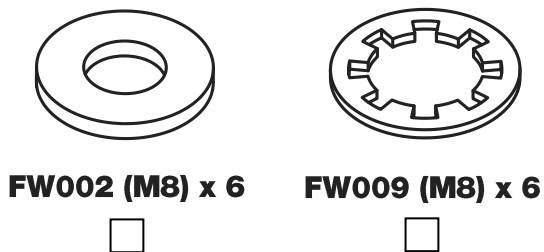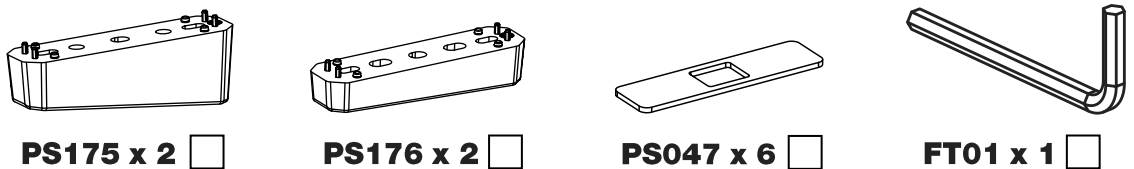

1.



2.




3.




SA397  
PS176




SA397



SA397  
PS175

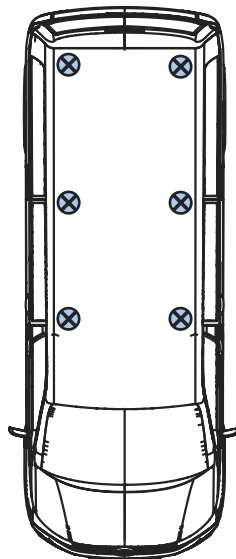


SA398  
PS176




SA398




SA398  
PS175









4.

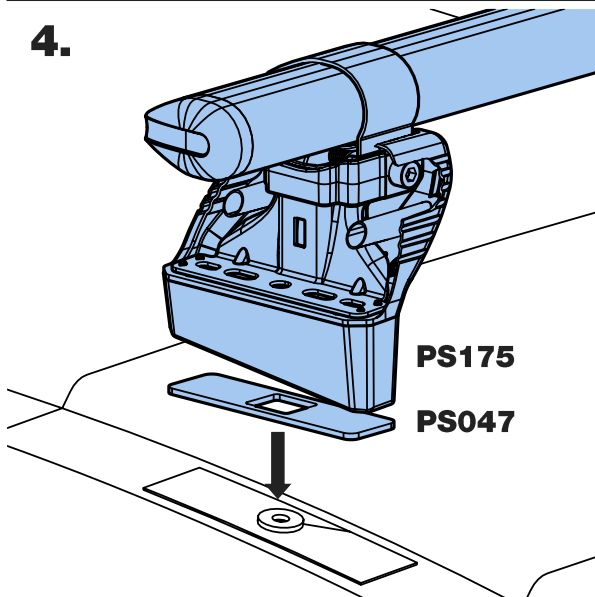


5.

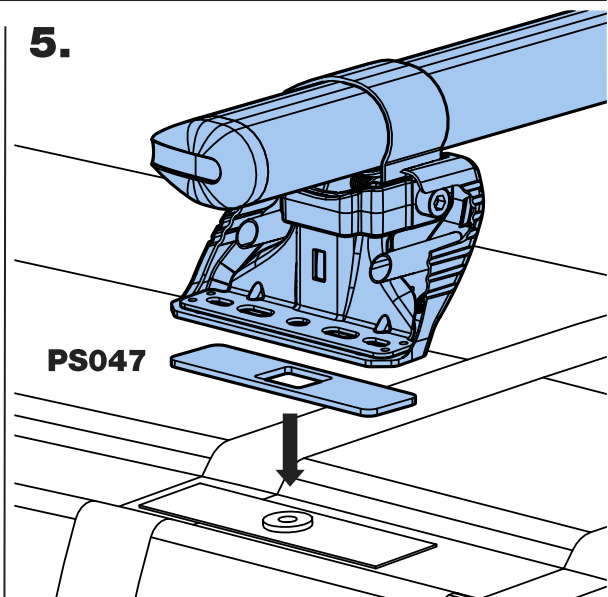


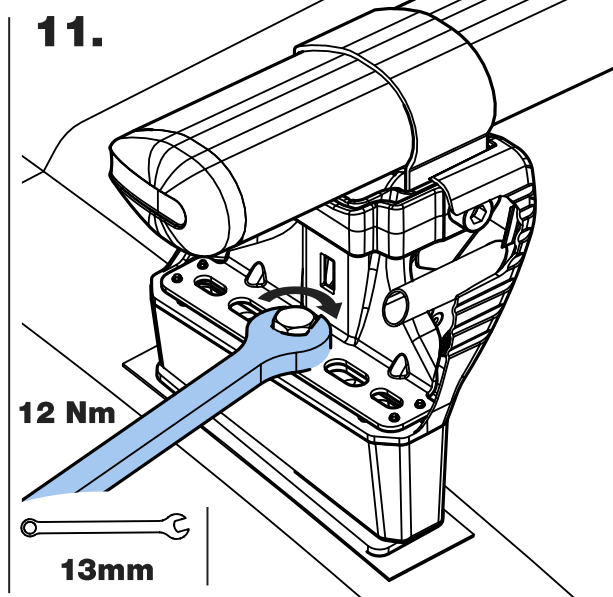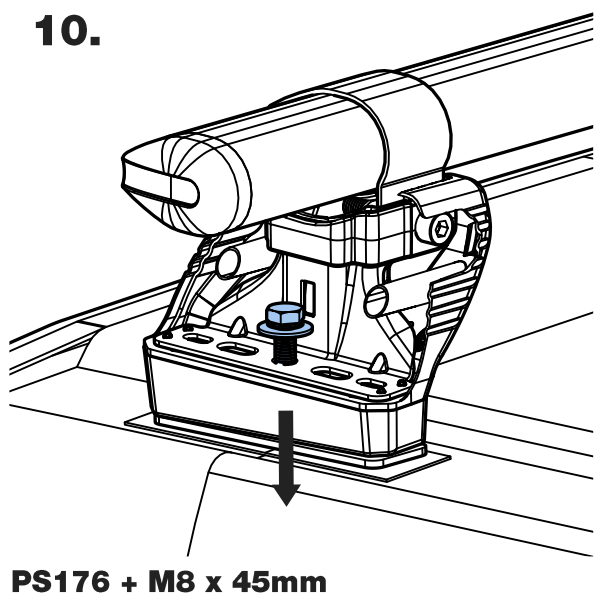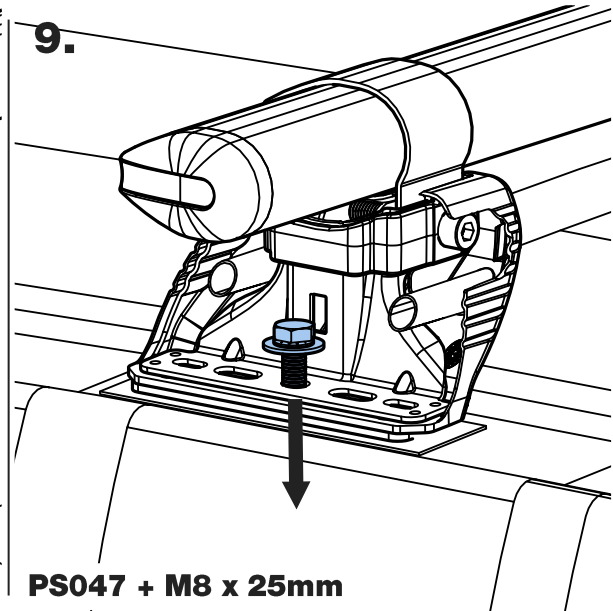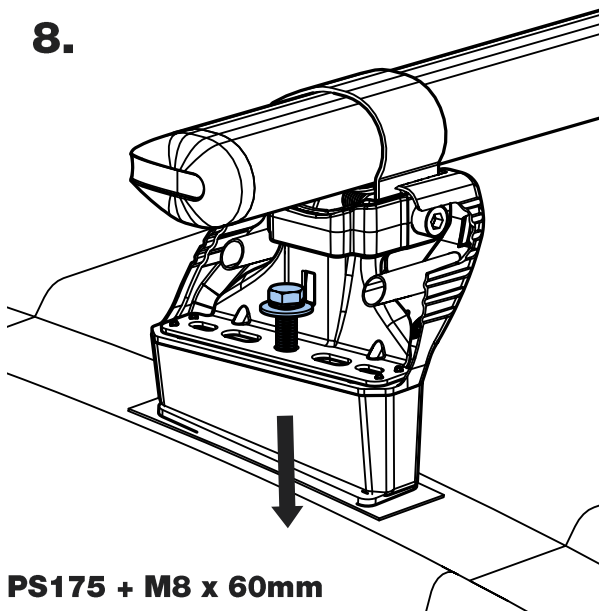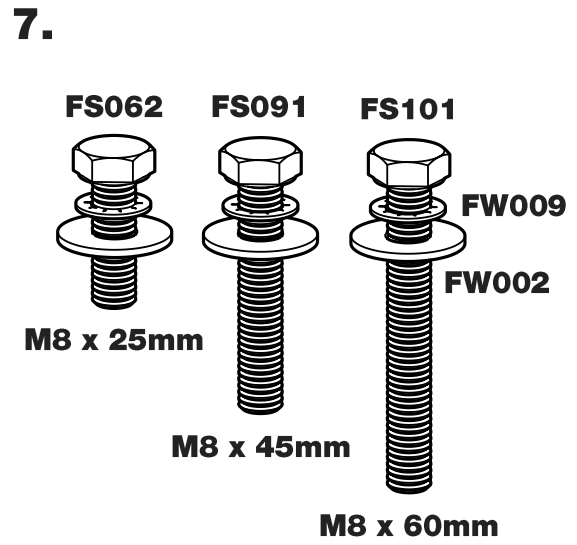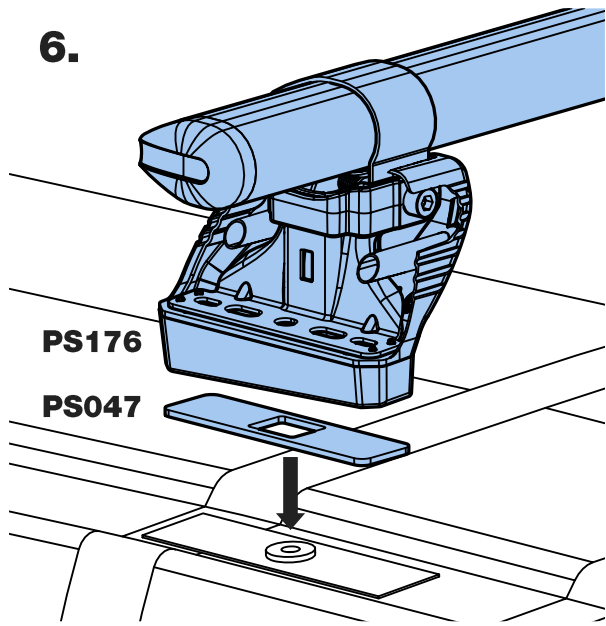


12.

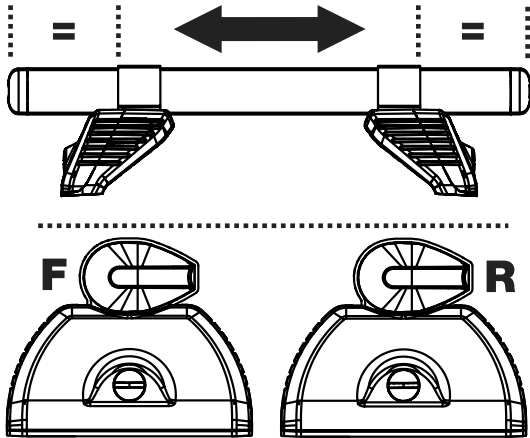

13.

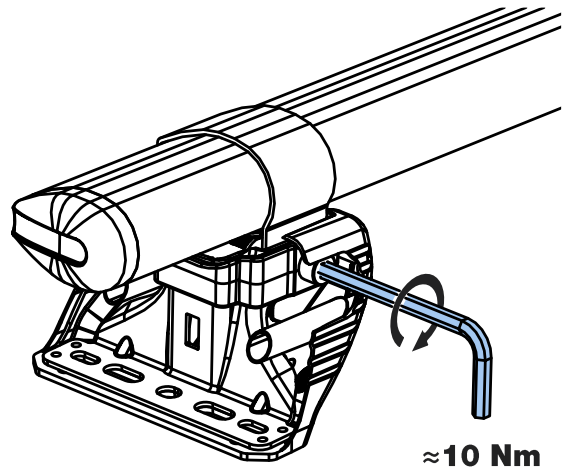

14.

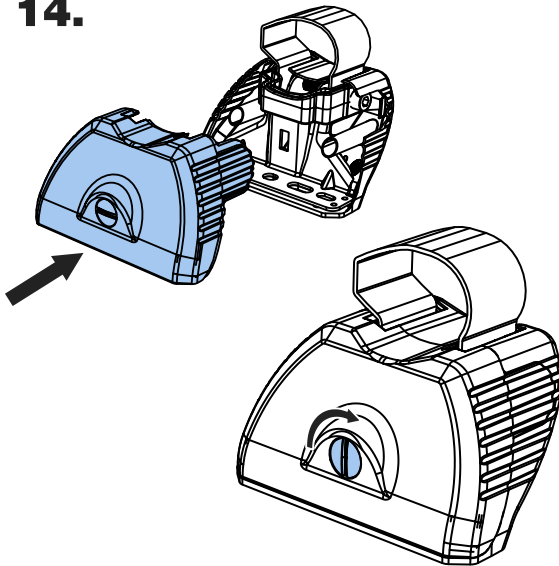

15.

