


GC3PR/FL




KammBar

Instructions

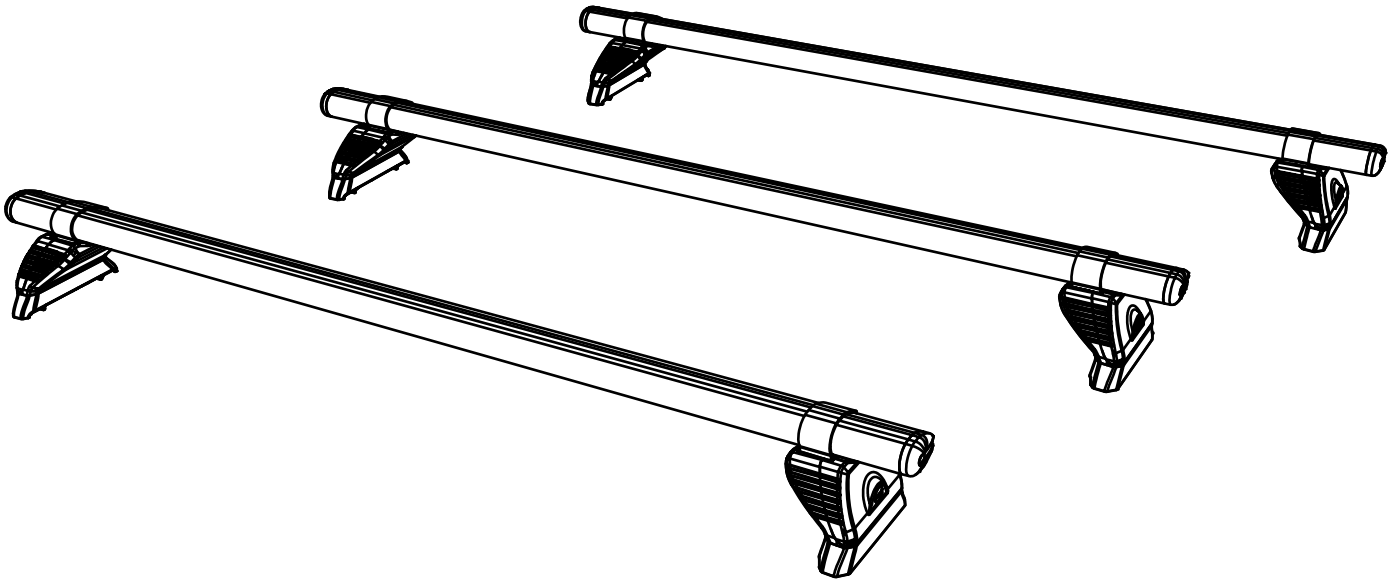


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

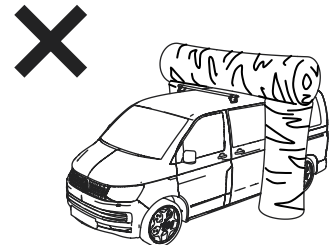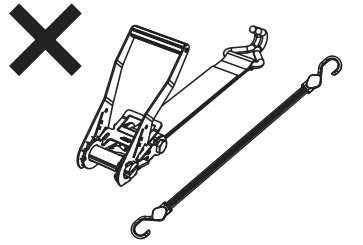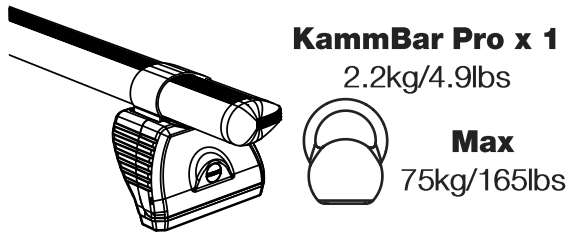


KammBar Pro

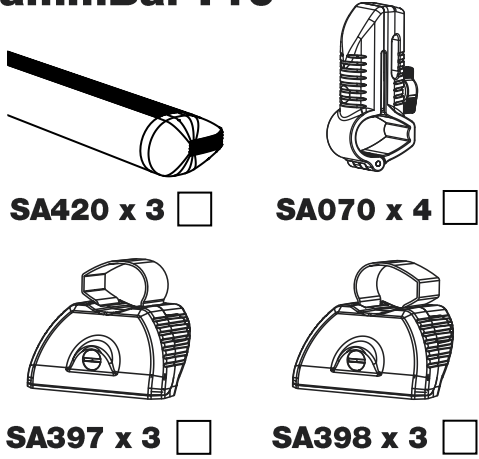

KammBar Fleet

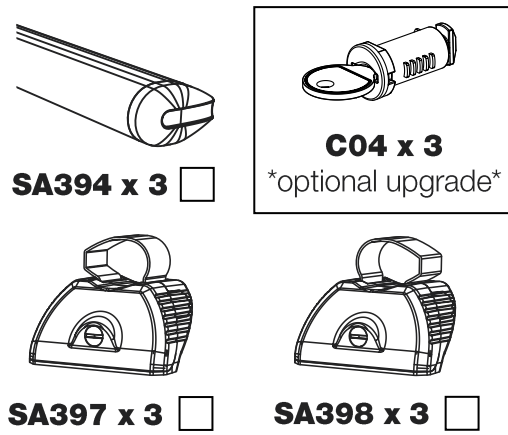

Fitting Kit

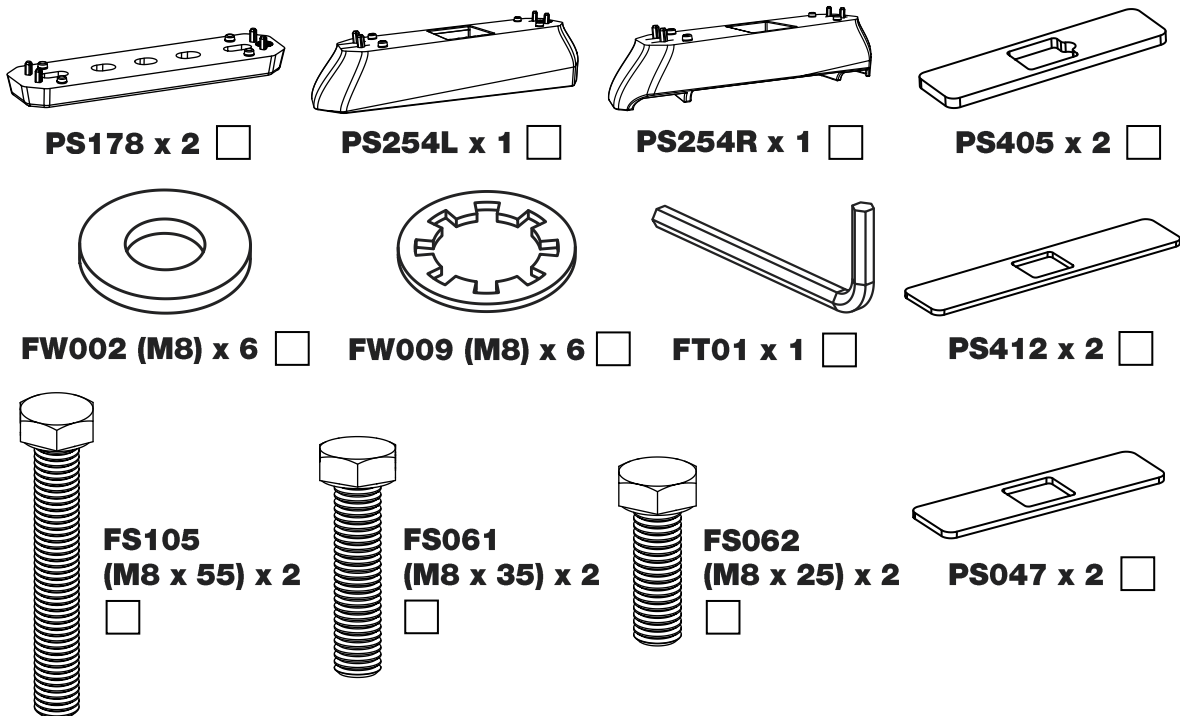


1.



2.



3.




SA397
PS178




SA397



SA397
PS254L

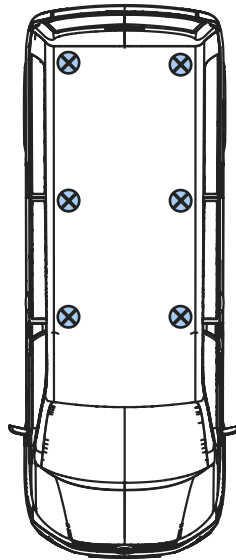


SA398
PS178




SA398



SA398
PS254R




4.






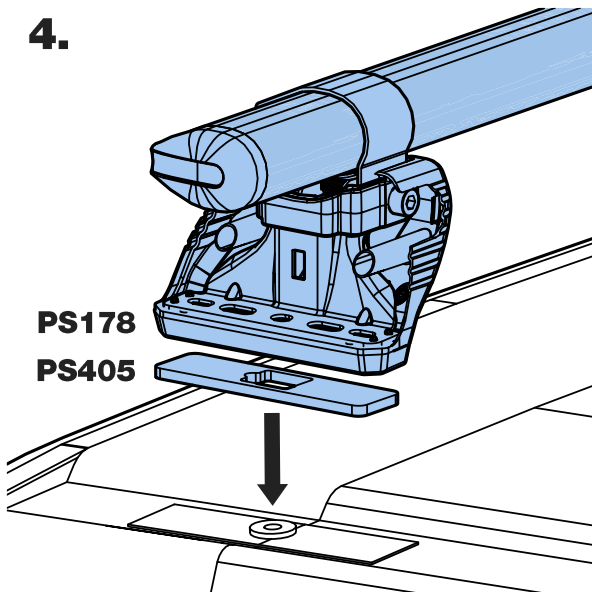


PS178
PS405


5.

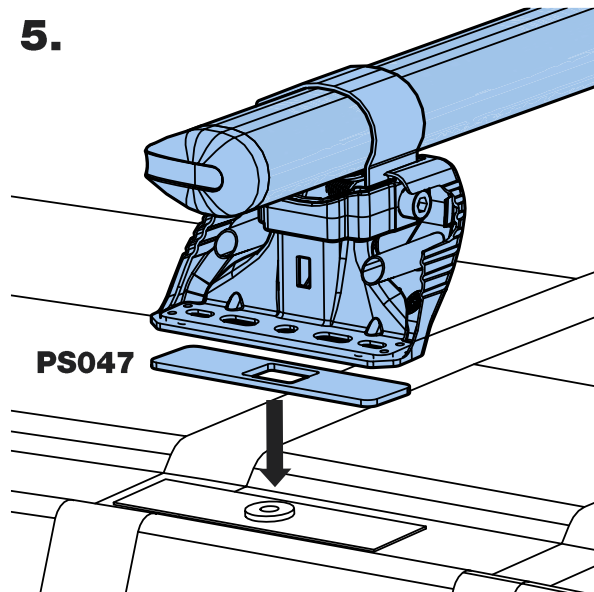


PS047

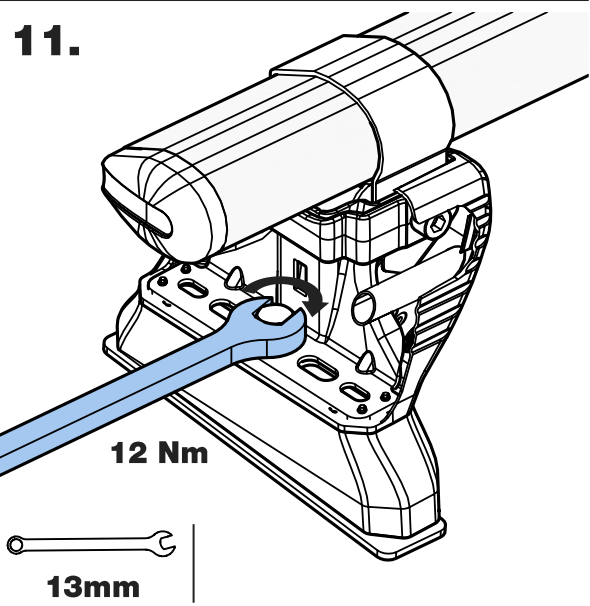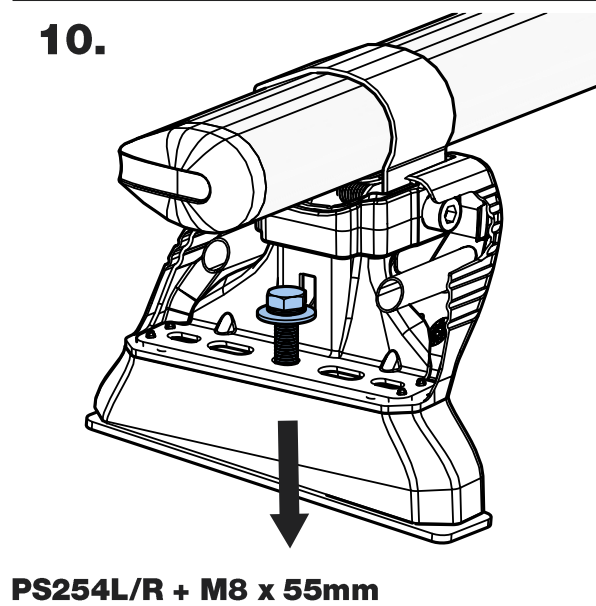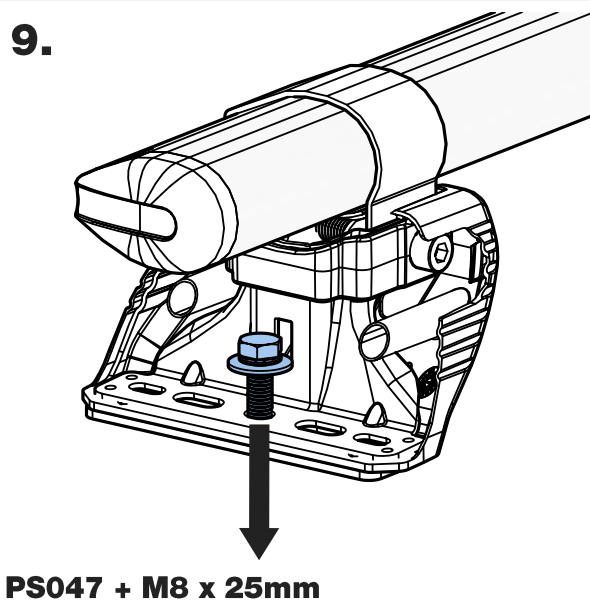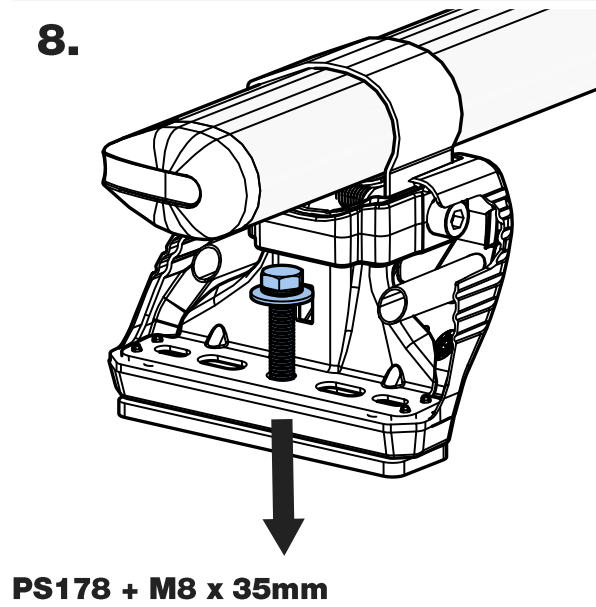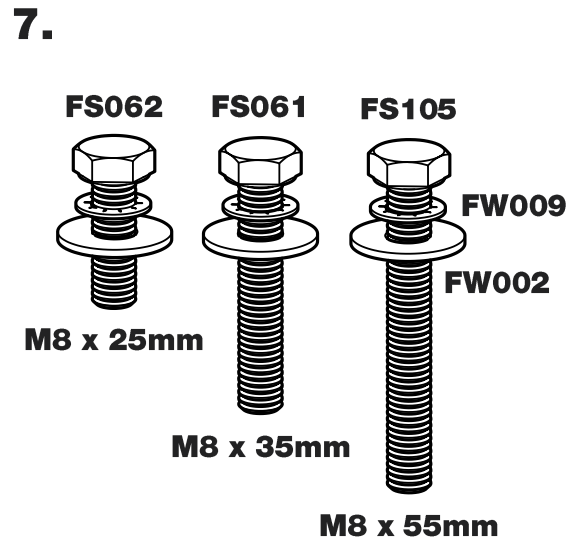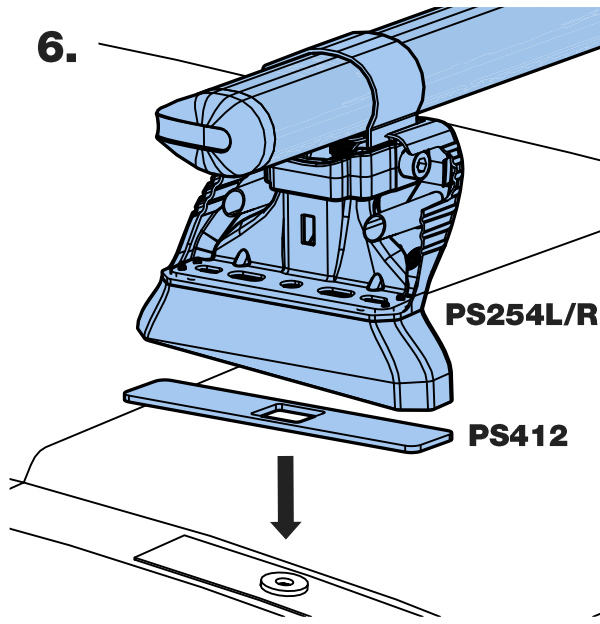


12.

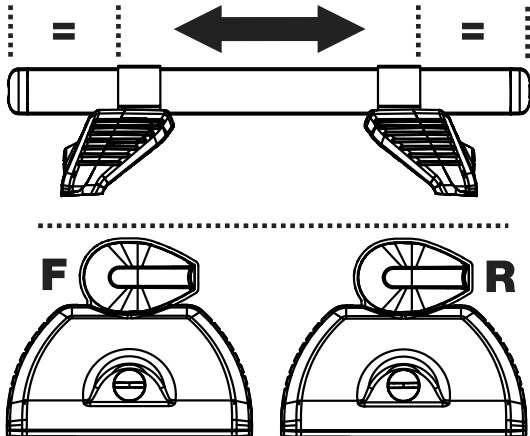

13.

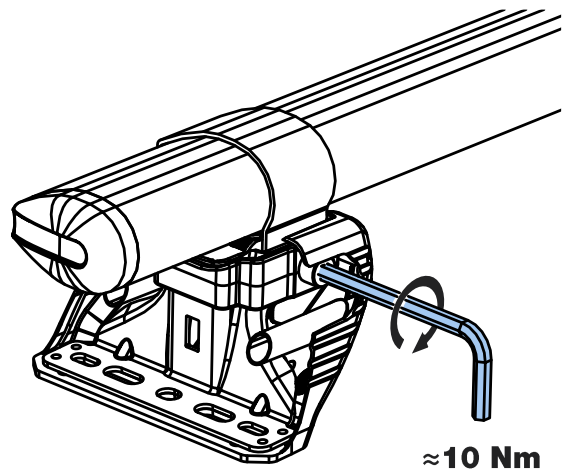

14.

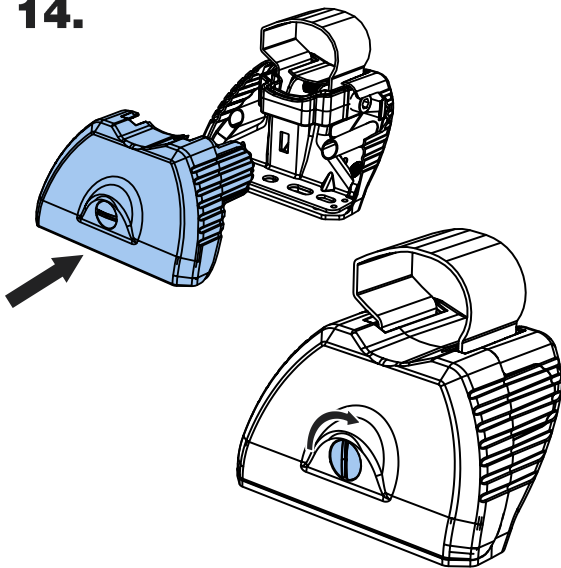

15.

