

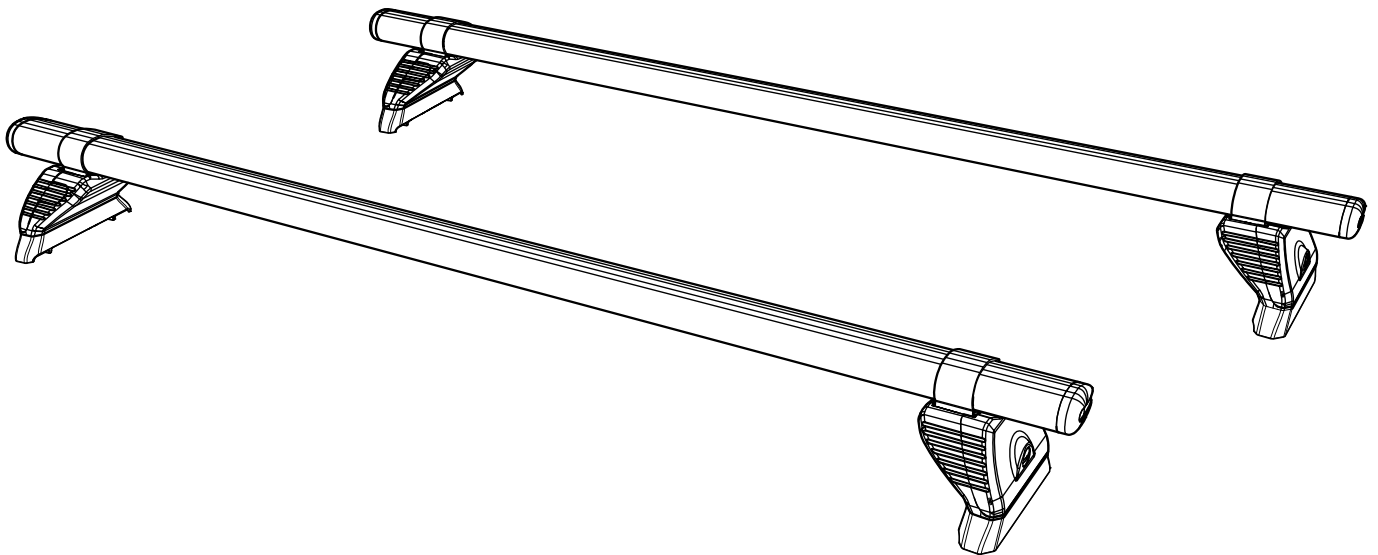
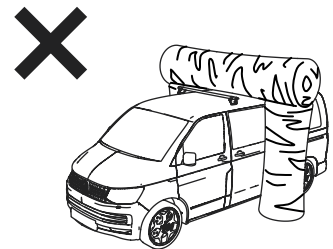


JD2PR/FL KammBar Instructions


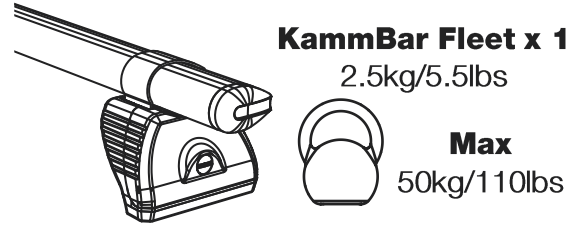


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

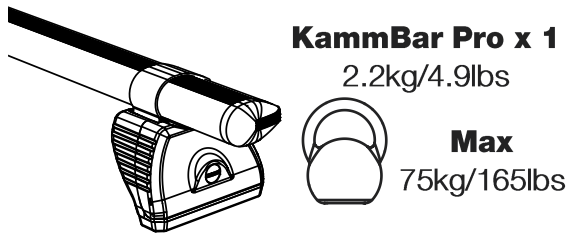




KammBar Pro

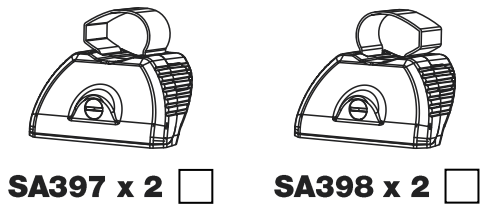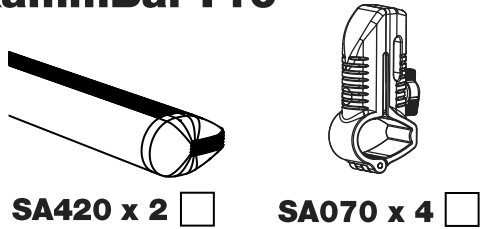

KammBar Fleet

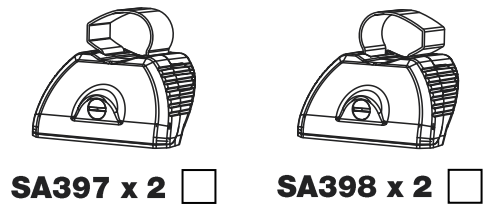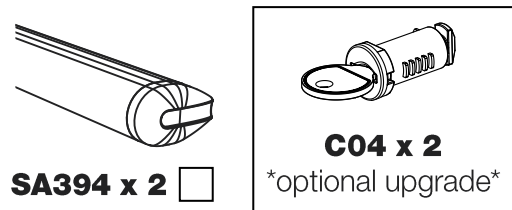

Fitting Kit

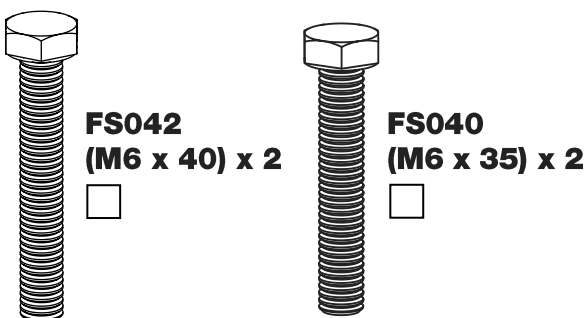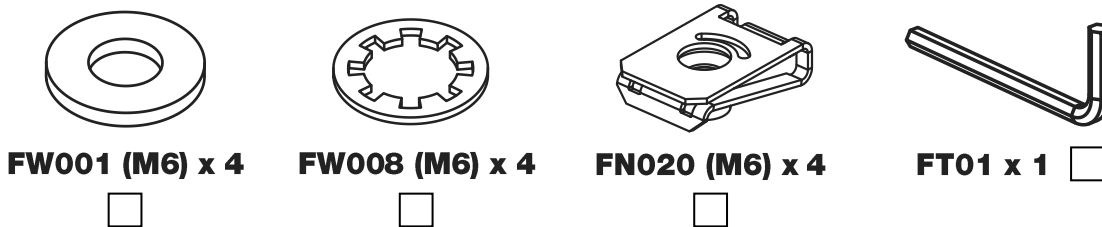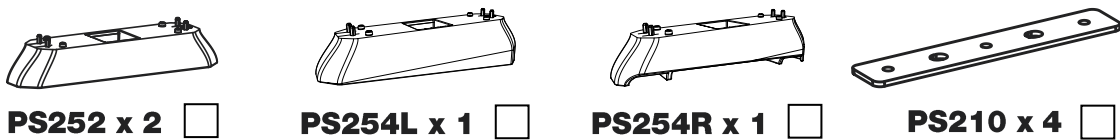

1.




2.




3.



SA397
PS254R

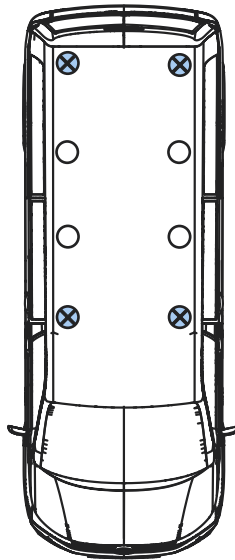


SA398
PS254L




SA397
PS252


SA398
PS252




4.

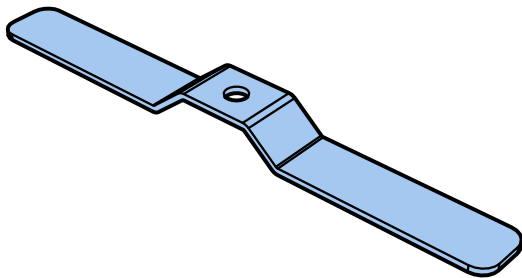


5.

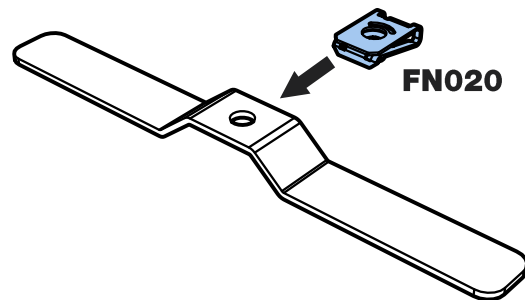


6.

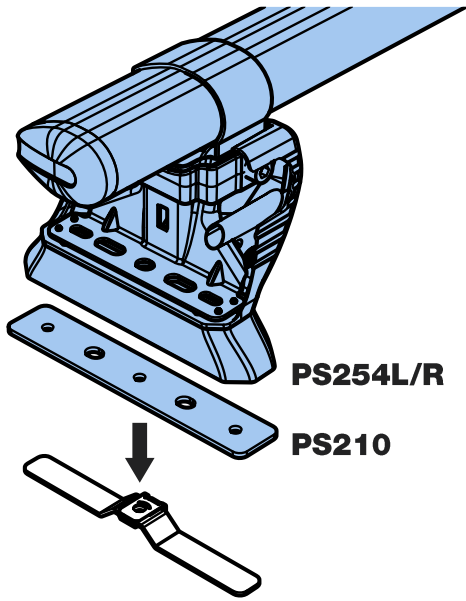


7.

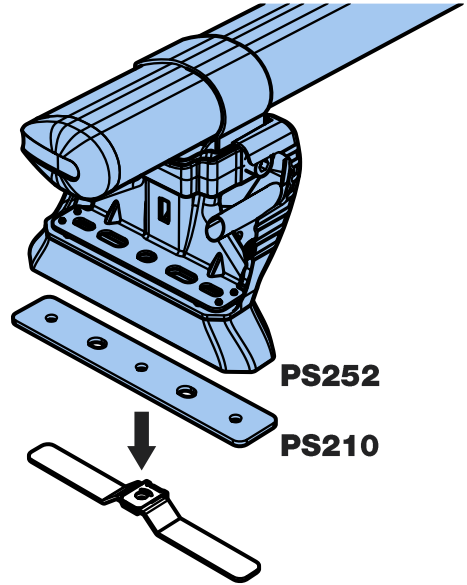


8.

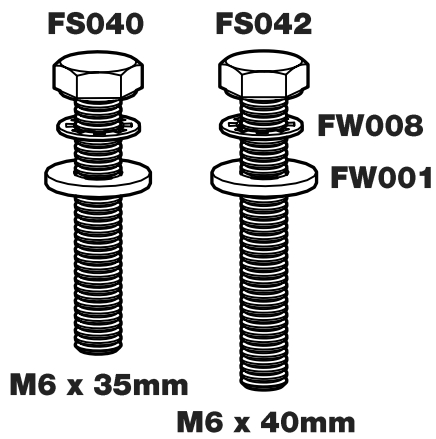


9.

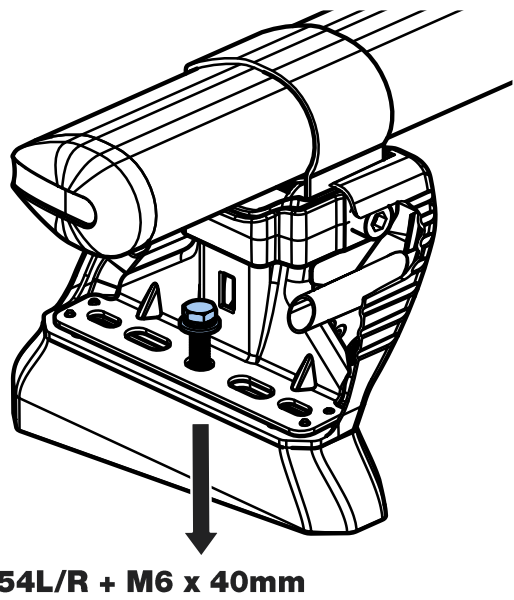


10.

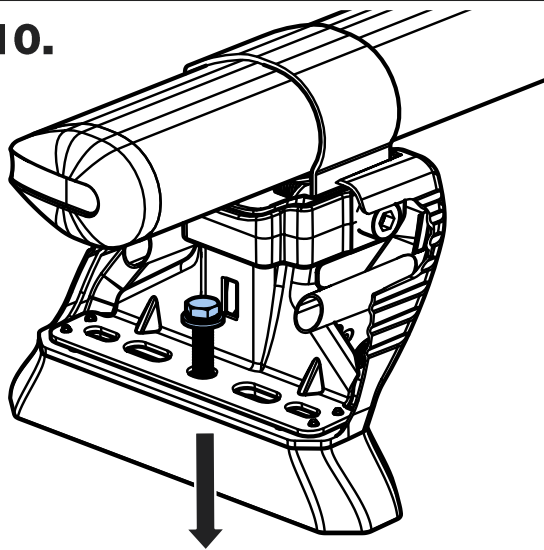


11.

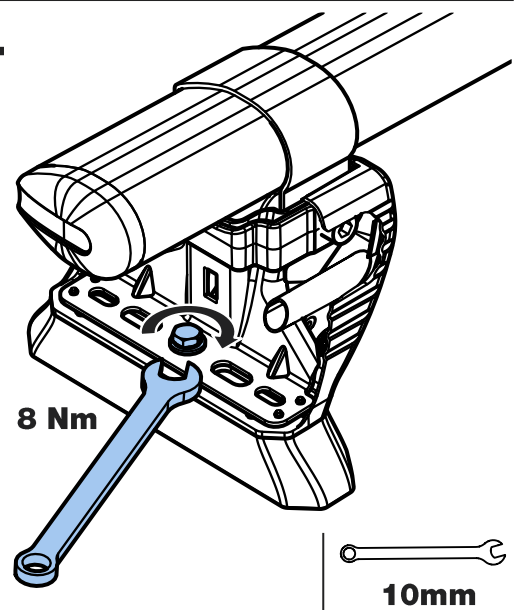


12.

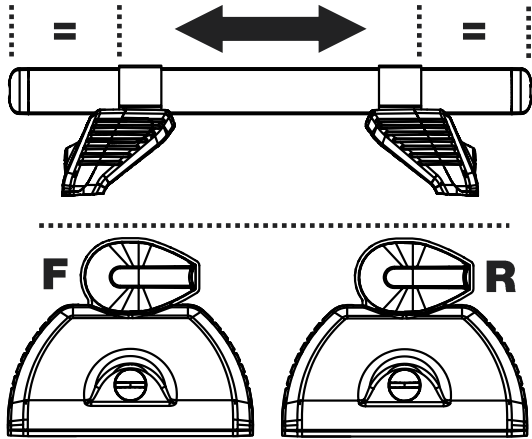

13.

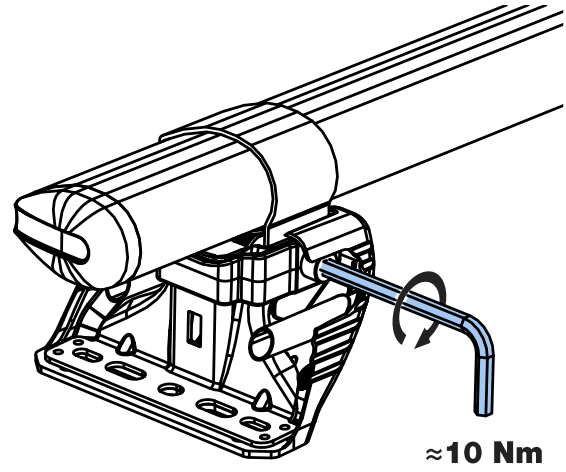

14.

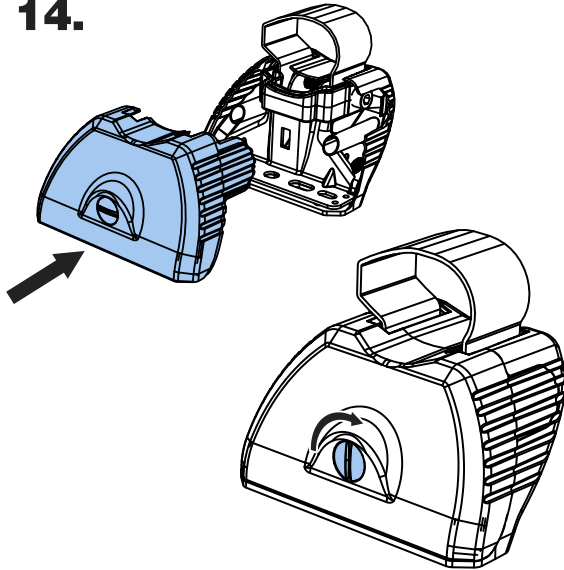

15.

