






# MC3PR/FL KammBar

## Instructions

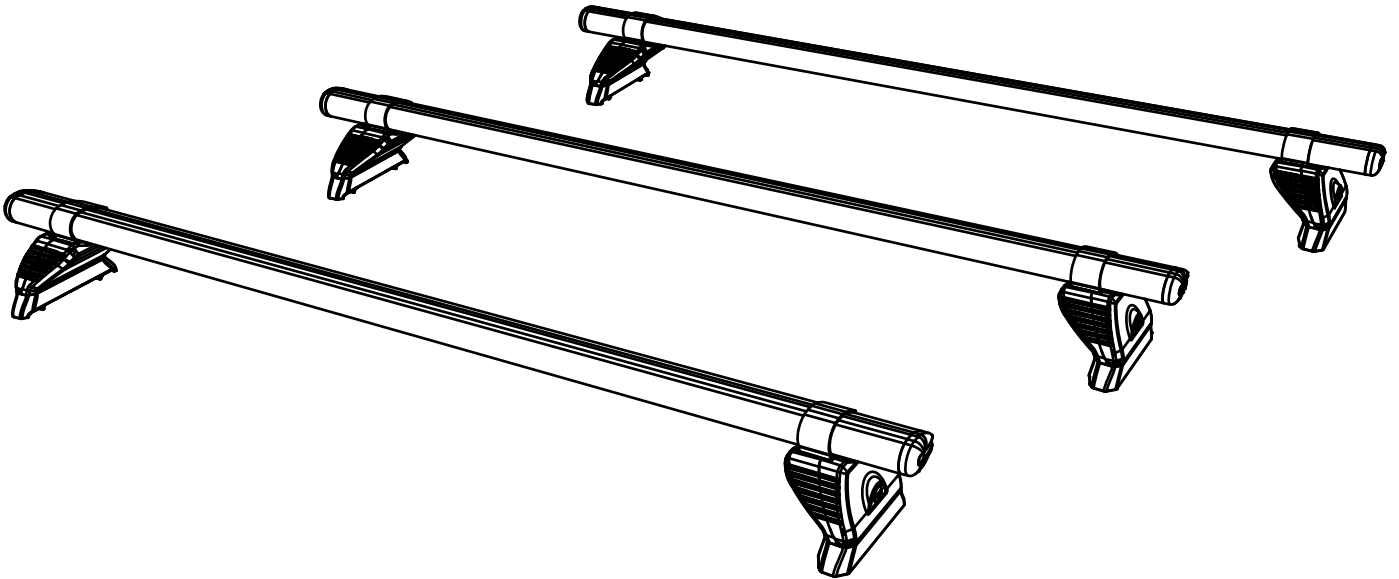


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

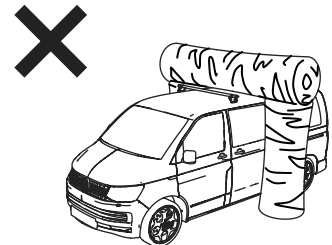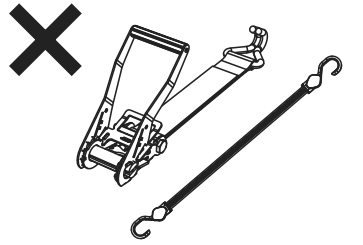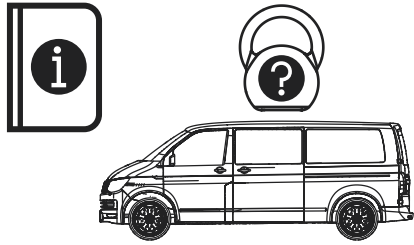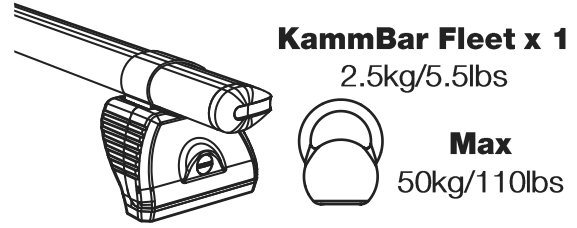


### KammBar Pro

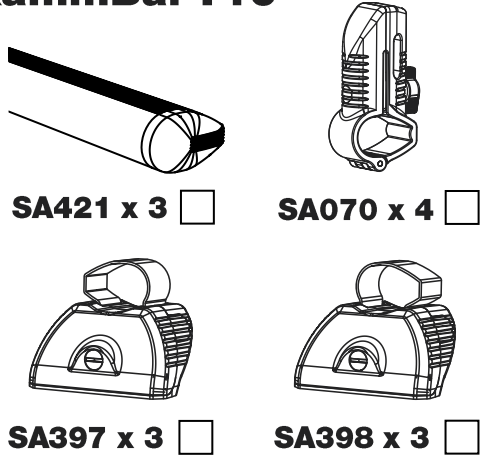

### KammBar Fleet

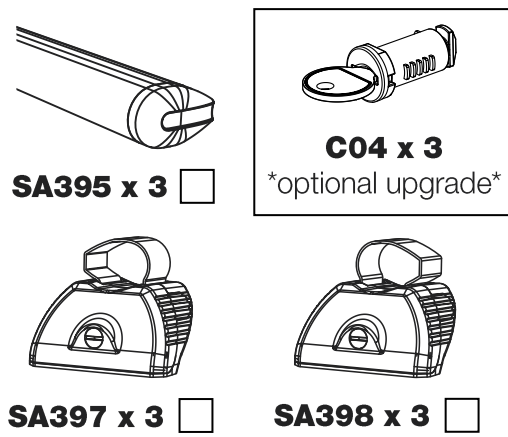


### Fitting Kit

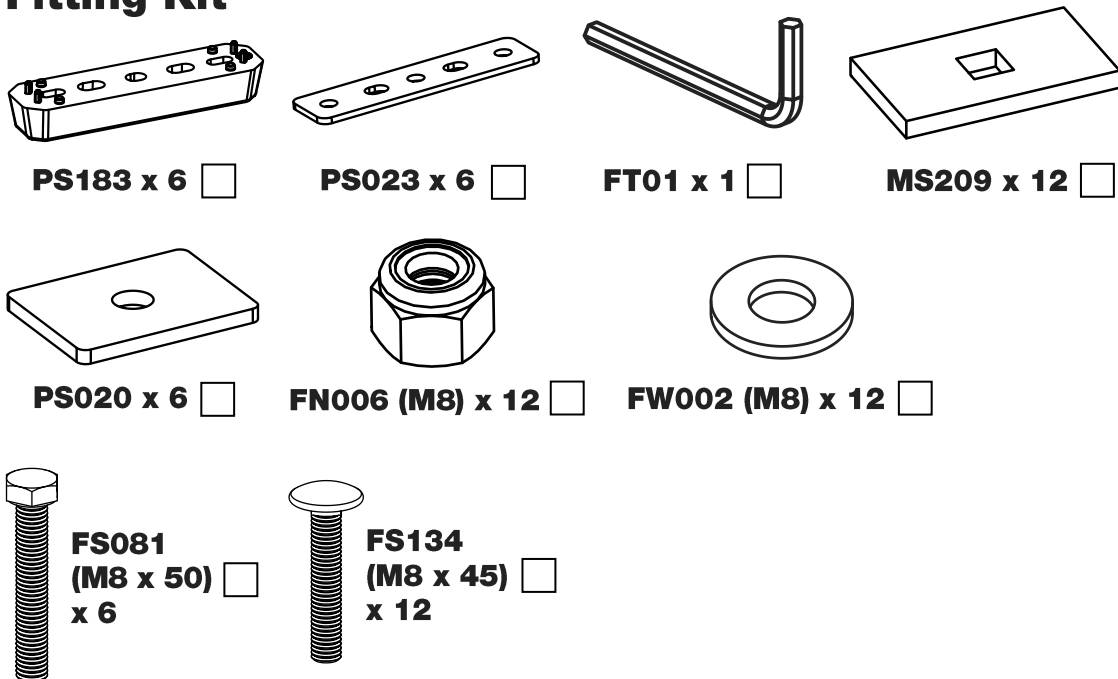


1.



2.

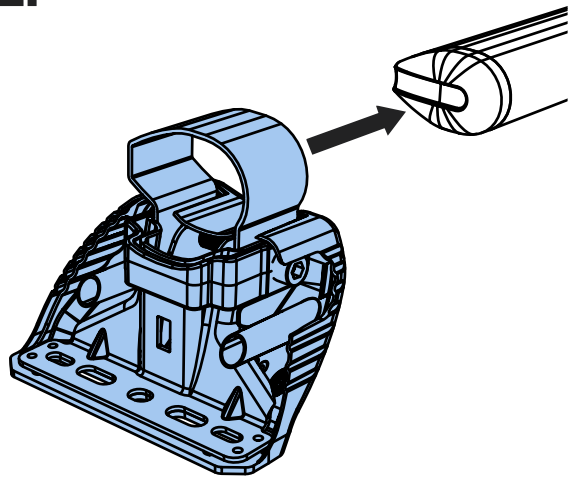


3.

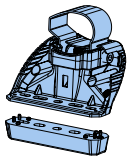


SA397

PS183

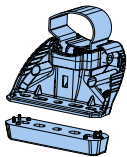


SA397

PS183

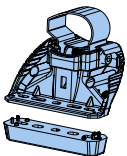


SA397

PS183

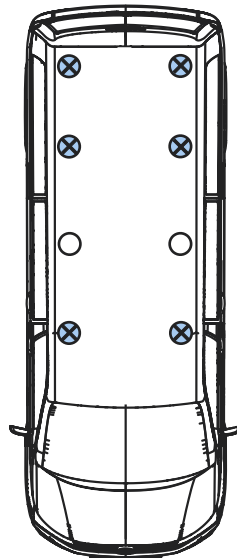


SA398

PS183

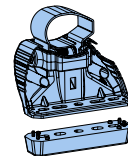


SA398

PS183

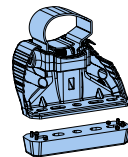


SA398

PS183

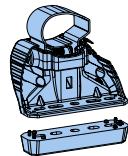


4.

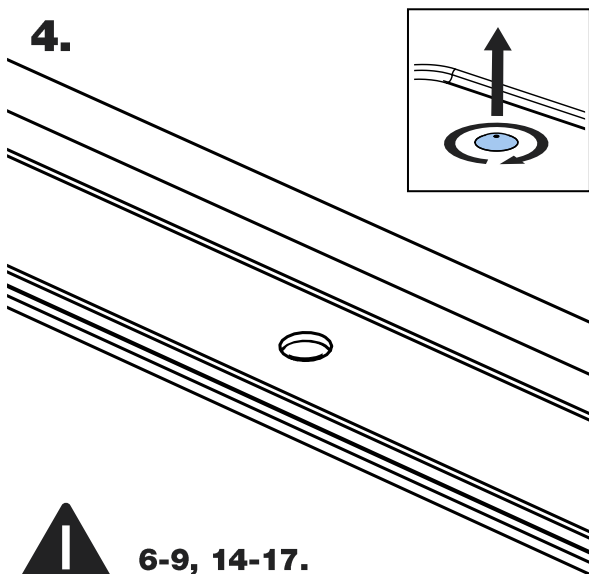

6-9, 14-17.

5.

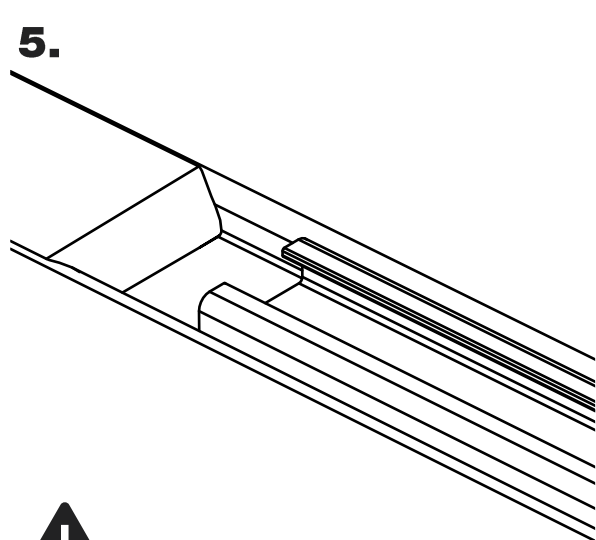

10-17.

