





QA4PR/FL KammBar

Instructions

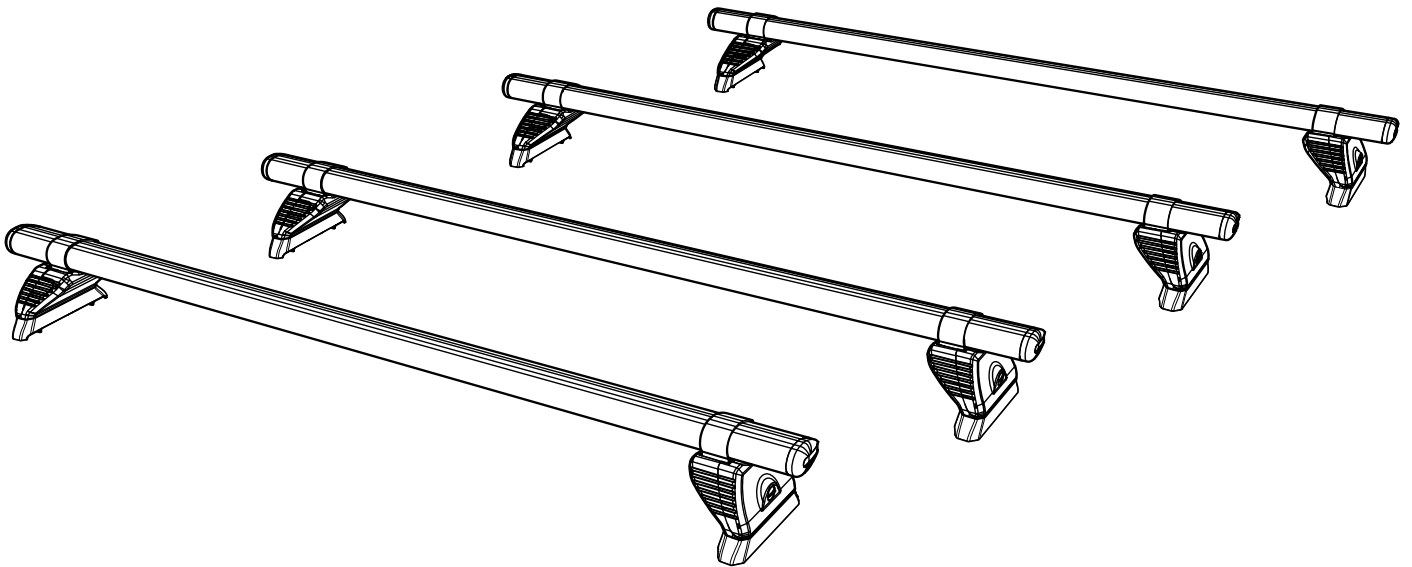


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

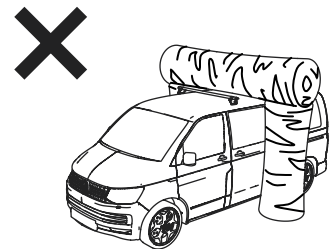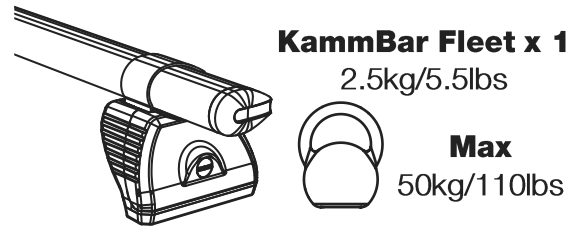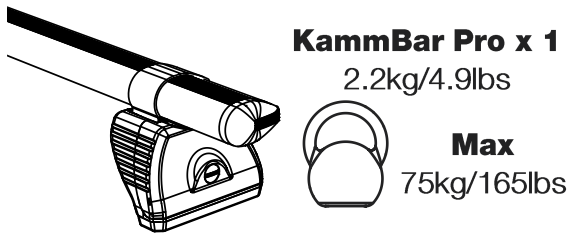


KammBar Pro

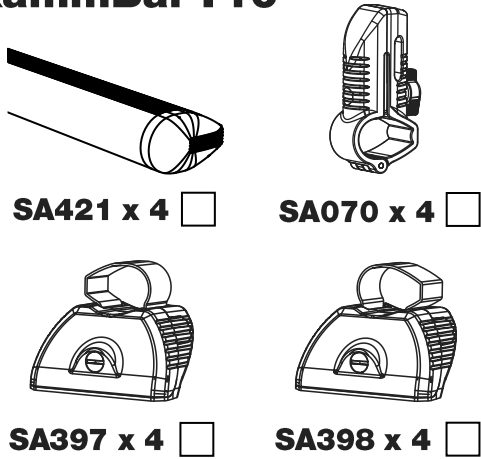


KammBar Fleet

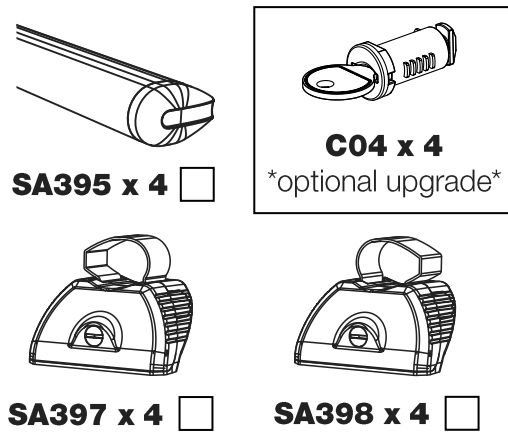


Fitting Kit

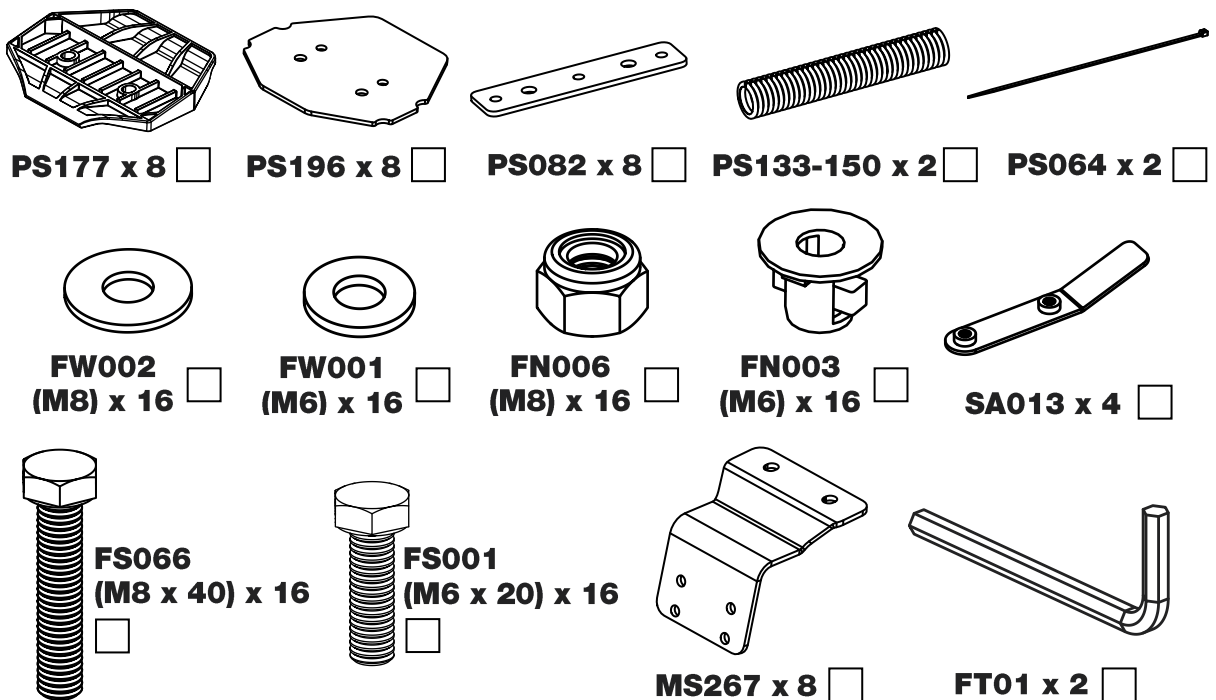

1.

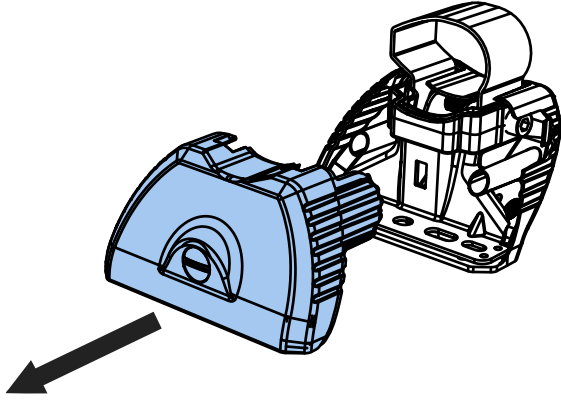

2.

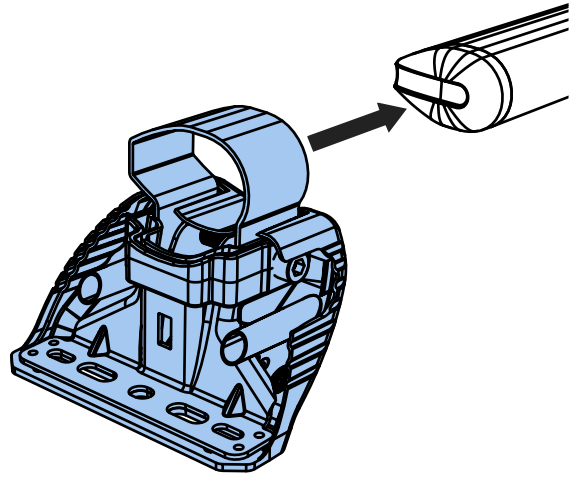

3.



SA397

PS177



SA397

PS177




SA397

PS177




SA397

PS177

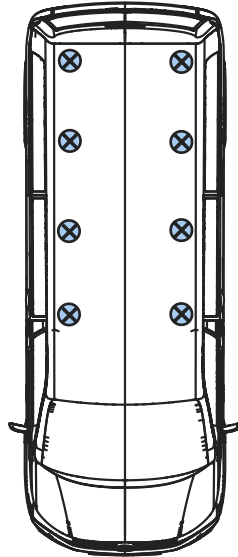


SA398




PS177

SA398




PS177

SA398




PS177

SA398










PS177







4.






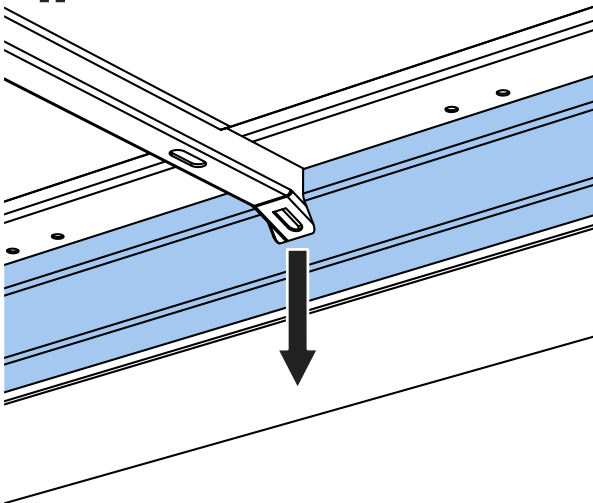


5.

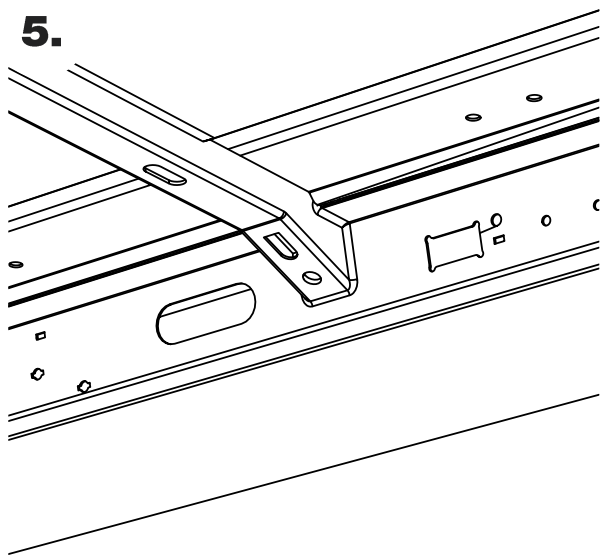


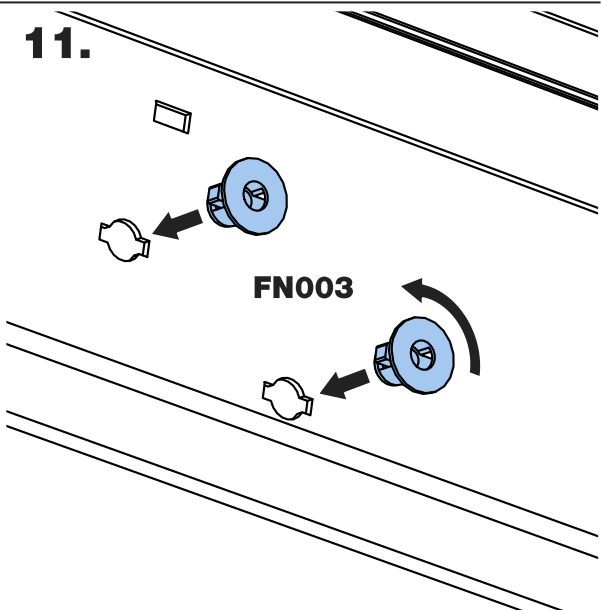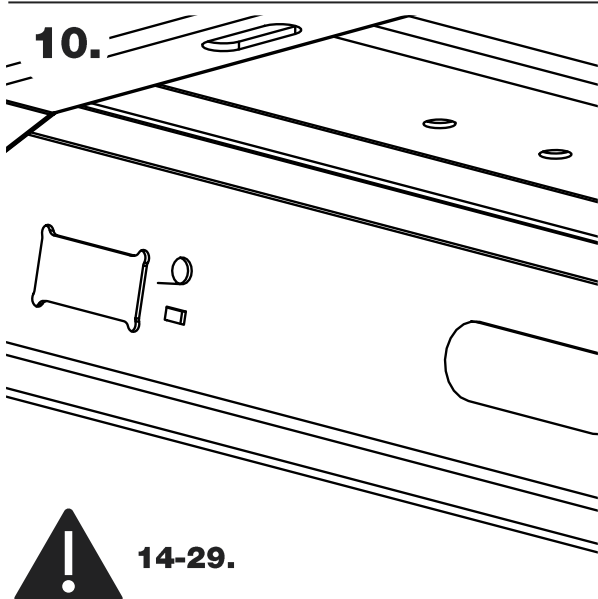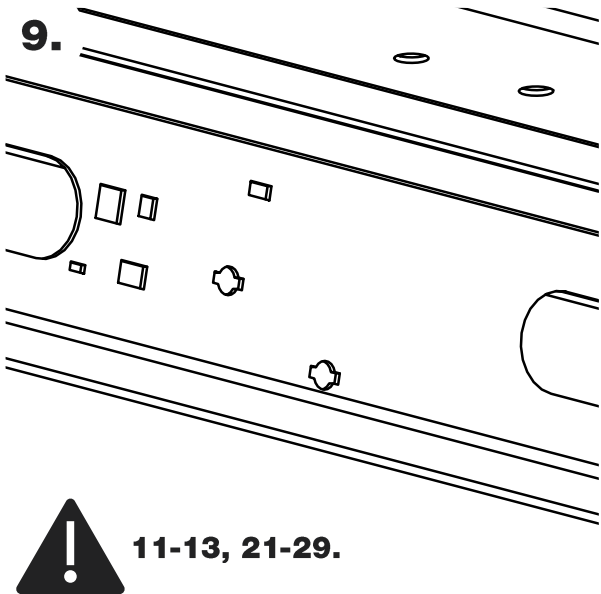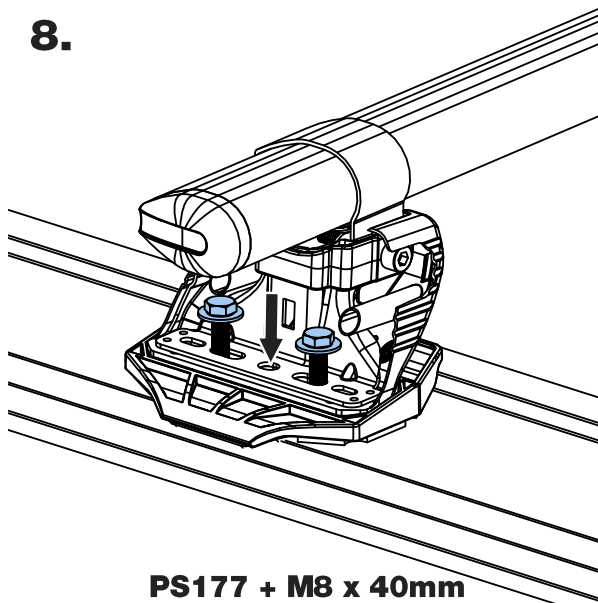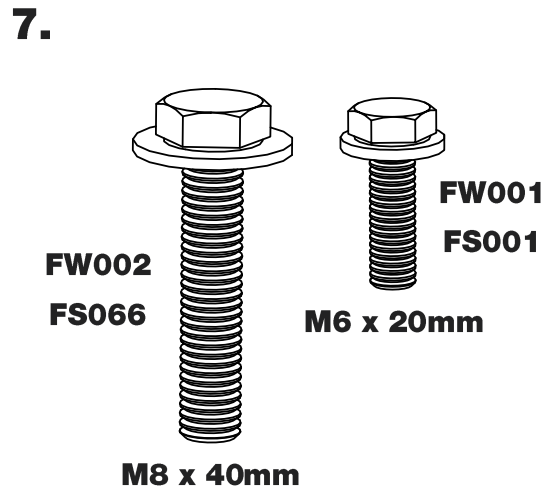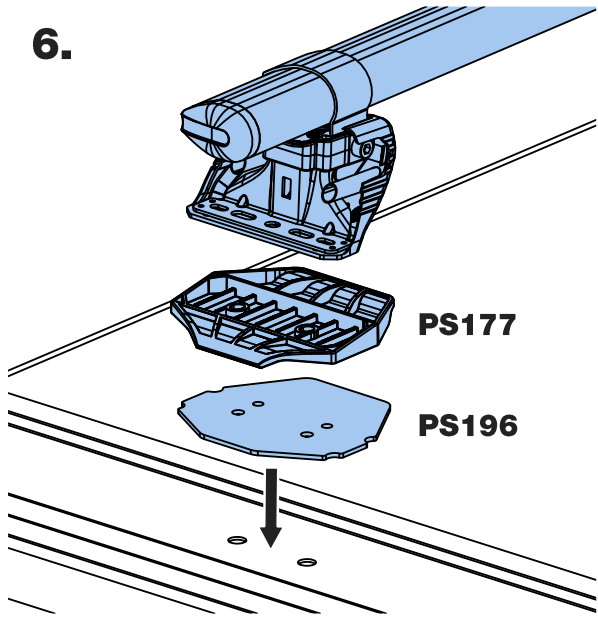

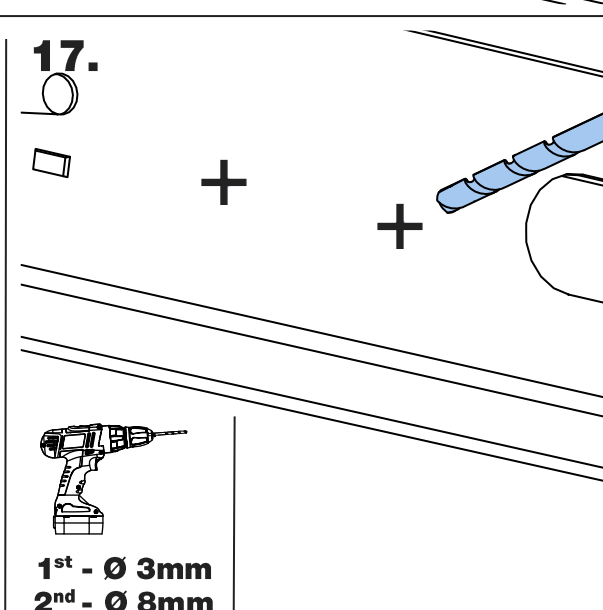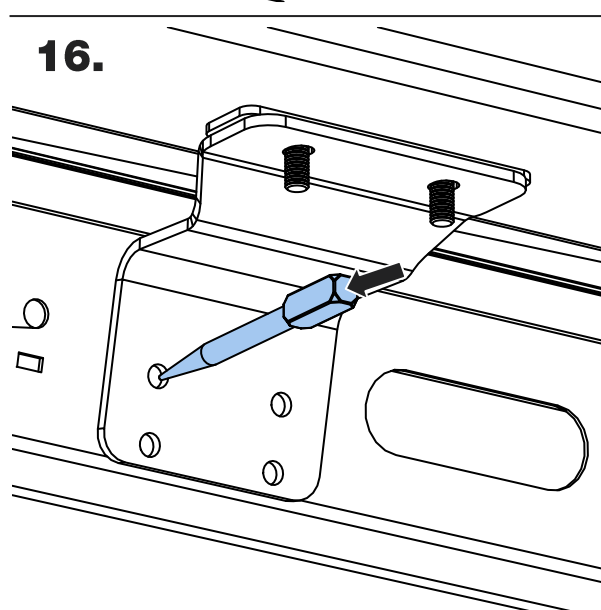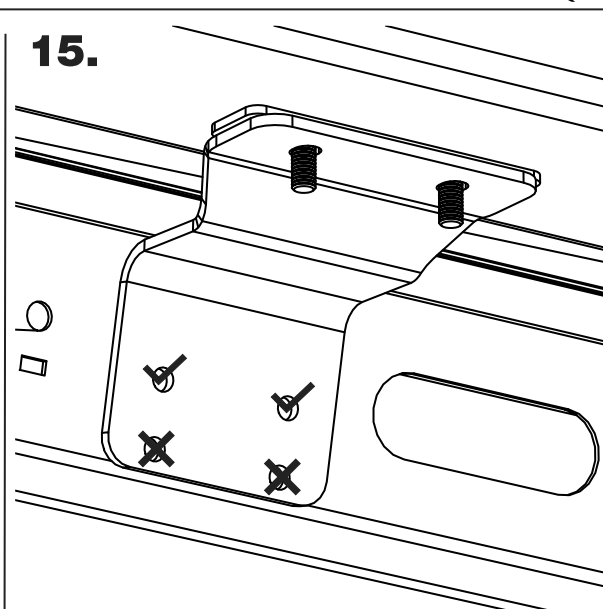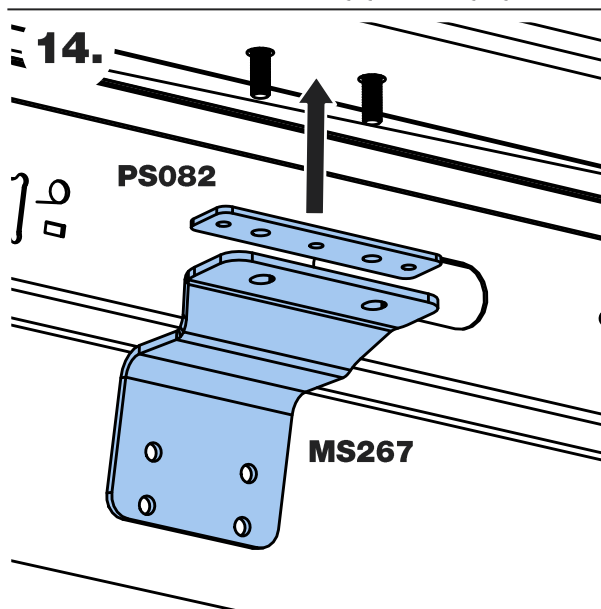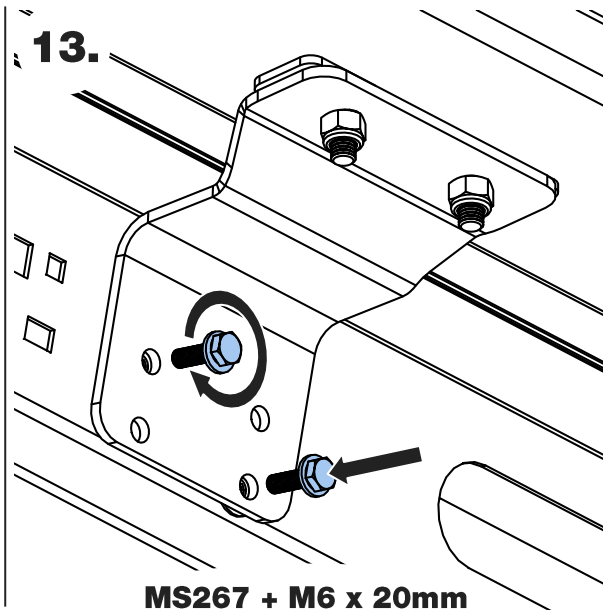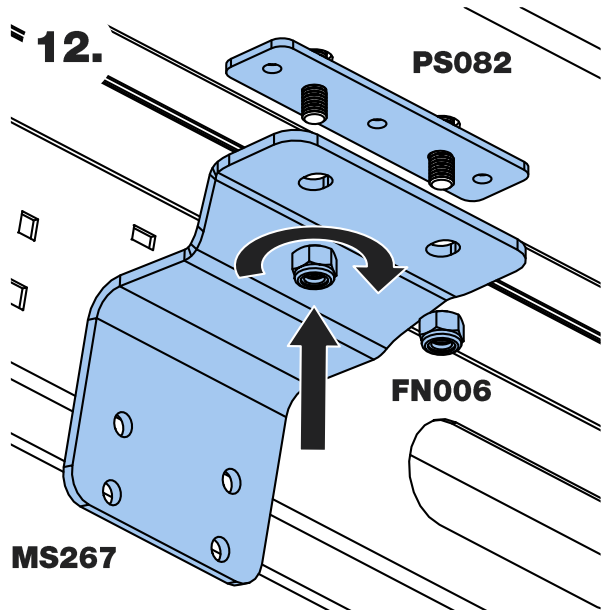


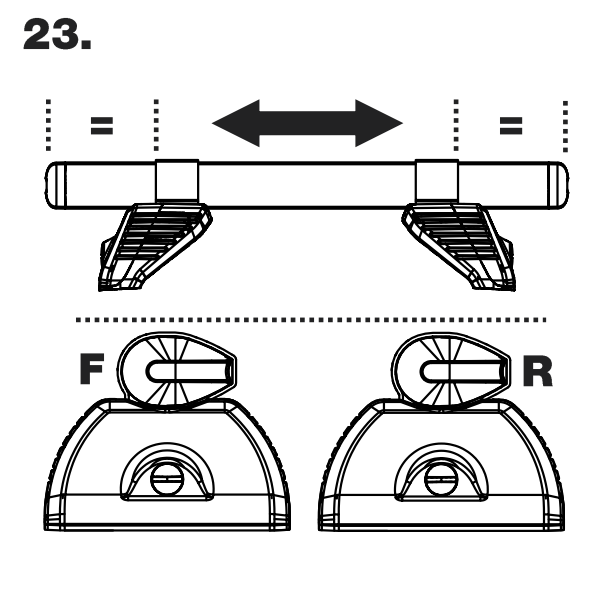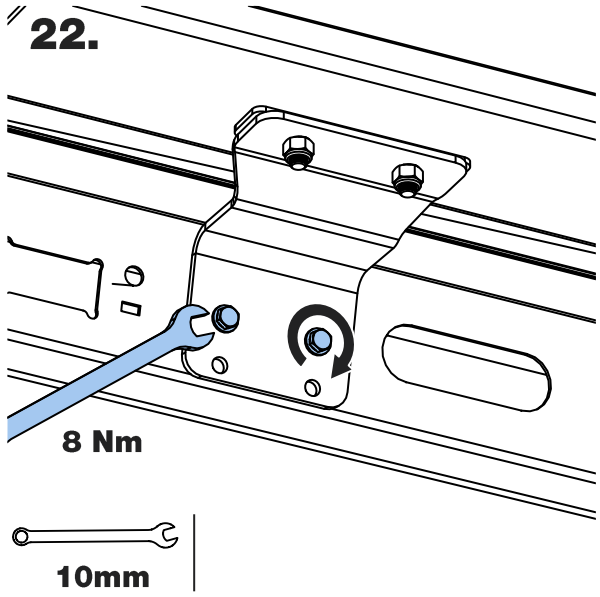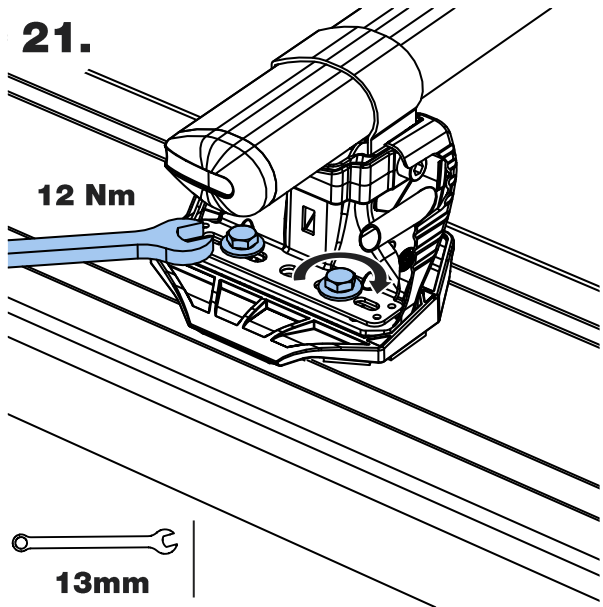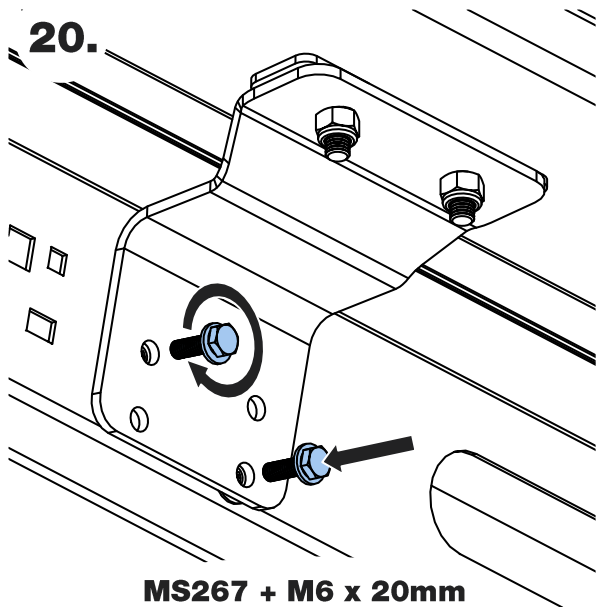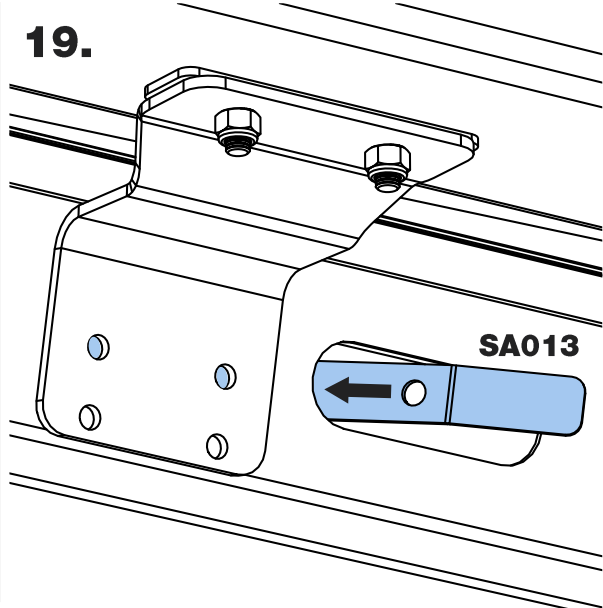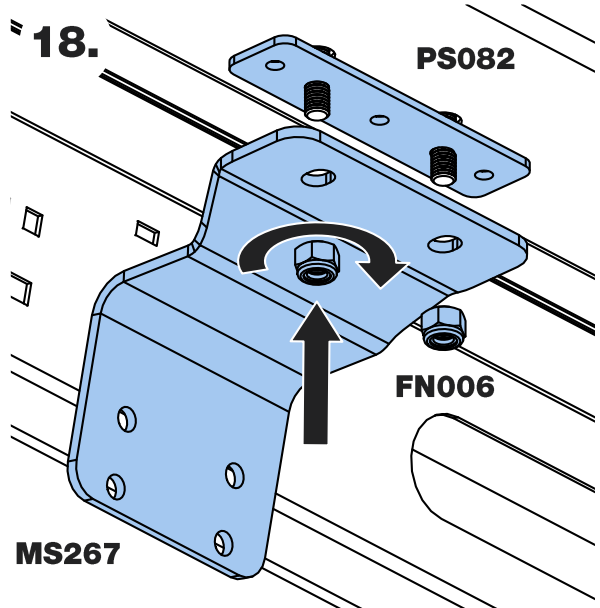


24.

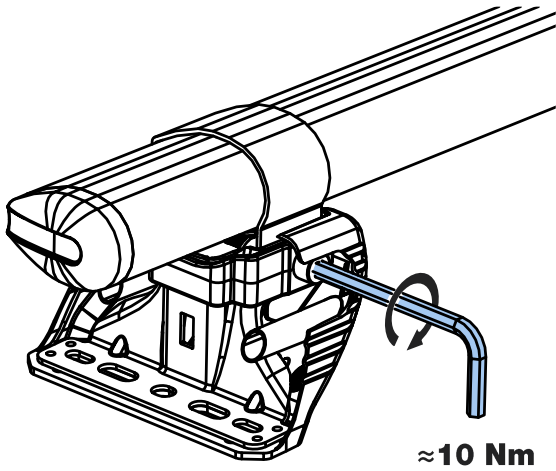


25.

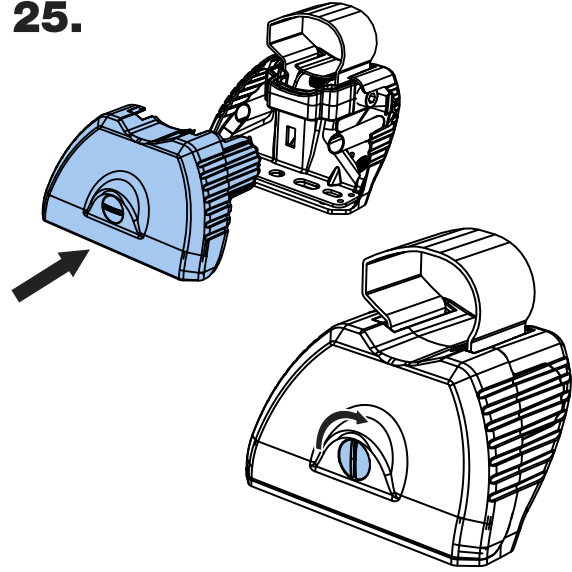


26.

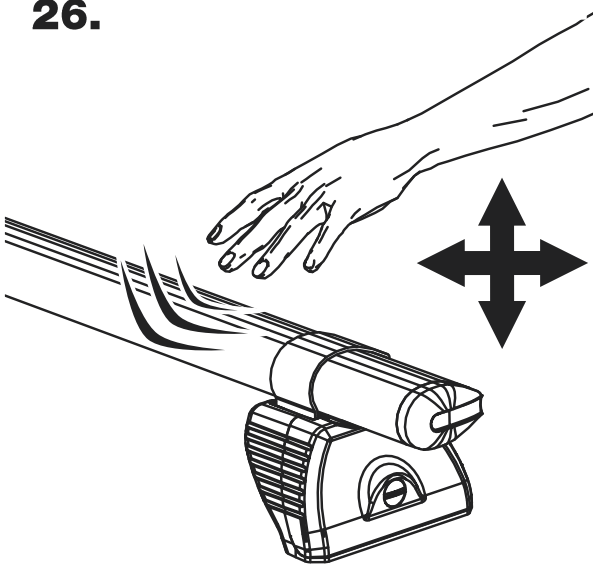

27.

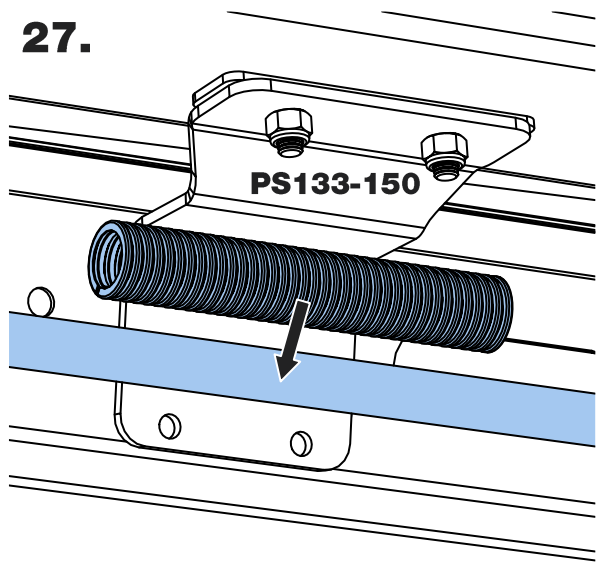

28.

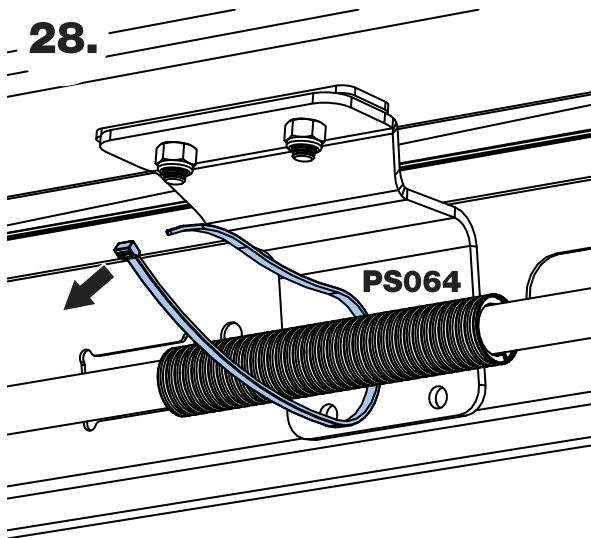

29.

