


# RA2PR/FL




# KammBar

## Instructions

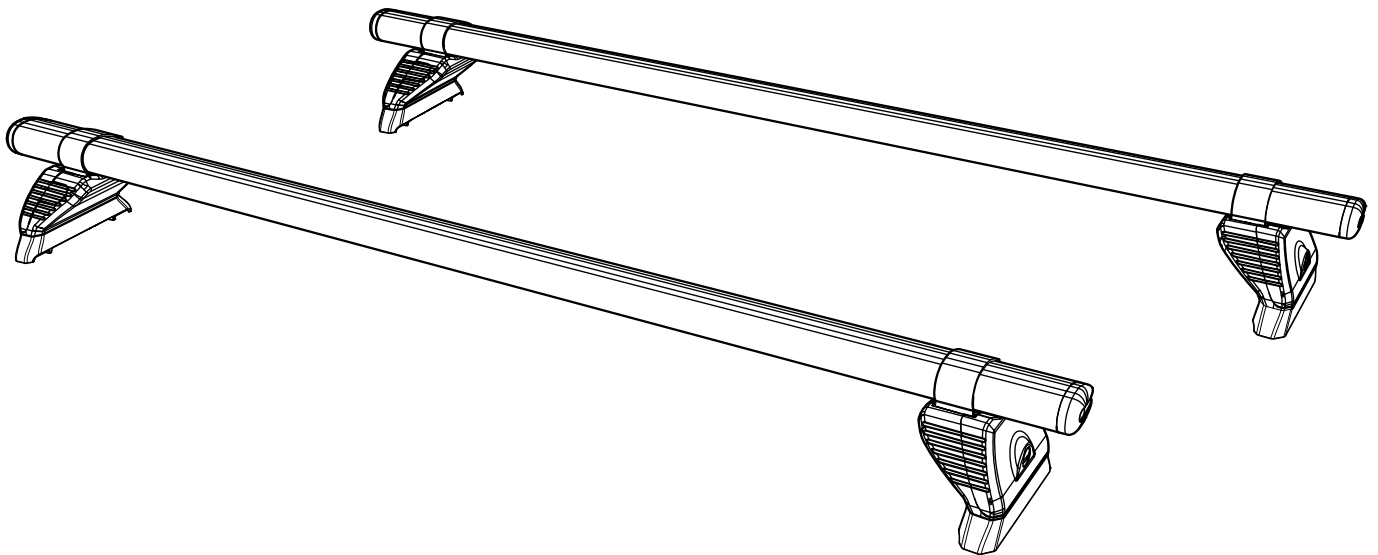


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

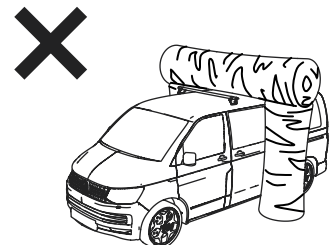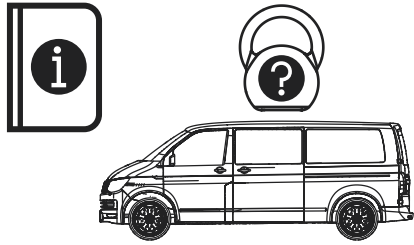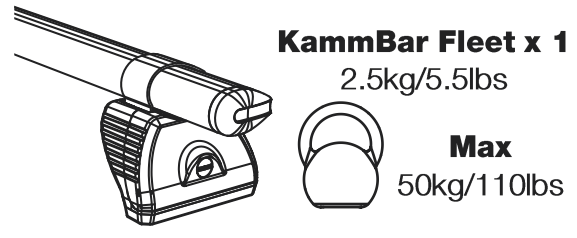


### KammBar Pro

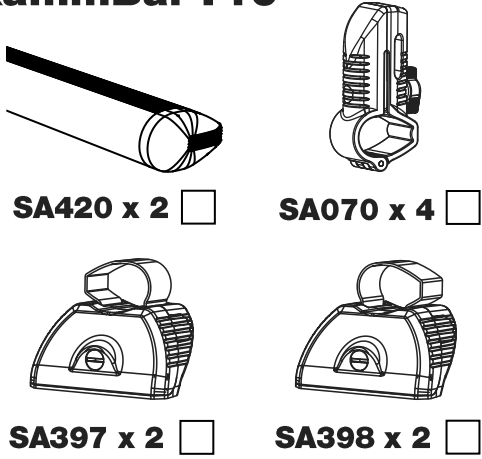

### KammBar Fleet

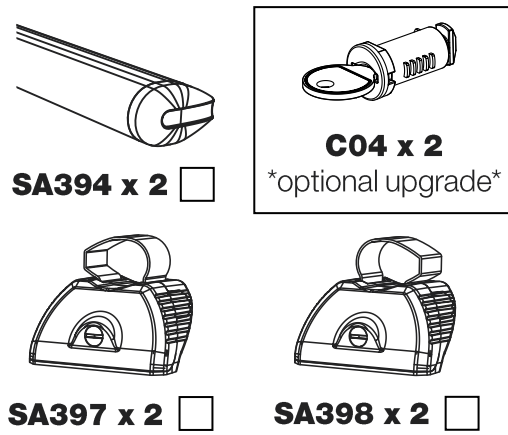


### Fitting Kit

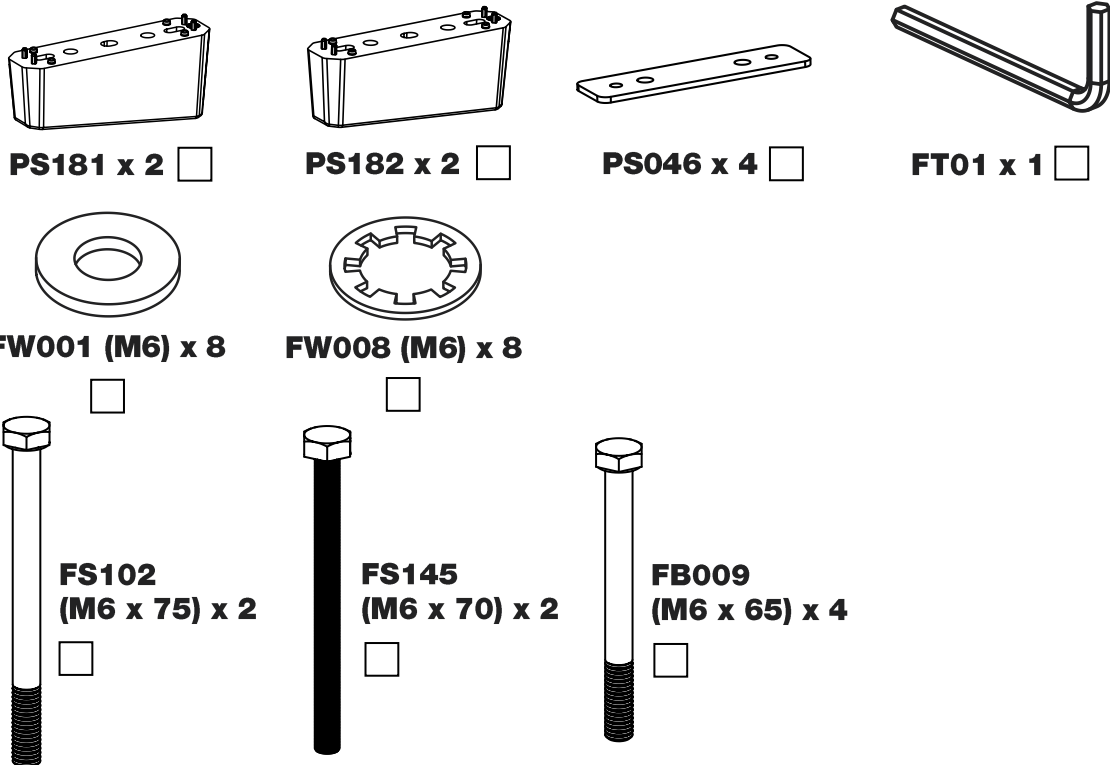


1.



2.

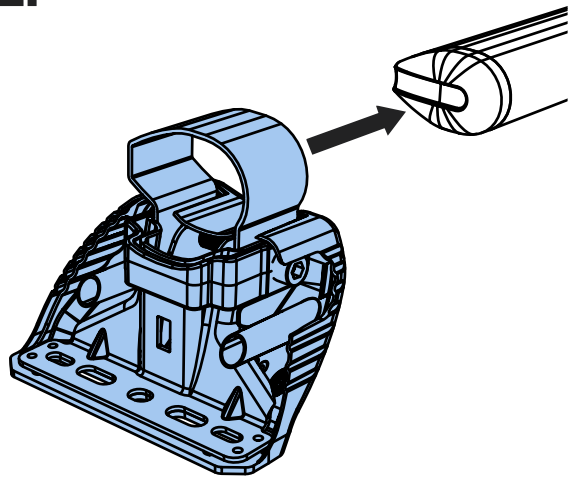


3.



SA397


PS182

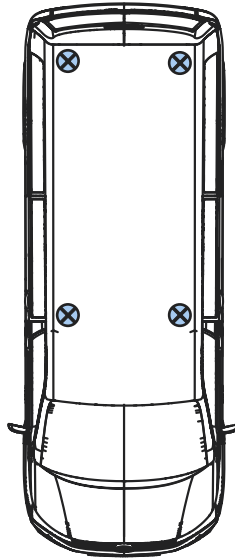

SA398




PS182



SA397


PS181

SA398










PS181

4.

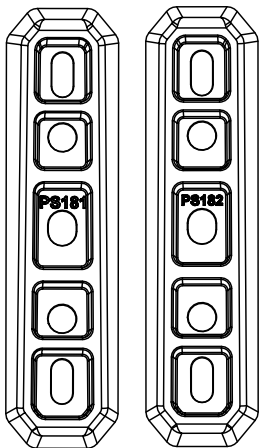


5.

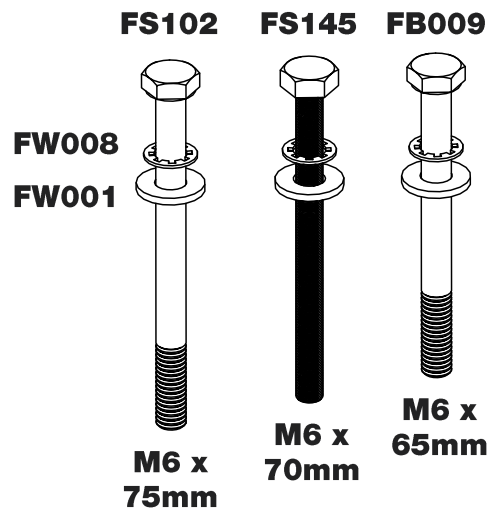

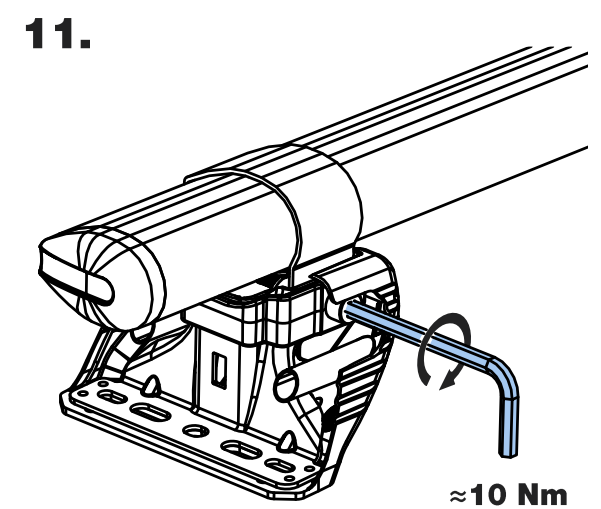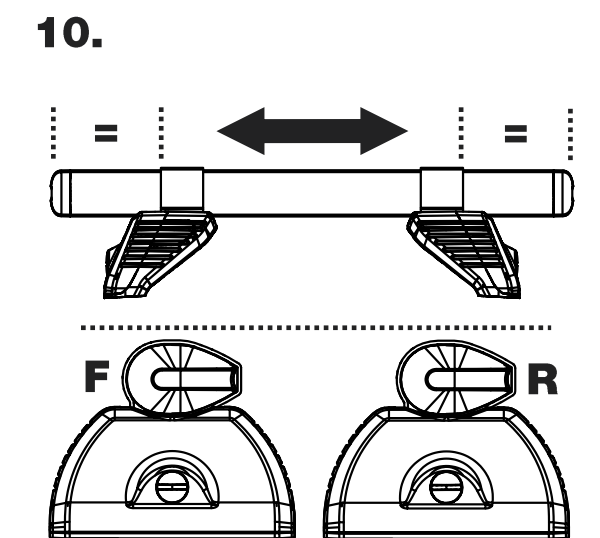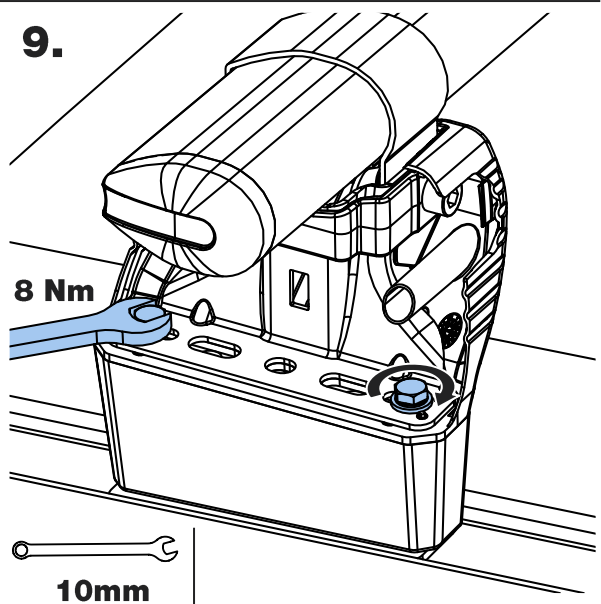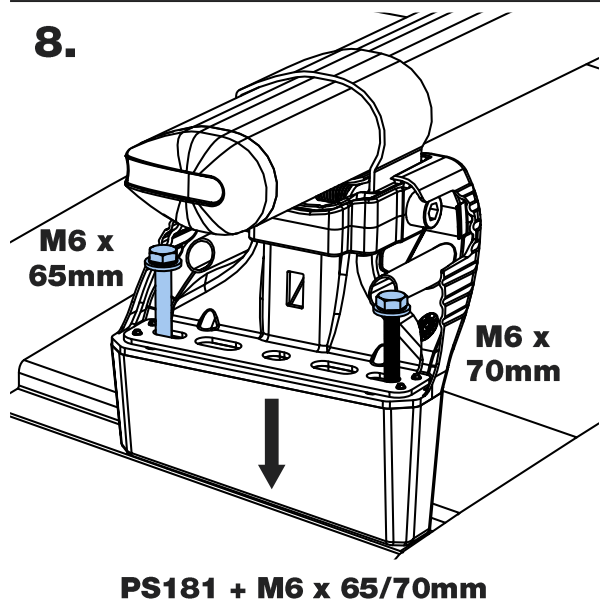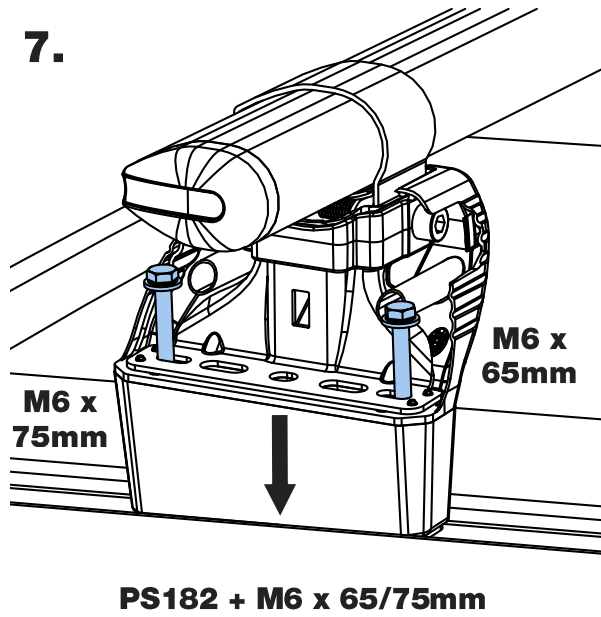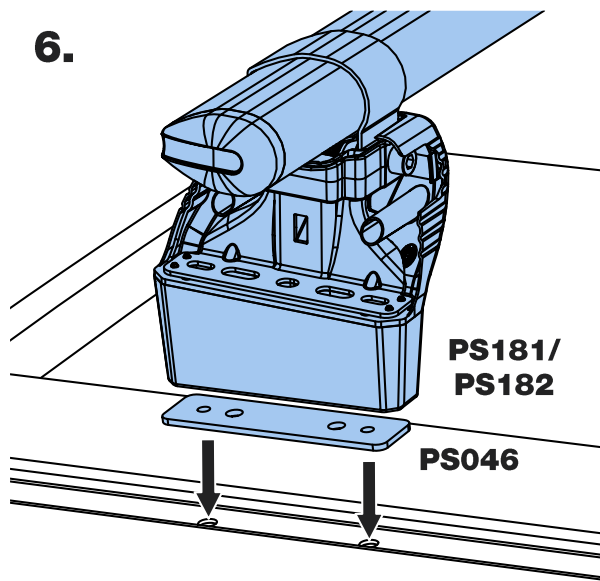

**12.**

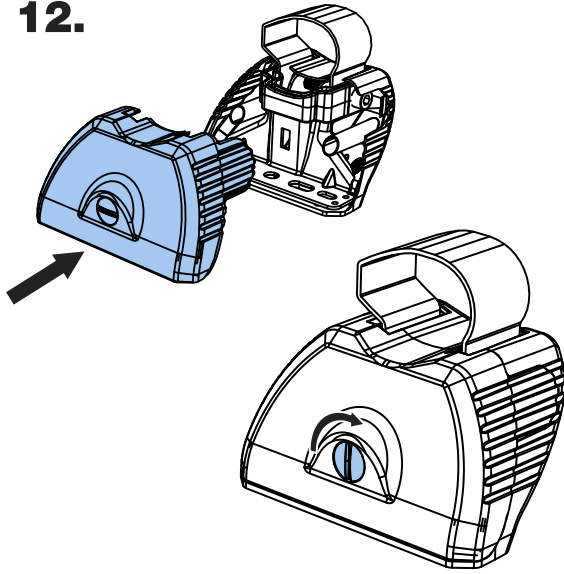

**13.**

