






# T54PR/FL KammBar

## Instructions


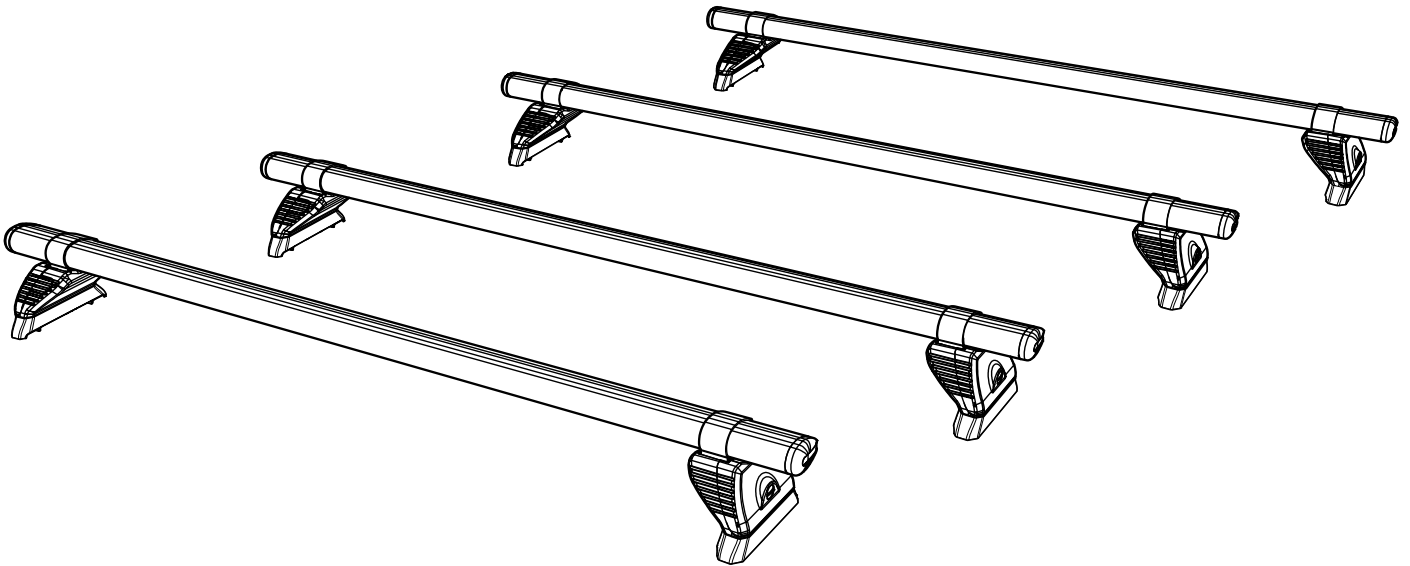


**CITY CRASH** (✓)



According to ISO/ PAS 11154:2006

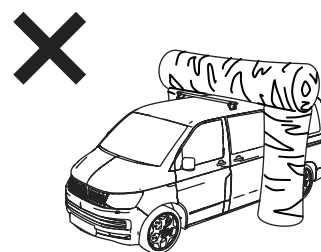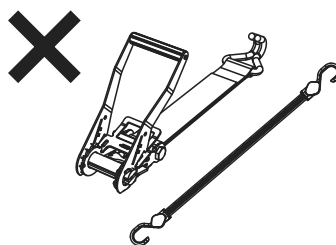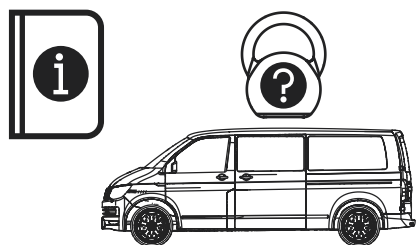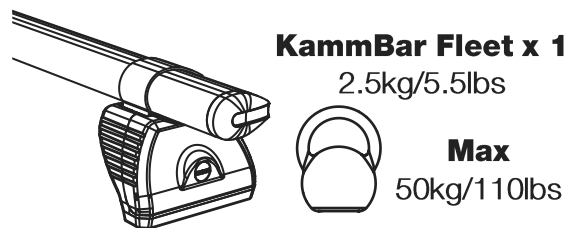


## KammBar Pro

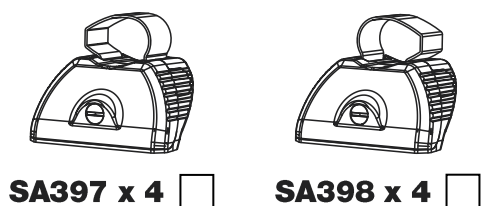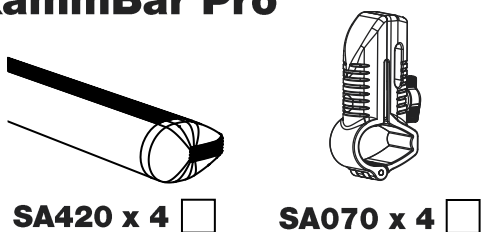


## KammBar Fleet

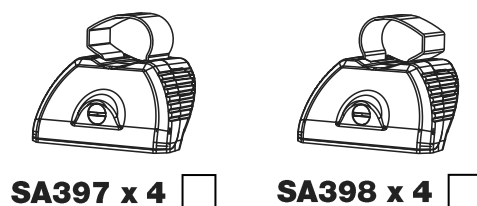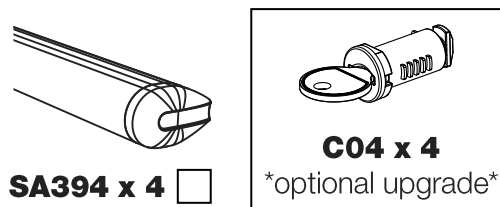


## Fitting Kit

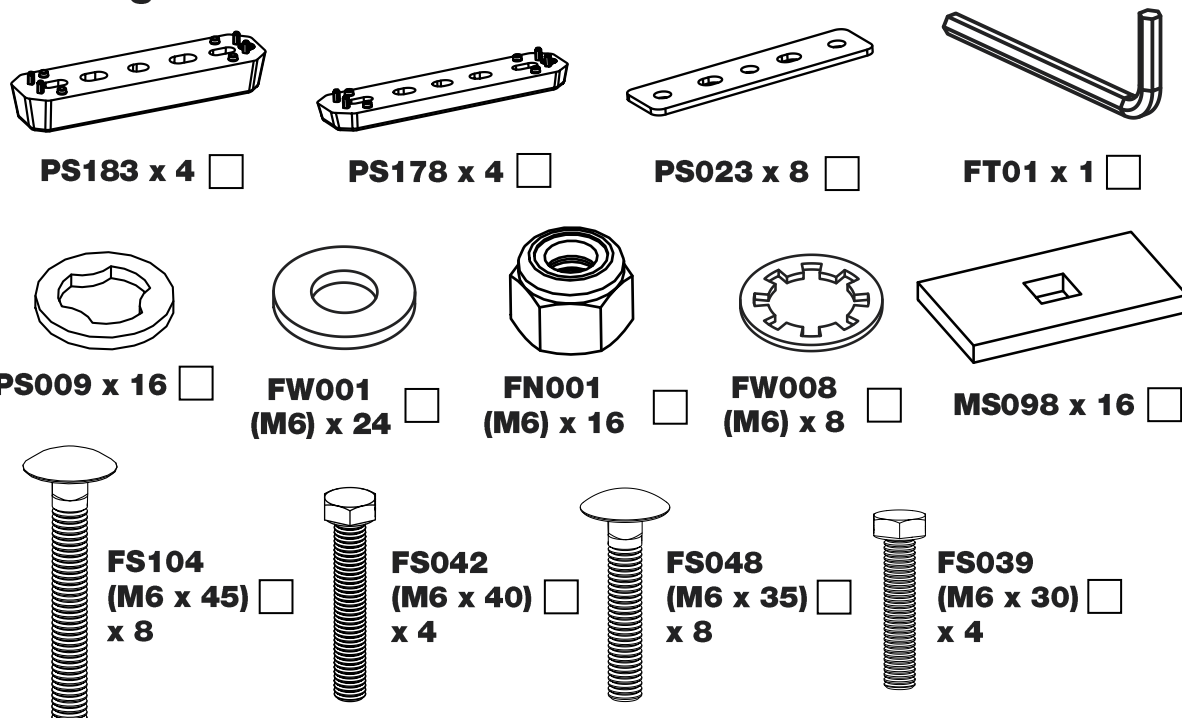


1.

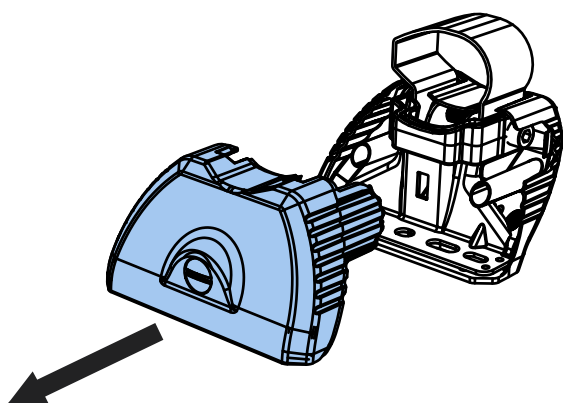

2.

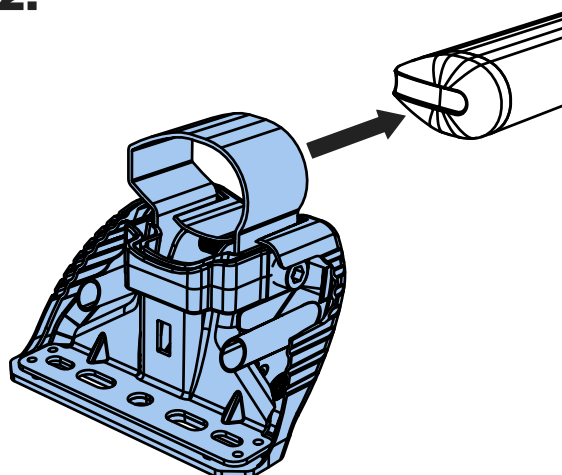


3.




**SA397**

**PS183**




**SA397**

**PS178**




**SA397**

**PS178**




**SA397**

**PS183**

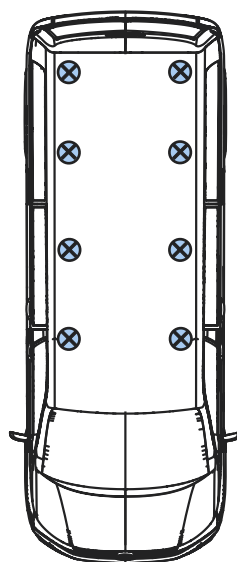


**SA398**

**PS183**




**SA398**

**PS178**




**SA398**

**PS178**




**SA398**

**PS183**




4.






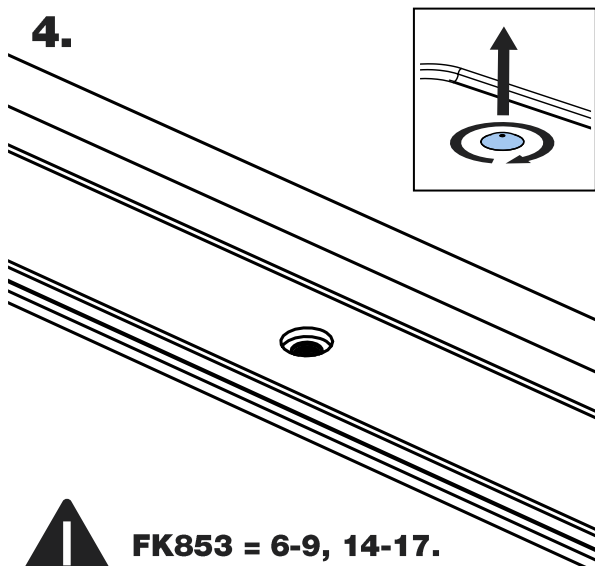


**FK853 = 6-9, 14-17.**


5.

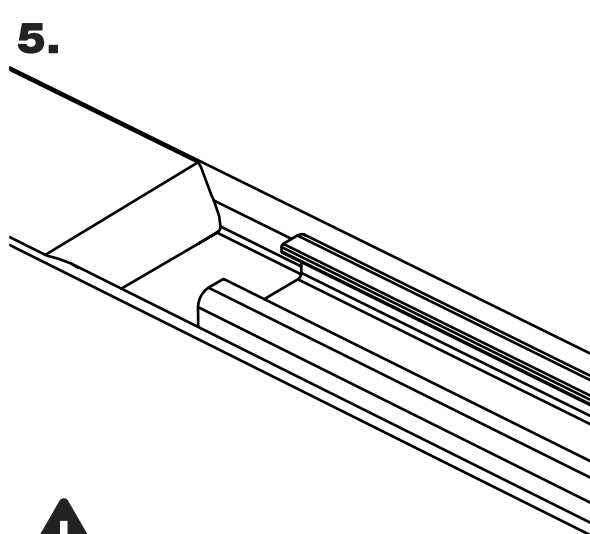

**FK862 = 10-17.**

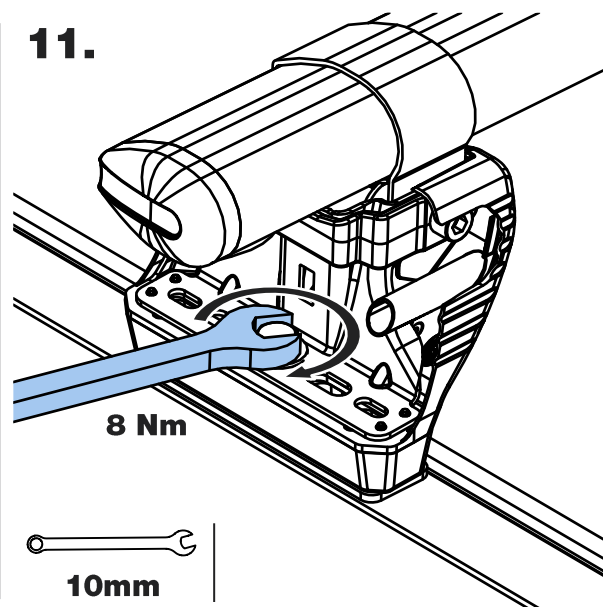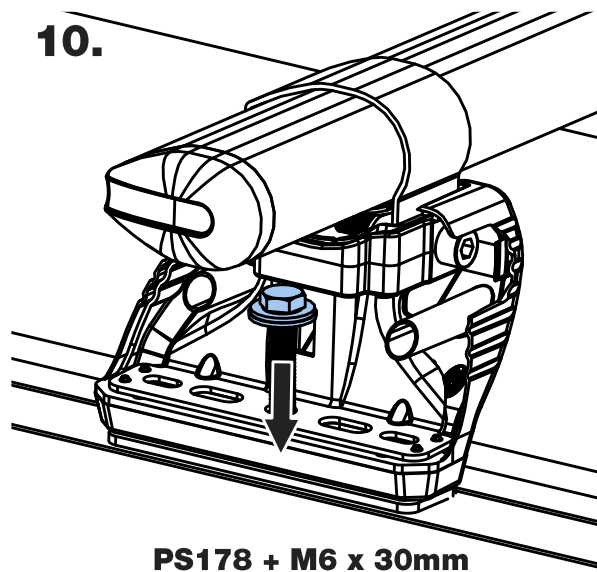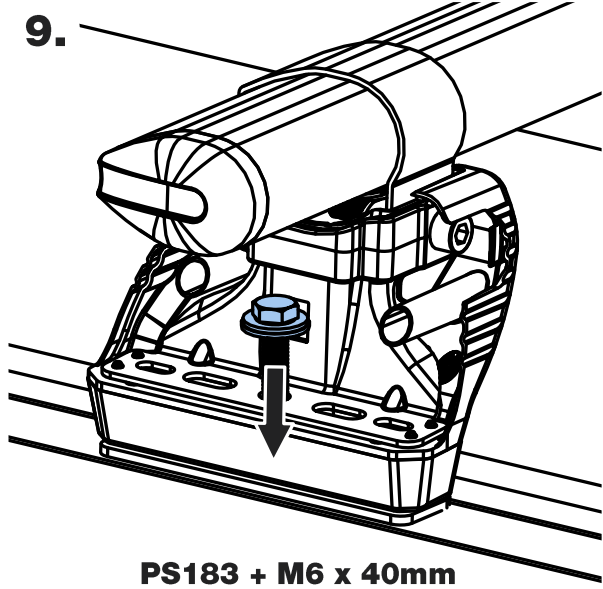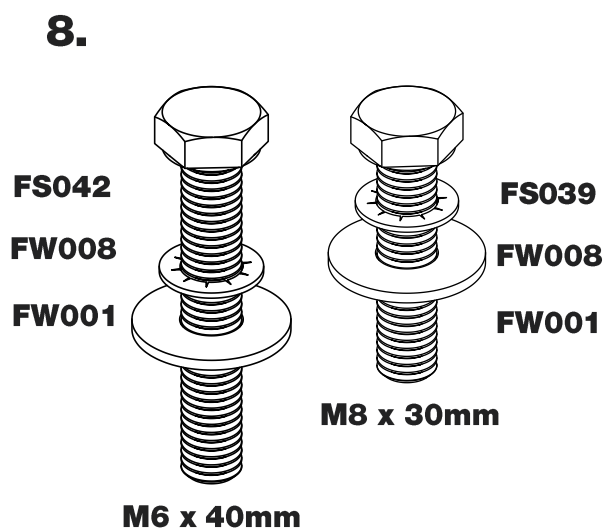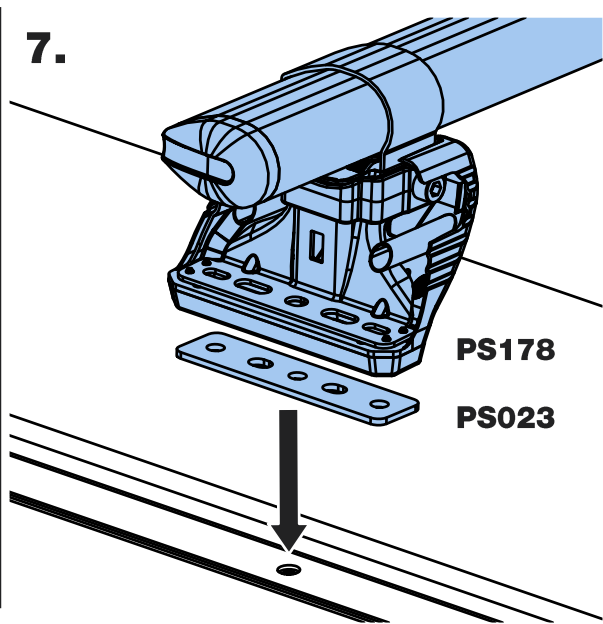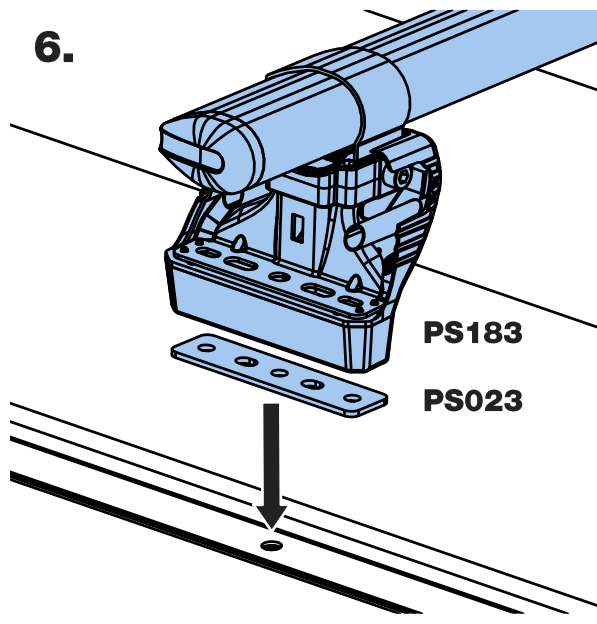


**12.**

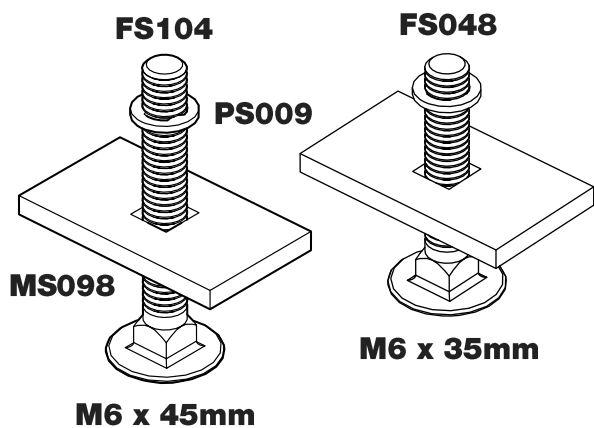


**13.**


- 1st. M6 x 45mm x 2
- 2nd. M6 x 35mm x 2
- 3rd. M6 x 35mm x 2
- 4th. M6 x 45mm x 2

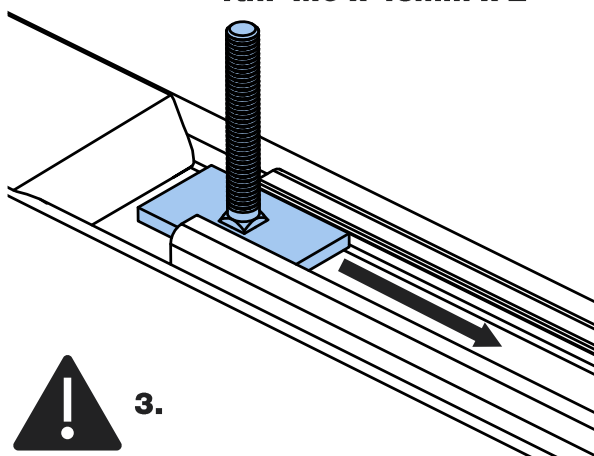


**14.**

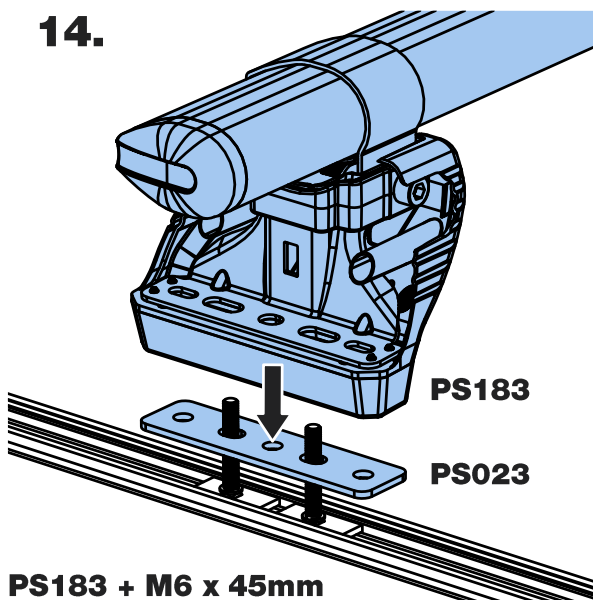


**15.**

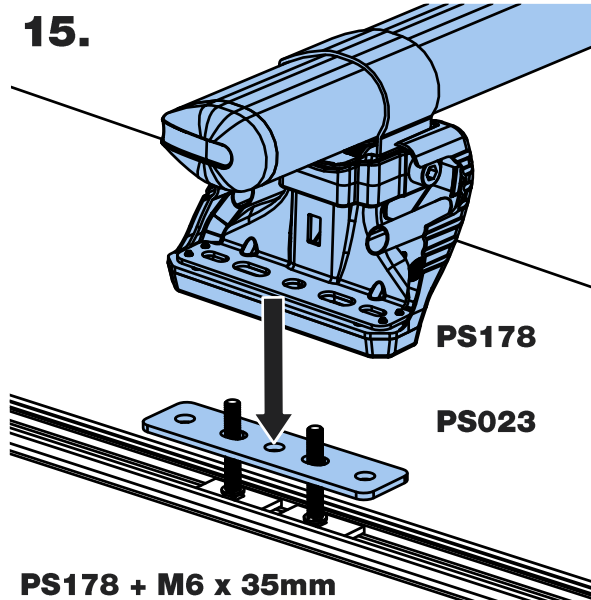


**16.**

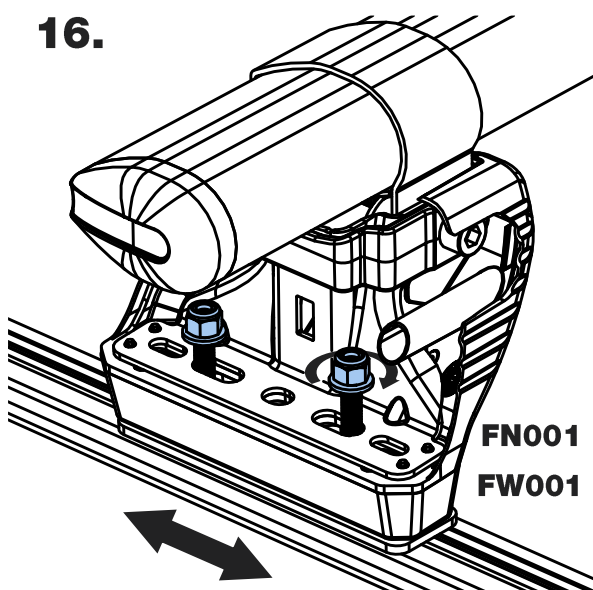


**17.**

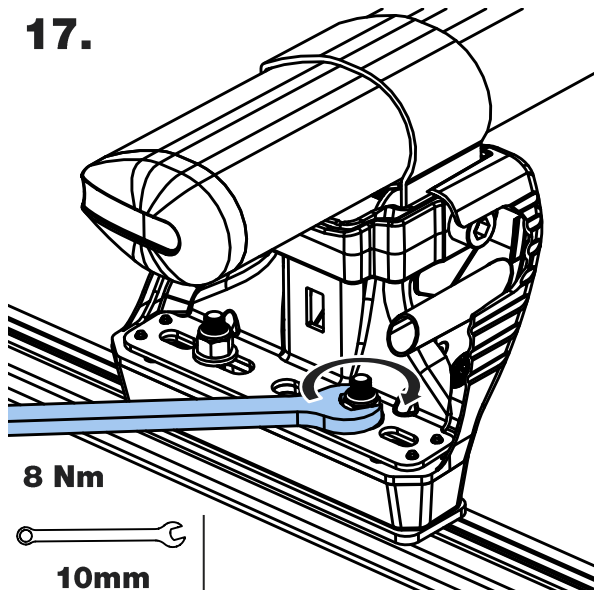


18.

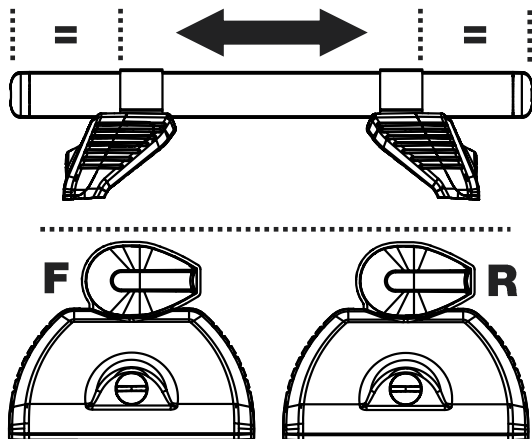

19.

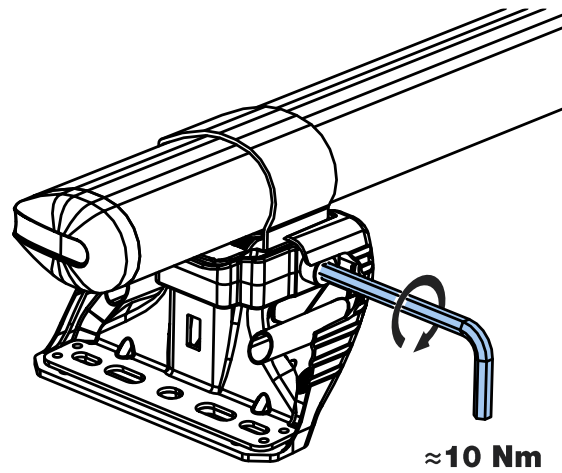

20.

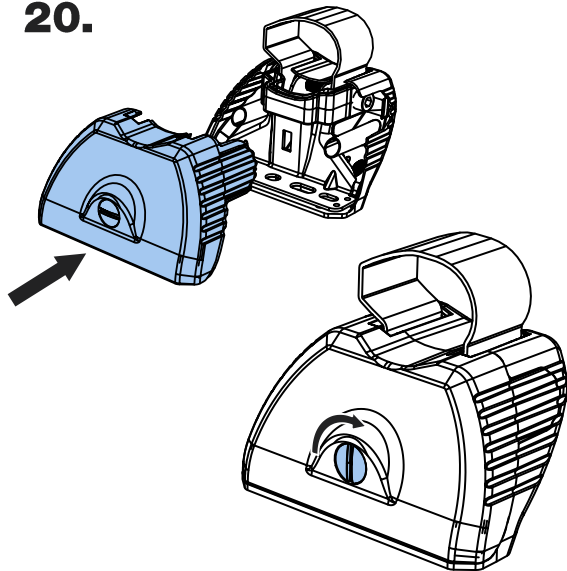

21.

