


# TA2PR/FL





# KammBar

## Instructions

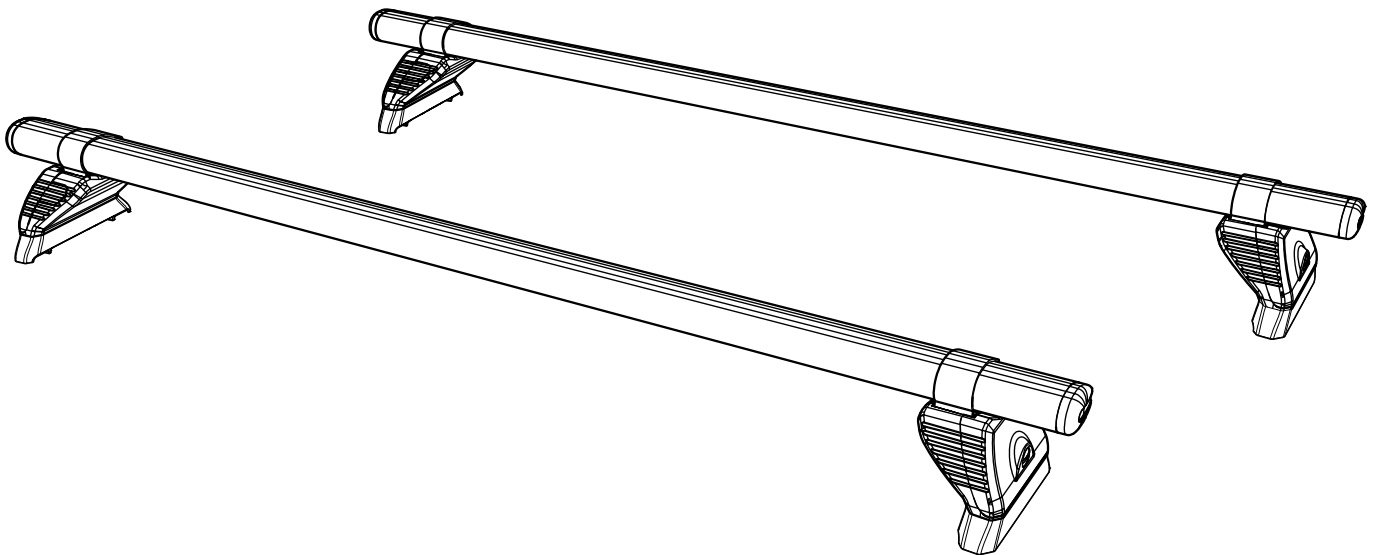


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

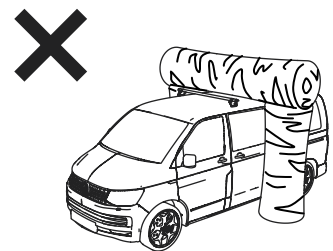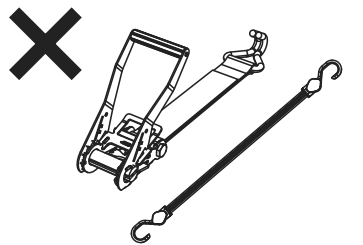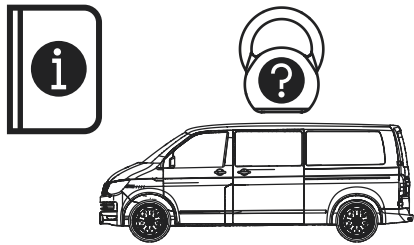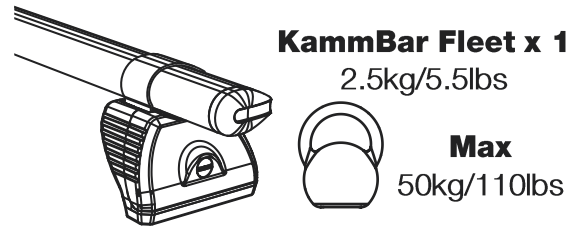


### KammBar Pro

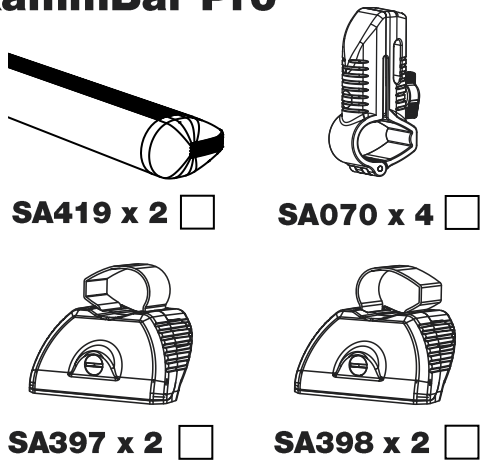


### KammBar Fleet

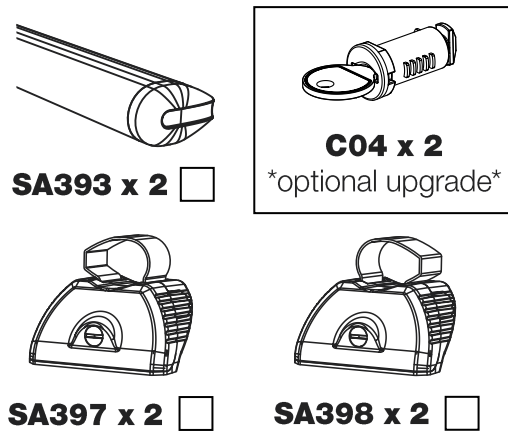


### Fitting Kit

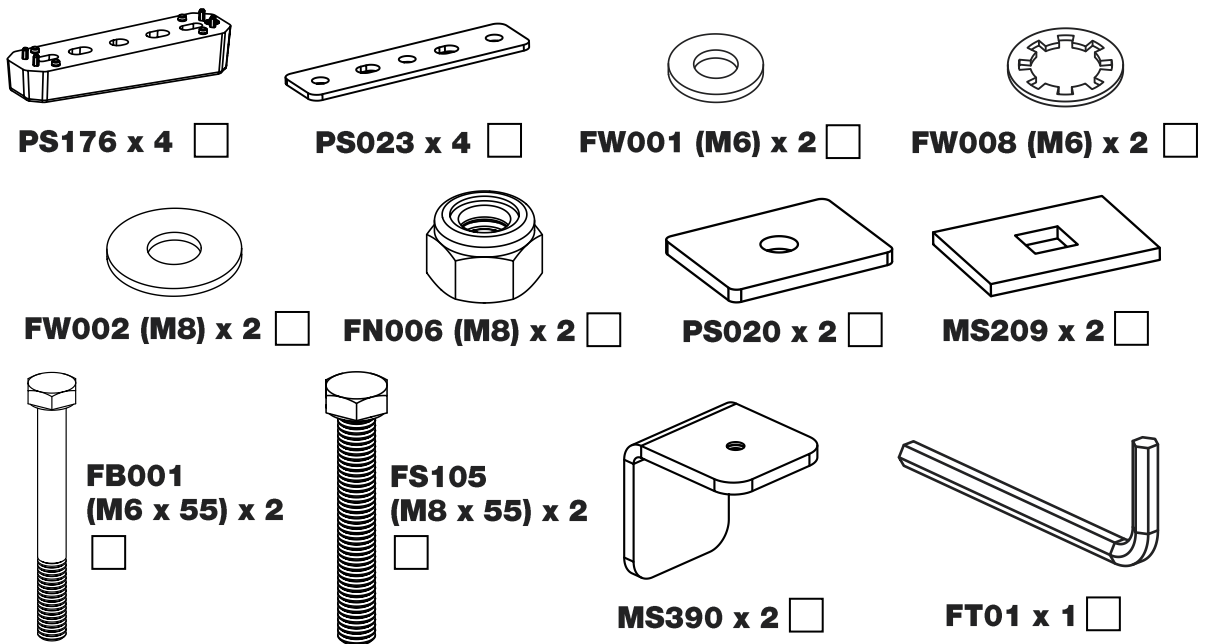


1.

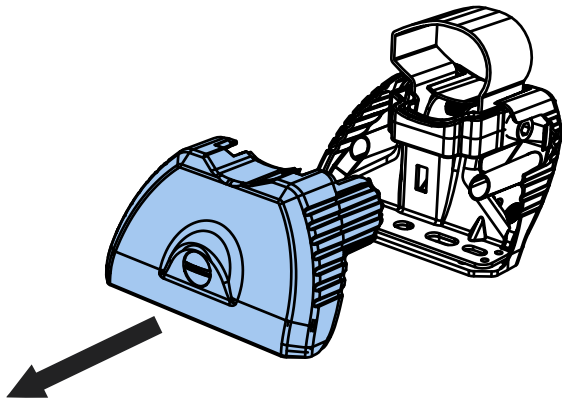

2.

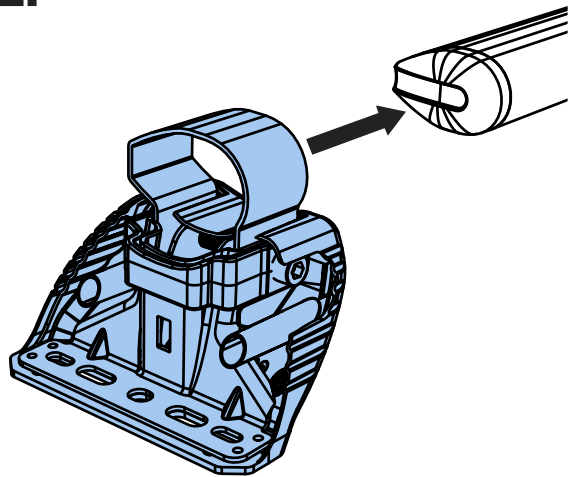

3.





SA397

PS176

SA398

PS176





SA397


PS176

SA398

PS176

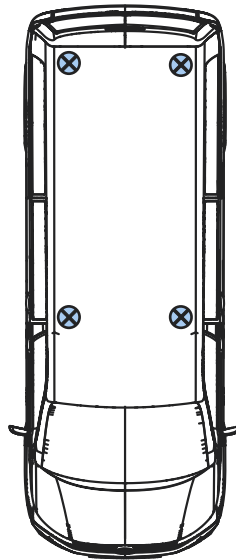


4.

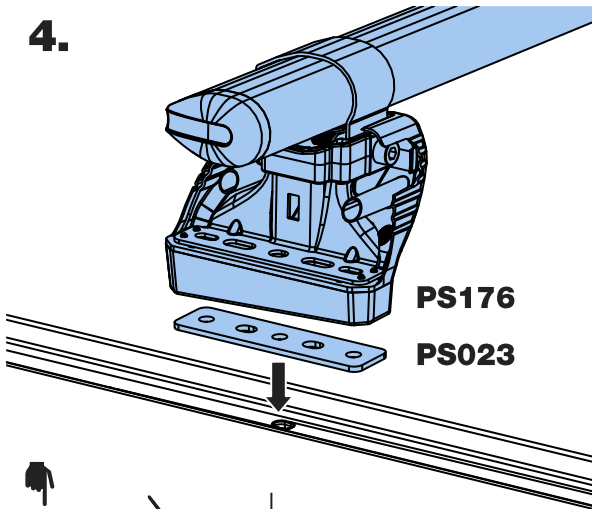

PS176

PS023


5.

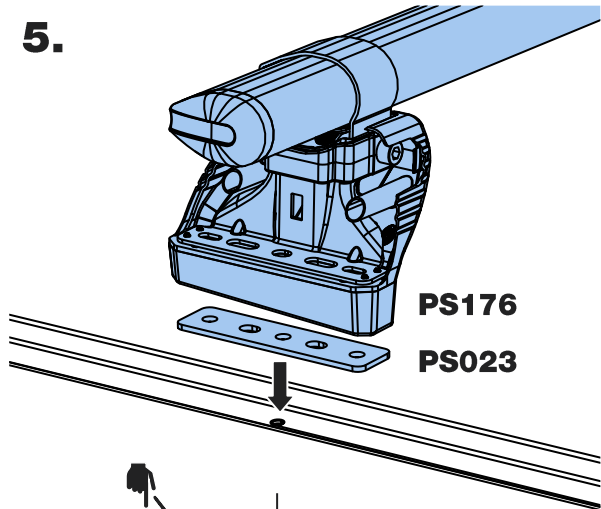


PS176

PS023


6.

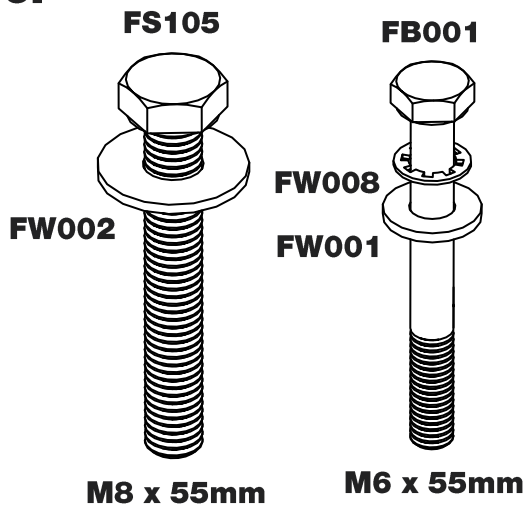


7.

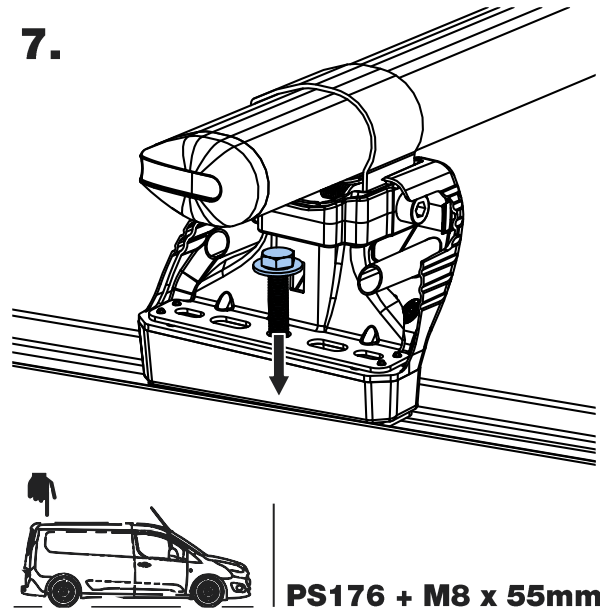


8.

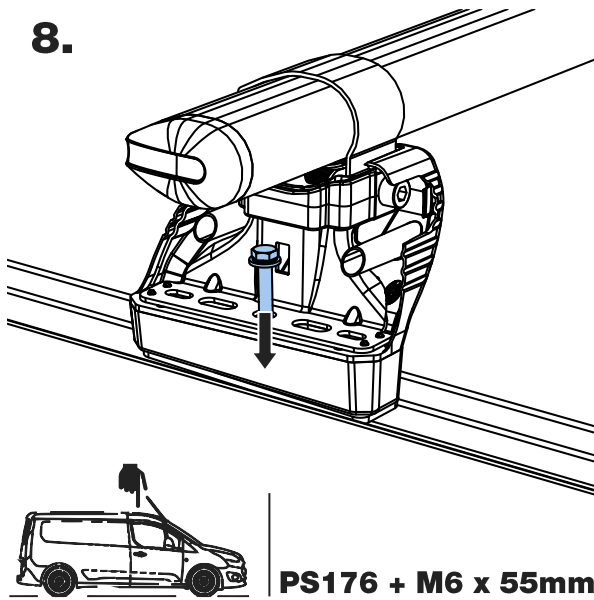


9.

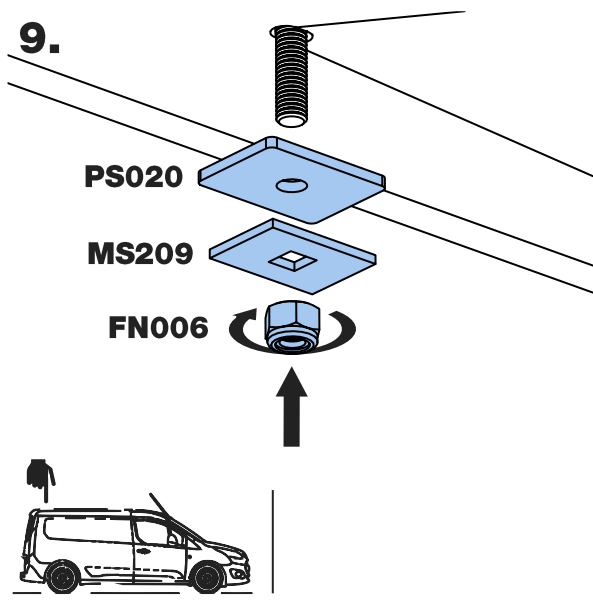


10.

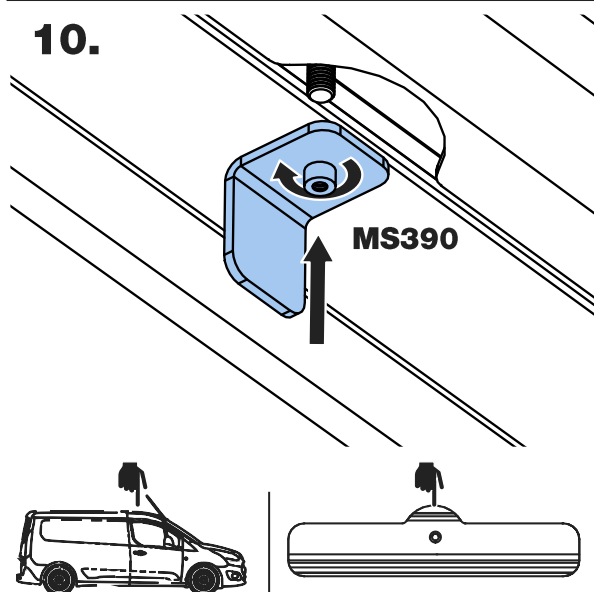


11.

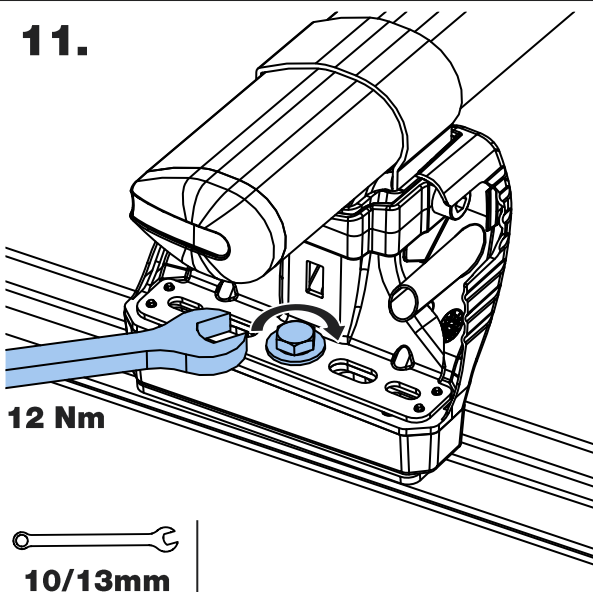


12.

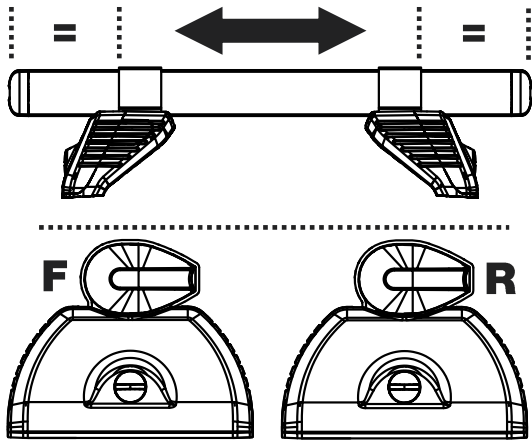

13.

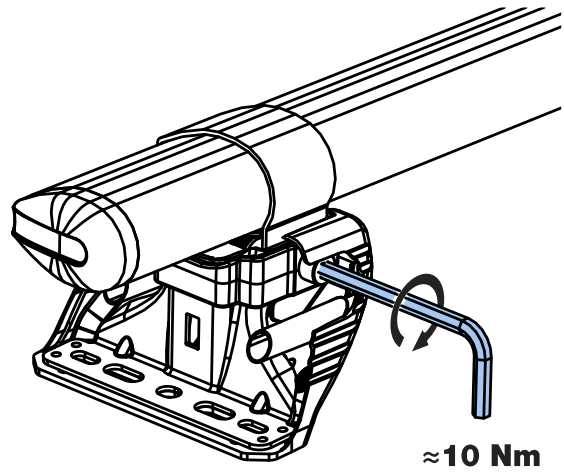

14.

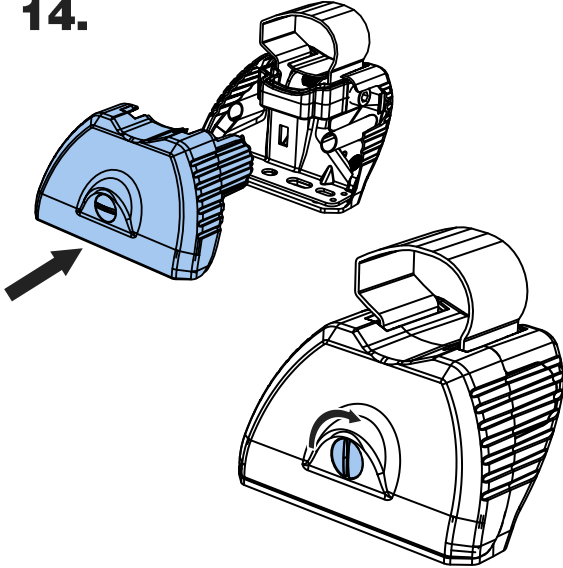

15.

