


TD2PR/FL




KammBar

Instructions

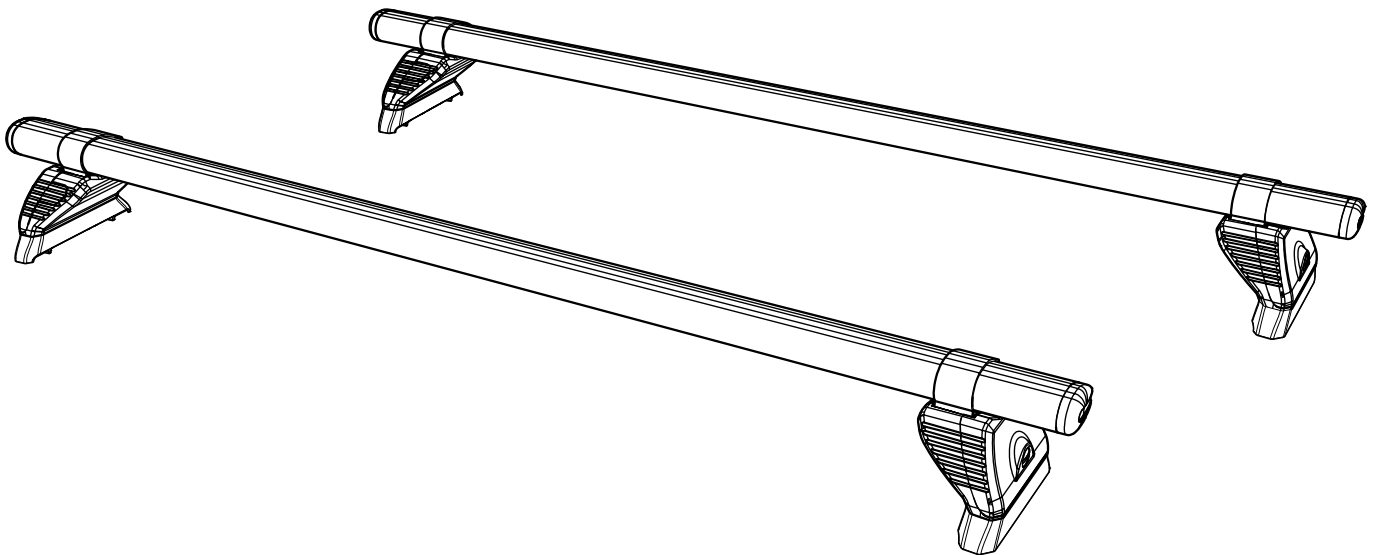


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

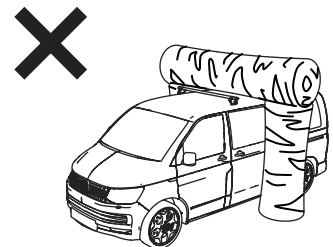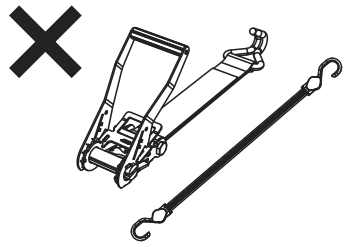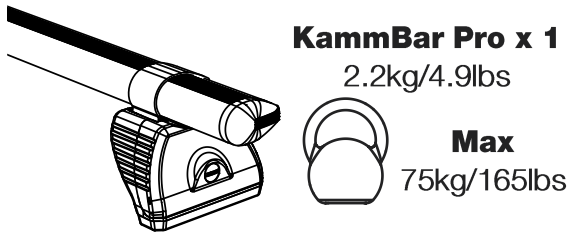


KammBar Pro

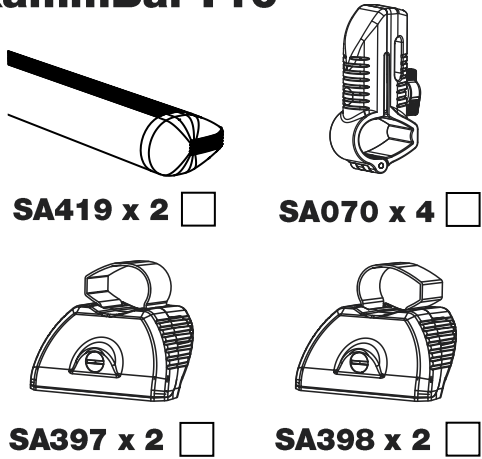

KammBar Fleet

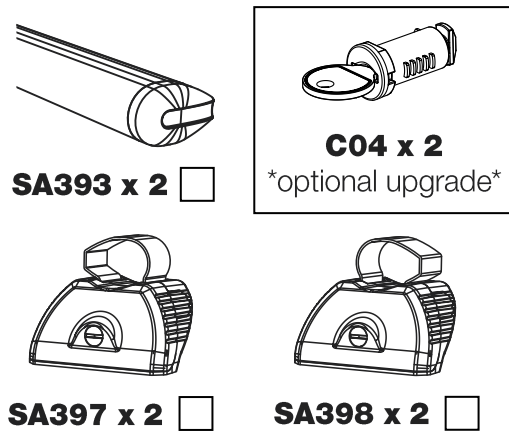

Fitting Kit

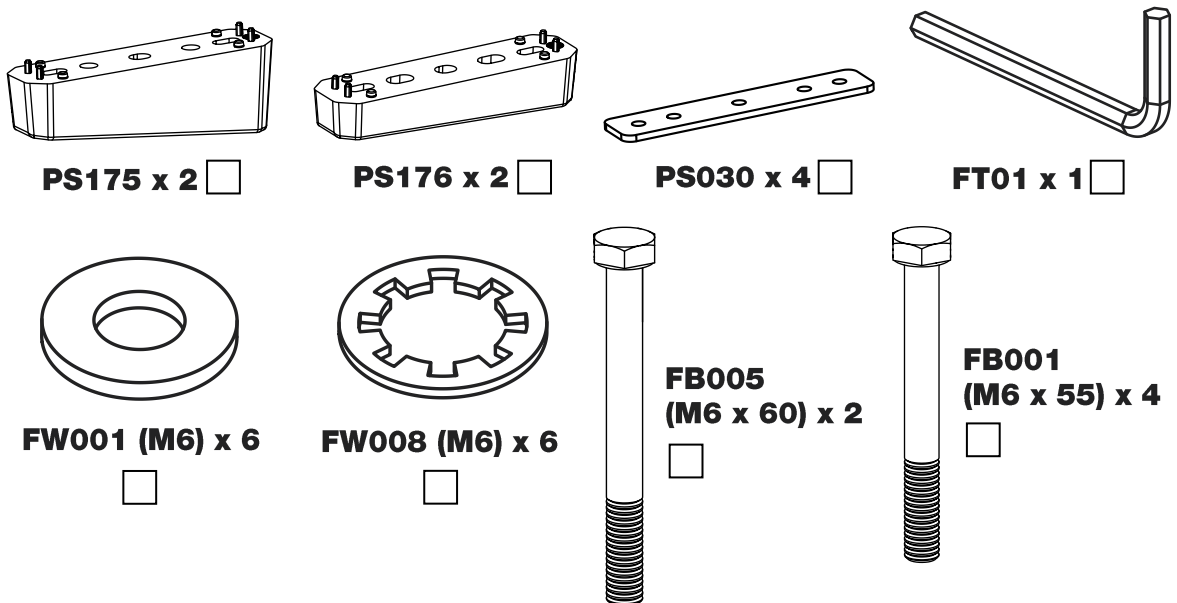


1.




2.





3.



SA397
PS176

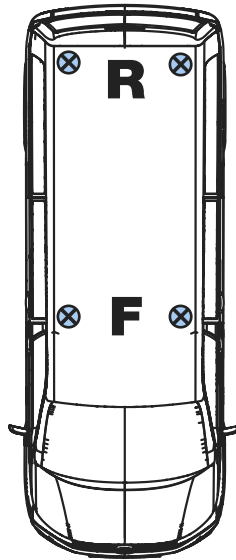


SA398
PS176




SA397
PS175


SA398
PS175




4.

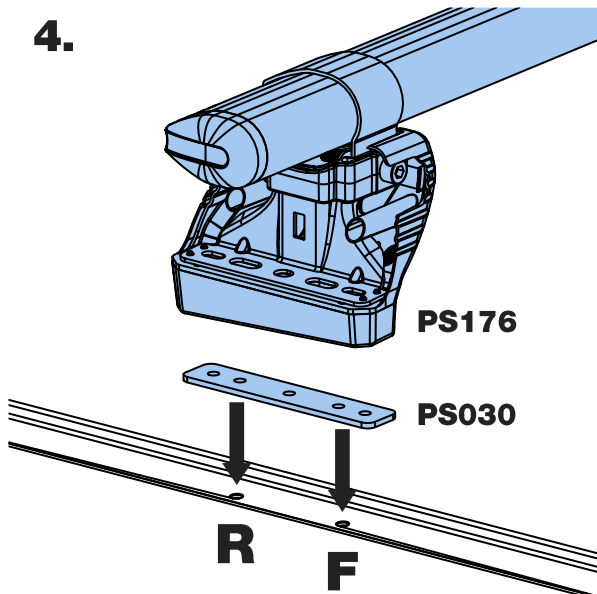


5.

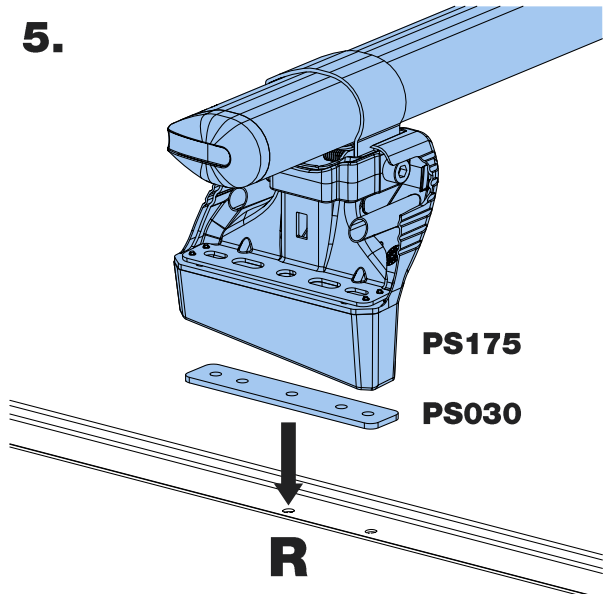


6.

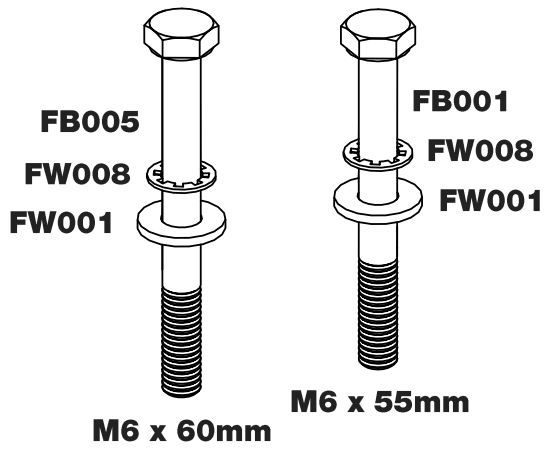


7.

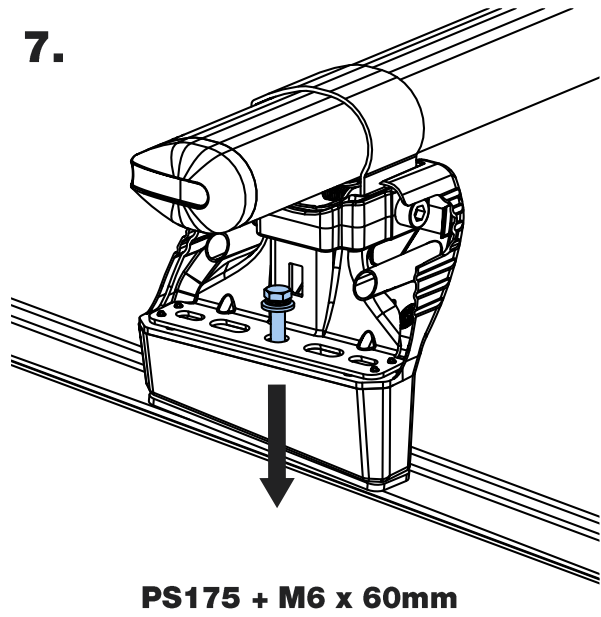


8.

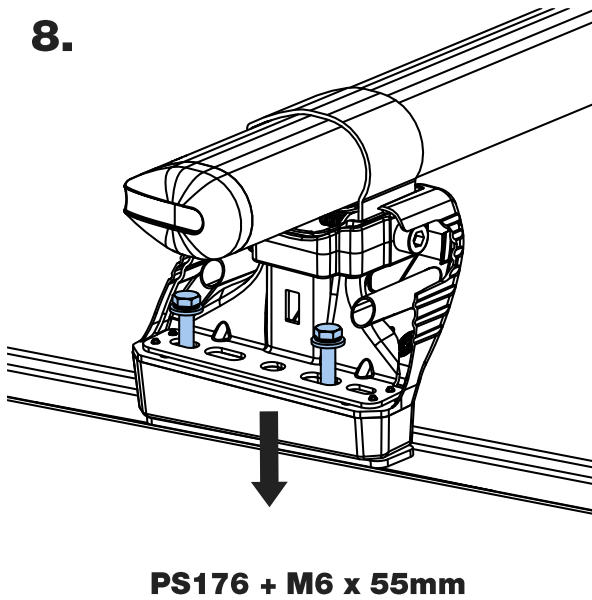


9.

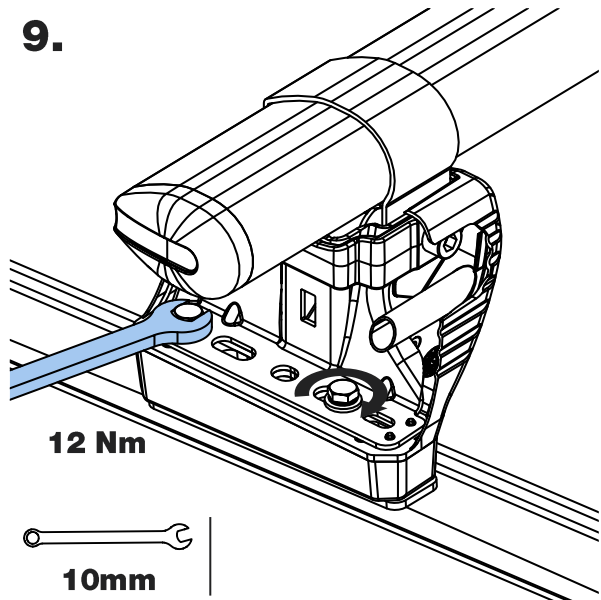


10.

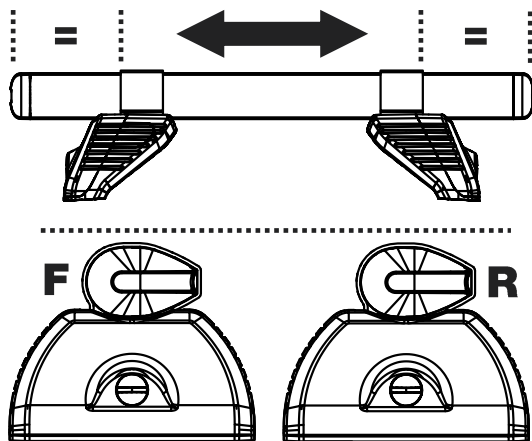

11.

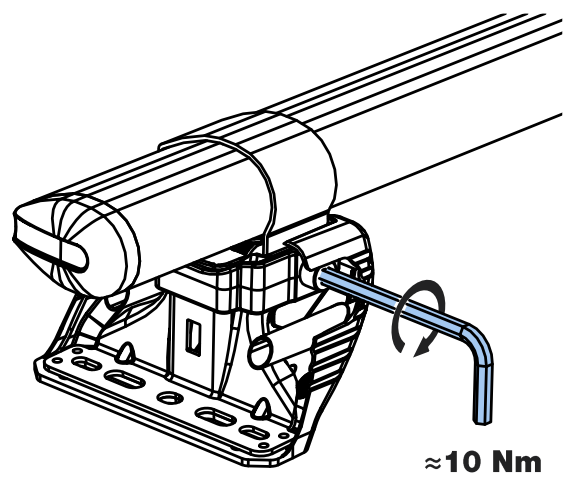

12.

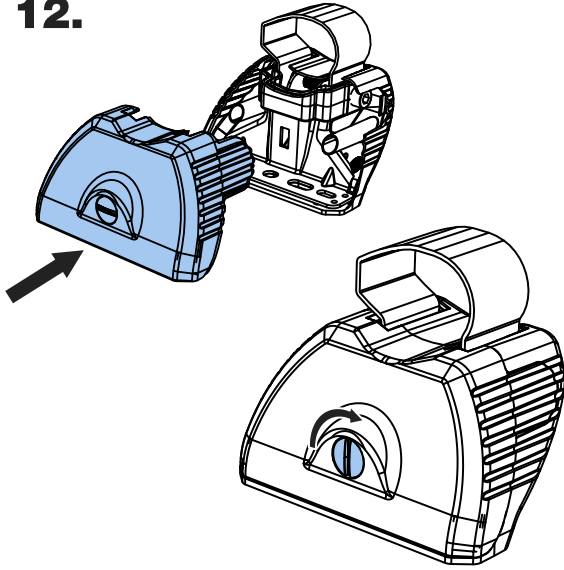

13.

