





(IT) Attenzione: Istruzioni di montaggio per barre in alluminio.  
 (GB) Attention: Mounting instructions for aluminium bar carriers.  
 (E) Atención: Instrucciones de montaje para barras portacargas de aluminio.  
 (D) Achtung: Montageanweisungen für Aluminium-Lastenträger.  
 (F) Attention: Notices de montage pour barres de portage en aluminium.  
 (NL) Attentie: Handleiding voor dakdragers gemaakt van aluminium.  
 (P) Atenção: Instruções de montagem para barras de tejadilho em alumínio.  
 (H) Szerelési utasítás alumínium tartórudakhoz.  
 (PL) Uwaga: Instrukcja montażu bagażnika w wykonanych ze aluminium.  
 (SLO) Pozor: Navodila za montažo silceva priključka aluminijastih.  
 (HR) Uputstvo za montažu aluminijskih nosača




1

## ALFA ROMEO: MITO

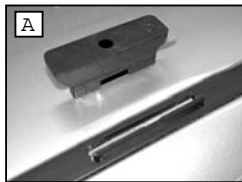

TROUVER SUR LE BATTANT DE LA PORTE OU  
 DANS LE MANUAL TECHNIQUE DE LA VOITURE

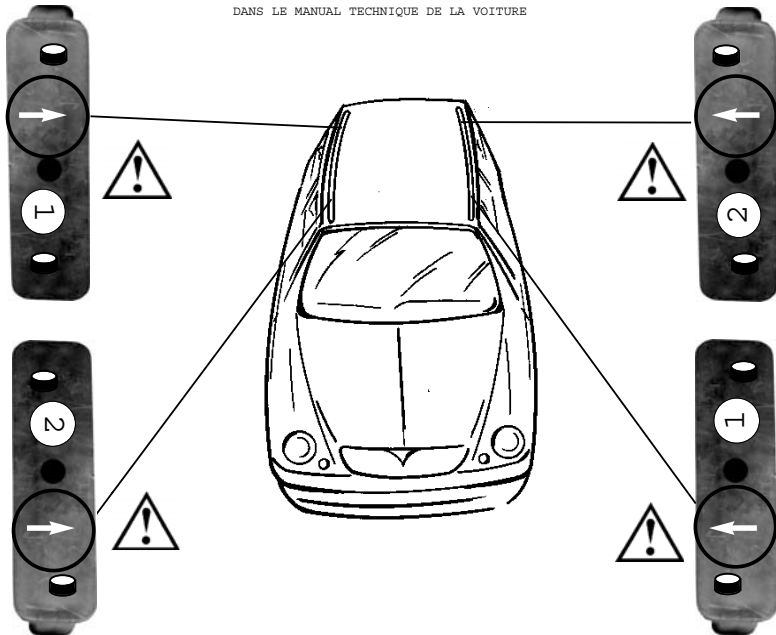

2



A

(IT) VITARE  
 (GB) UNSCREW  
 (E) AFLOJAR  
 (D) ABSCHRAUBEN  
 (F) DEVISSER  
 (NL) OPENSCHROEVEN  
 (P) DESAPARAFUSAR  
 (H) KICSAVARNI  
 (PL) WYKRĘCIĆ  
 (SLO) ODVITI  
 (HR) ODVITI



B



C

(IT) INSERIRE (P) INSERIR  
 (GB) INSERT (H) TOLJA FEL  
 (E) CUBRIR (PL) NALOZIC  
 (D) STOPFEN (SLO) VSTAVITI  
 (F) ENFILER (HR) PREKRITI  
 (NL) BEVESTIG



D

(IT) VITARE (P) APERTAR  
 (GB) TO SCREW (H) MEGH ZNI  
 (E) APRETAR (PL) WKRECIĆ  
 (D) FESTSCHRAUBEN (SLO) PRIVITI  
 (F) VISSEUR (HR) PRI-VISTI  
 (NL) VASTSCHROEVEN TI

3




(IT) INSERIRE  
 (GB) INSERT  
 (E) CUBRIR  
 (D) STOPFEN  
 (F) ENFILER  
 (NL) BEVESTIG  
 (P) INSERIR  
 (H) TOLJA FEL  
 (PL) NALOZIC  
 (SLO) VSTAVITI  
 (HR) PREKRITI




ZOOM

4

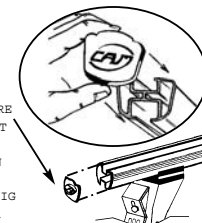

A

(IT) INSERIRE  
 (GB) INSERT  
 (E) CUBRIR  
 (D) STOPFEN  
 (F) ENFILER  
 (NL) BEVESTIG  
 (P) INSERIR  
 (H) TOLJA FEL  
 (PL) NALOZIC  
 (SLO) VSTAVITI  
 (HR) PREKRITI

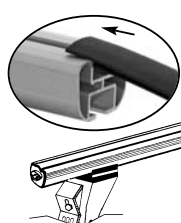


B

(IT) INSERIRE (P) INSERIR  
 (GB) INSERT (H) TOLJA FEL  
 (E) CUBRIR (PL) NALOZIC  
 (D) STOPFEN (SLO) VSTAVITI  
 (F) ENFILER (HR) PREKRITI  
 (NL) BEVESTIG


5

A

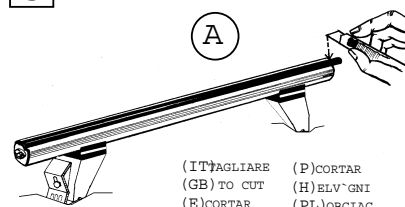


(IT) TAGLIARE (P) CORTAR  
 (GB) TO CUT (H) ELVÁGNI  
 (E) CORTAR (PL) OBCIĄC  
 (D) SCHNEIDEN (SLO) ODREZATI  
 (F) COUPER (HR) ODREZATI  
 (NL) SNIJDEN

B

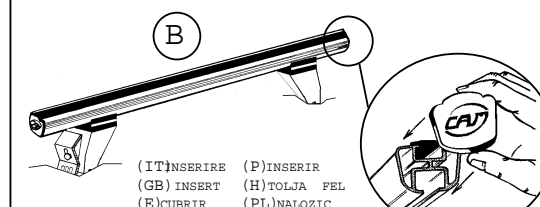


(IT) INSERIRE (P) INSERIR  
 (GB) INSERT (H) TOLJA FEL  
 (E) CUBRIR (PL) NALOZIC  
 (D) STOPFEN (SLO) VSTAVITI  
 (F) ENFILER (HR) PREKRITI  
 (NL) BEVESTIG


6

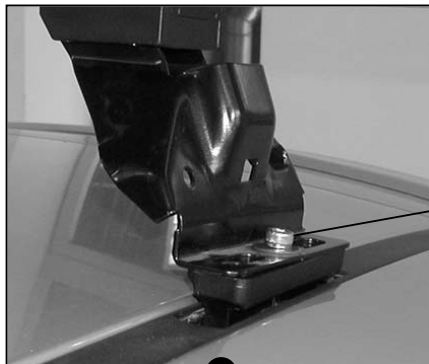

(IT)MODELLI CON PREDISPOSIZIONE DELLA CASA AUTO  
(GB) CARS WITH PRE-EXISTING FIXING POINT FROM MANUFACTURER  
(E)MODELOS CON PREDISPOSICION DEL FABRICANTE  
(D)AUTOS MIT VOM HERSTELLER VORGESEHENE BEFESTIGUNGSPUNKTE  
(F)VOITURES AVEC POINTS DE R P'RE PREVUS PAR LE CONSTRUCTEUR  
(NL) AUTO S MET DOOR DE FABRIKANT VOORZIENE MONTAGEPUNTEN  
(P)VIATURAS COM PONTOS DE FIXA 'O DO CONSTRUTOR PR -EXISTENTES  
(H)FELHÉLYEZ S GY'RT 'LTAL KIJEL LT PONTRA  
(PL)SAMOCHODY Z PRZEWIDZIANYMI PUNKTAMI UMOCOWANIA  
(SLO)MODELI Z PREDVIDENIM LE'I>EM S STRANI PROIZVAJALCA  
(HR)TVORNI>KI PRIPREMLJENI MODELI

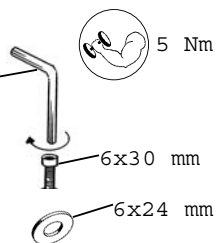


(IT)AVVITARE  
(GB) TO SCREW  
(E)APRETAR  
(D)FESTSCHRAUBEN  
(F)VISSE  
(NL)VASTSCHROEVEN  
(P)APERTAR  
(H)MEGH ZNI  
(PL)WKRECIĆ  
(SLO)PRIVITI  
(HR)PRIVRSTITI

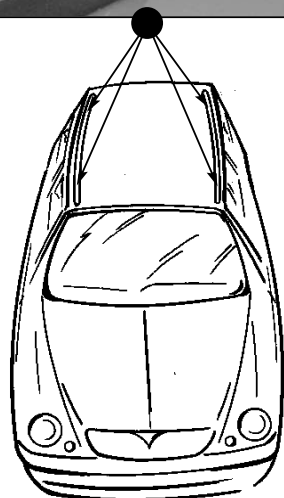

7

(IT)VENTRARE IL P. TUTTO SUL TETTO  
(GB)CENTRE THE UNIVERSAL BAR CARRIER ON THE ROOF  
(E)CENTRAR EL PORTAEQUIPAJES SOBRE EL TECHO  
(D)LASTENTR'GER AUF DEM DACH ZENTRIEREN  
(F)CENTRER LE PORTE-TOUT SUR LE TOIT  
(NL)PLAATS DE UNIVERSELE DRAGER IN HET MIDDEN VAN HET DAK  
(P)CENTRAR AS BARRAS PORTA BAGAGENS NO TEJADILHO  
(H)HELYEZZE K Z PRE A RUDAKAT  
(PL)WYSRODKOWAC BAGAŻNIK NA DACHU  
(SLO)CENTRIRATI PRILJA'NIK NA STREHO  
(HR)CENTRIRATI NOSA>E NA KROV

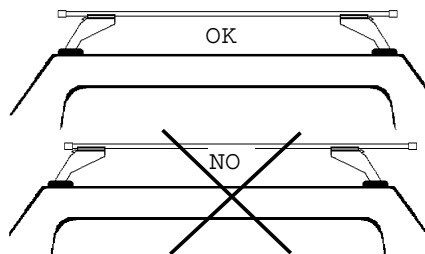

8




(IT)AVVITARE (A FONDO)  
(GB) TO SCREW (DOWN)  
(E)APRETAR (A FONDO)  
(D)FESTSCHRAUBEN  
(F)VISSE (FOND)  
(NL)VASTSCHROEVEN  
(P)APERTAR POR BAIXO  
(H)MEGH ZNI  
(PL)WKRECIĆ DO KONCA  
(SLO)PRIVITI (DO KONCA)  
(HR)PRIVRSTITI (DO



10 Nm

9

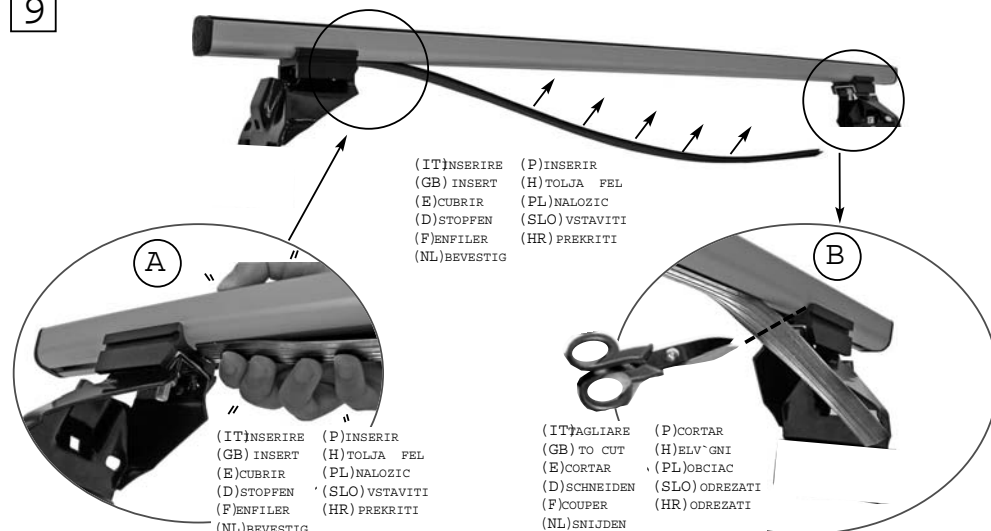

(IT)INSERIRE  
(GB) INSERT  
(E)CUBRIR  
(D)STOPFEN  
(F)ENFILER  
(NL)BEVESTIG


(IT)INSERIRE  
(GB) INSERT  
(E)CUBRIR  
(D)STOPFEN  
(F)ENFILER  
(NL)BEVESTIG

(P)INSERIR  
(H)TOLJA FEL  
(PL)NALOZIC  
(SLO)VSTAVITI  
(HR)PREKRITI

(IT)TAGLIARE  
(GB) TO CUT  
(E)CORTAR  
(D)SCHNEIDEN  
(F)COUPER  
(NL)SNIJDEN

(P)CORTAR  
(H)ELV'GNI  
(PL)OBCTIAC  
(SLO)ODREZATI  
(HR)ODREZATI

10

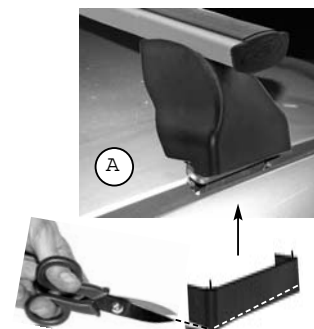

(IT)INSERIRE  
(GB) INSERT  
(E)CUBRIR  
(D)STOPFEN  
(F)ENFILER  
(P)INSERIR  
(NL)BEVESTIG  
(H)TOLJA FEL  
(PL)NALOZIC  
(SLO)VSTAVITI  
(HR)PREKRITI



S.R. Via Canova N 53 CAP. 20020 Lainate (MI) Italy